 
 


Ref No	Part No	Description
1	11401-07811	Gasket Set
2	11141-29F01	• . Gasket, Cylinder Head
3	11173-29F00	• . Gasket, Cylinder Head Cover
4	11241-29F11	• . Gasket, Cylinder
5	11482-07G00	• . Gasket, Clutch Cover
6	11483-07G00	• . Gasket, Magneto Cover
7	12837-24A10	• . Gasket, Tensioner Adjuster
8	14181-29E02	• . Gasket, Exhaust Pipe
9	14771-07G00	• . Connector, Muffler Joint
10	17435-29F00	• . O Ring, Water Pump Case
11	09168-10002	• . Gasket (10x14x3.6)
12	09168-12002	• . Gasket (12.1x16.2x3.7)
13	09280-11005	• . O Ring (d:2.4,id:11.0)
14	09280-13004	• . O Ring (d:1.9,id:13.0)
15	09280-22001	• . O Ring (d:2.4,id:21.8)
16	09280-33004	• . O Ring (d:3.1,id:32.7)
17	09280-54001	• . O Ring (d:2.4,id:52.6)
18	09280-71004	• . O Ring (d:2.6,id:69.6)

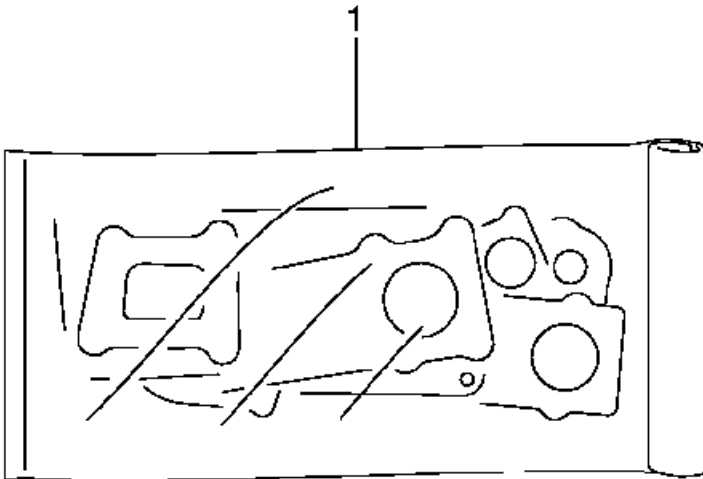


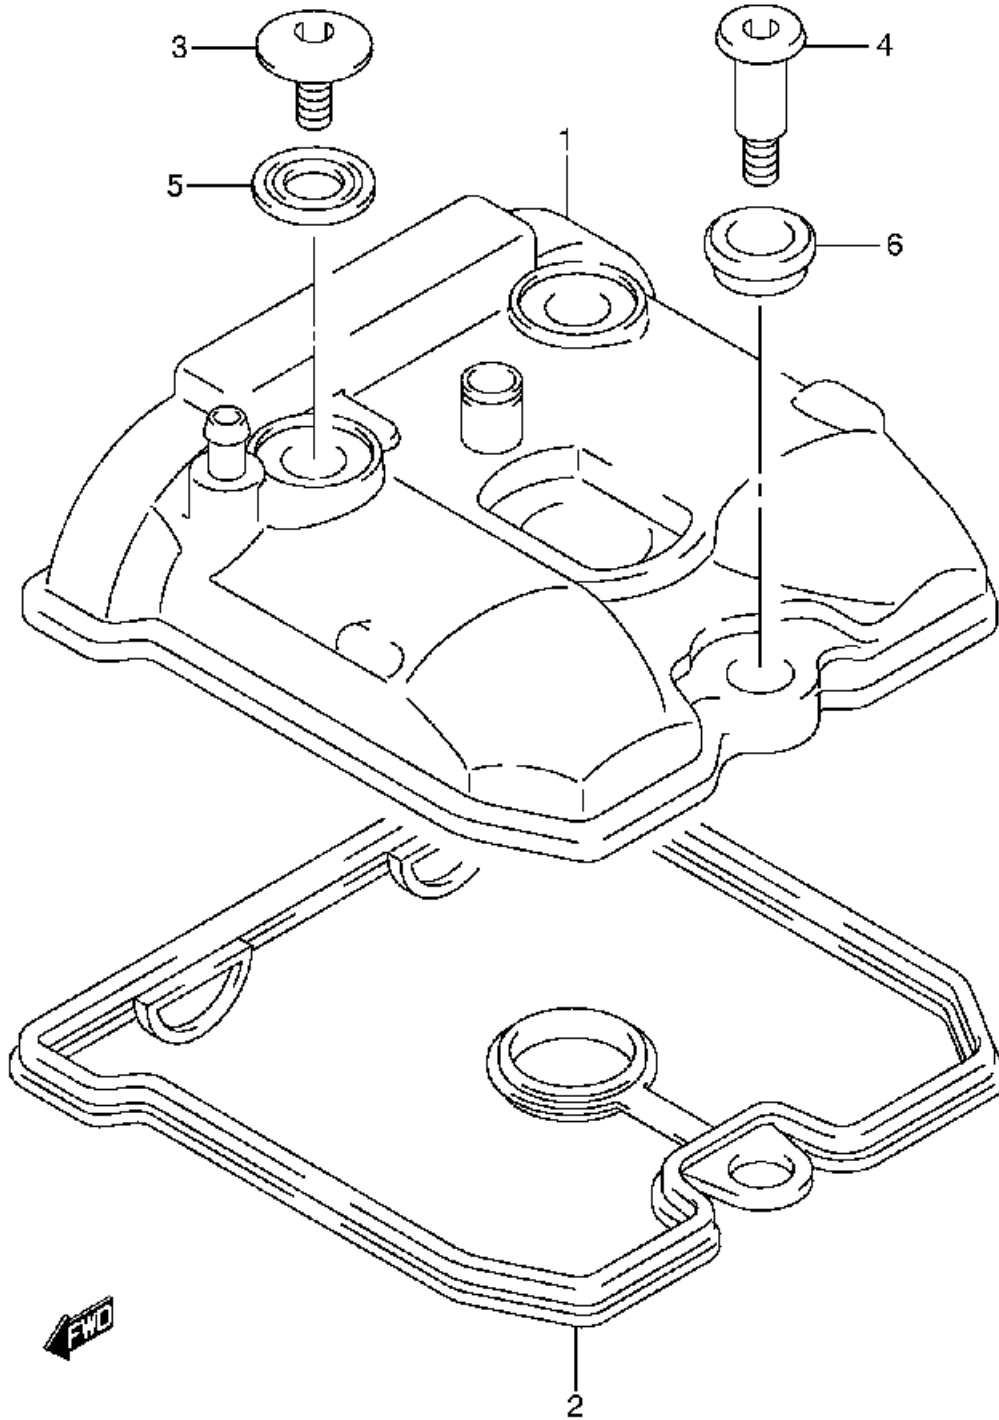


Ref No	Part No	Description
1	11170-07G00	Cover, Cylinder Head
2	11173-29F00	Gasket
3	09106-07009	Bolt (7x17.5)
4	09106-07010	Bolt (7x31)
5	09161-11008	Washer
6	11192-13E00	Cushion




 
2

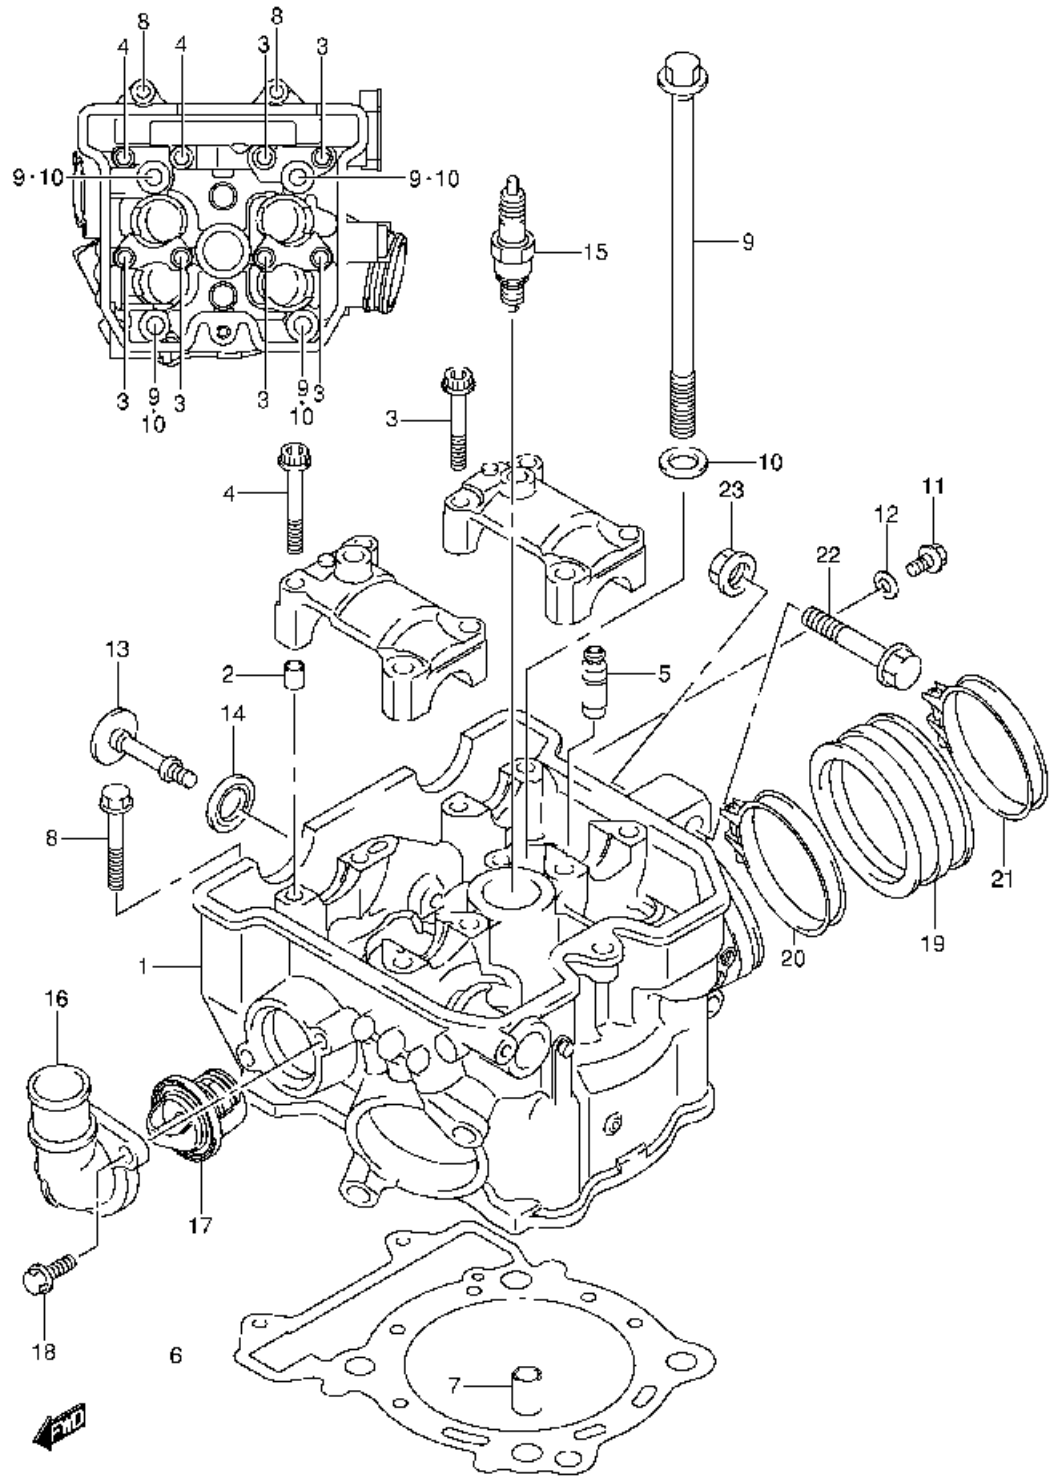

Ref No	Part No	Description
1	11100-07G00	Head Assy, Cylinder
2	09206-08001	. Pin
3	07120-06403	. Bolt
4	07120-06453	. Bolt
5	11115-20E70	Guide, Valve (os.0.3)
6	11141-29F01	Gasket, Cylinder Head
7	04211-13189	Pin (l:18)
8	09103-06504	Bolt (6x39)
9	09103-10276	Bolt (10x175)
10	09160-10082	Washer (10.5x19x2)
11	01550-06103	Plug, Oil Gallery
12	09168-06023	Gasket
13	11161-33E00	Bolt, Cylinder Head Side Face
14	11191-13E00	Washer, Side Face Bolt
15	09482-00516	Spark Plug (ngk,cr7e)
15	09482-00515	Spark Plug (denso,u22esr-n)
15	09482-00528	Spark Plug (ngk,cr6e)
15	09482-00456	Spark Plug (ngk,cr8e)
15	09482-00458	Spark Plug (ngk,cr9e)
15	09482-00529	Spark Plug (denso,u20esr-n)
15	09482-00457	Spark Plug (denso,u24esr-n)
15	09482-00459	Spark Plug (denso,u27esr-n)
16	17661-29F00	Cover, Thermostat
17	17670-33400	Thermostat, Washer
18	01547-06163	Bolt
19	13111-07G00	Pipe, Intake
20	09402-58208	Clamp, Head
21	09402-52208	Clamp, Carb
22	09103-10218	Bolt (10x45)
23	09159-10058	Nut

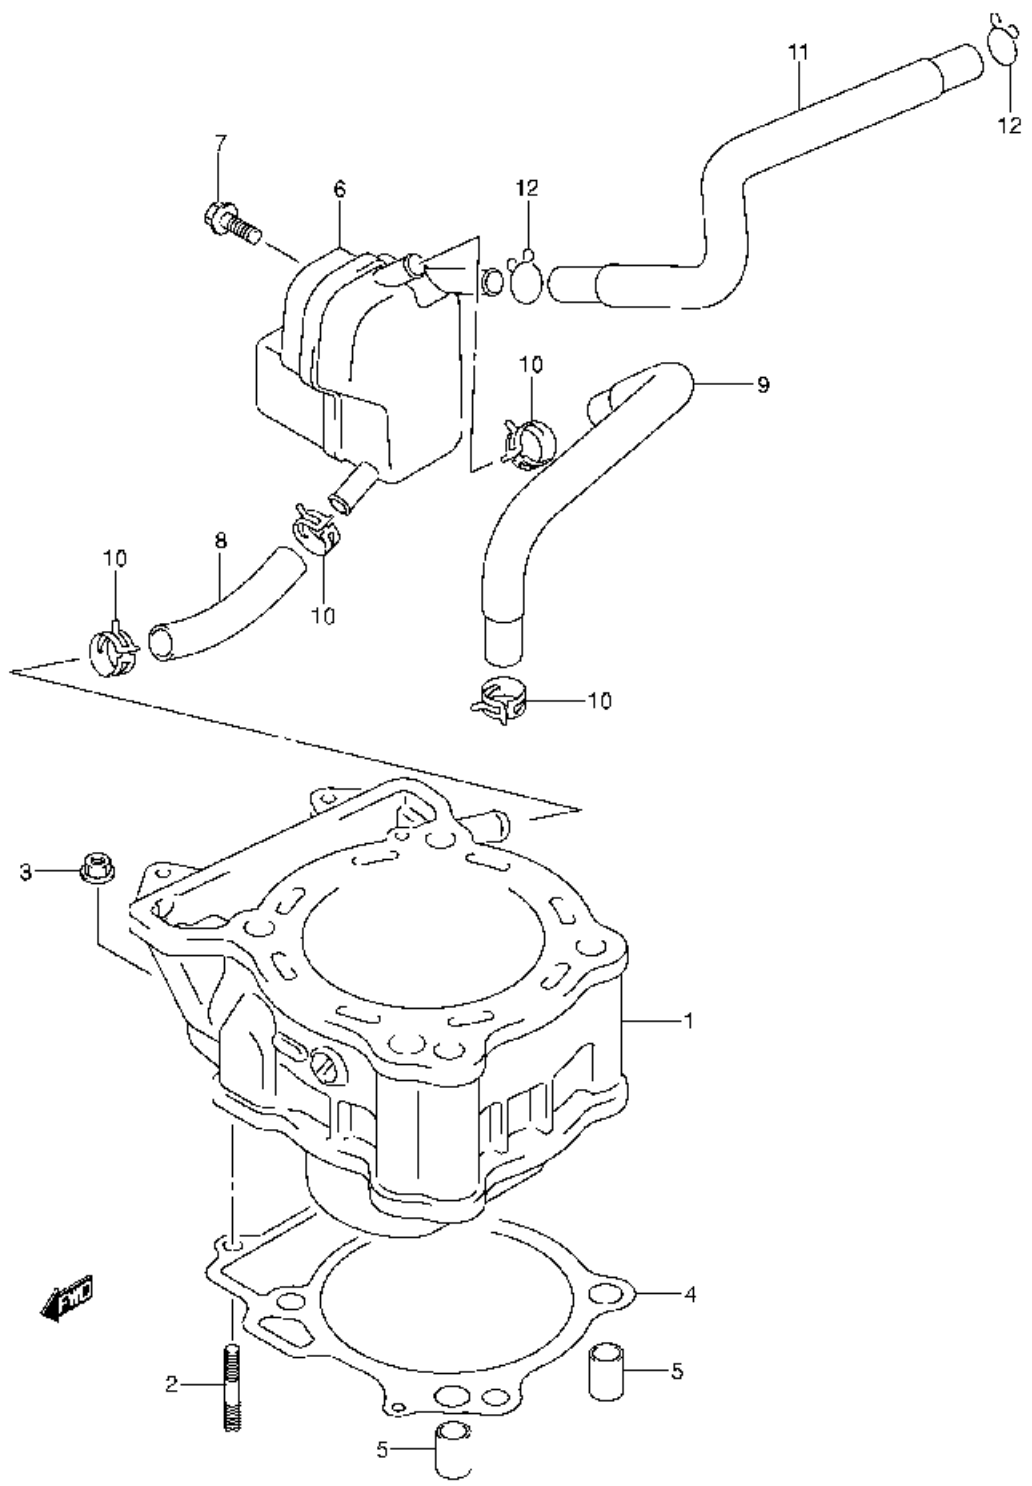 


Ref No	Part No	Description
1	11210-29F20-0F0	Cylinder
2	01421-06253	Stud Bolt
3	08316-10063	Nut
4	11241-29F11	Gasket, Cylinder
5	04211-13189	Pin
6	11330-07G00	Tank, Oil Return
7	01547-06103	Bolt
8	11332-07G00	Hose, Breather
9	11333-07G00	Hose, Breather
10	09401-15404	Clip
11	11334-07G00	Hose, Breather
12	09401-15101	Clip

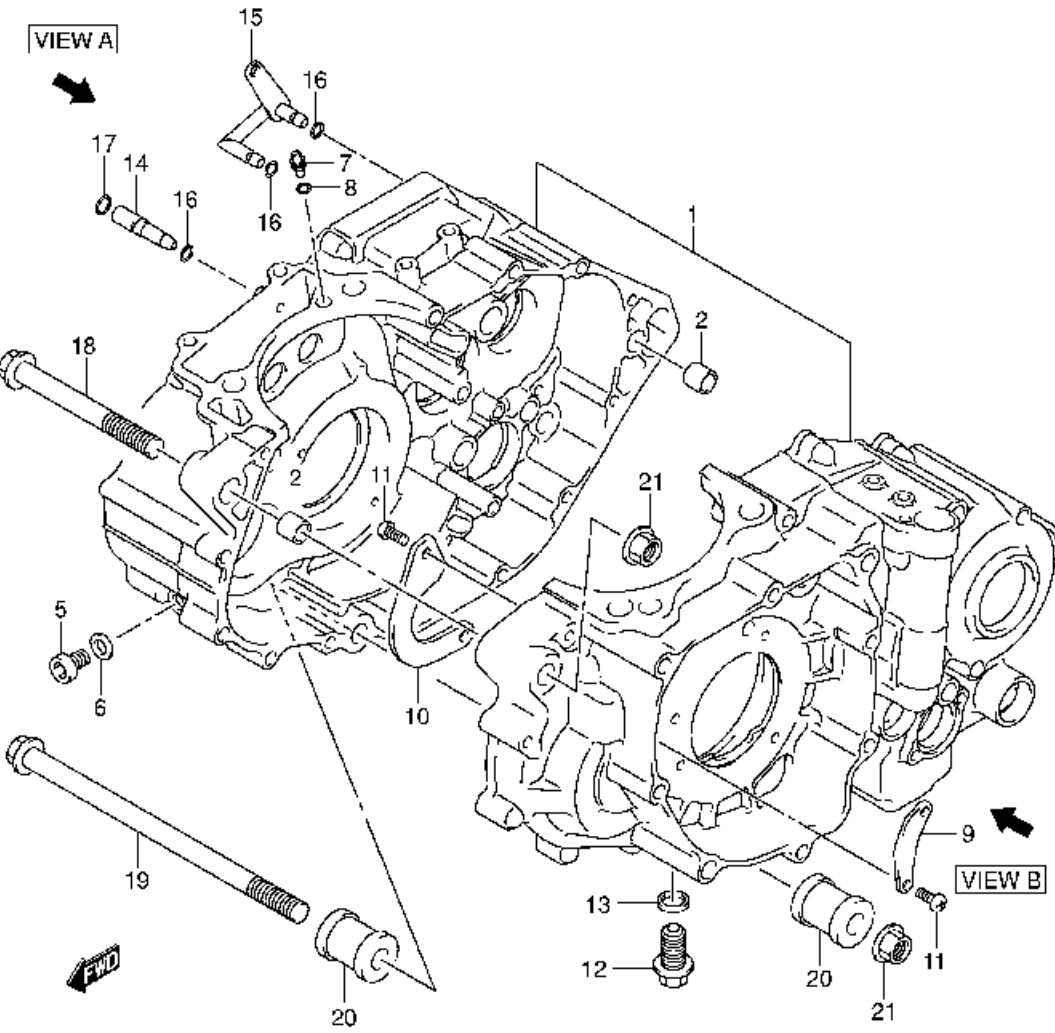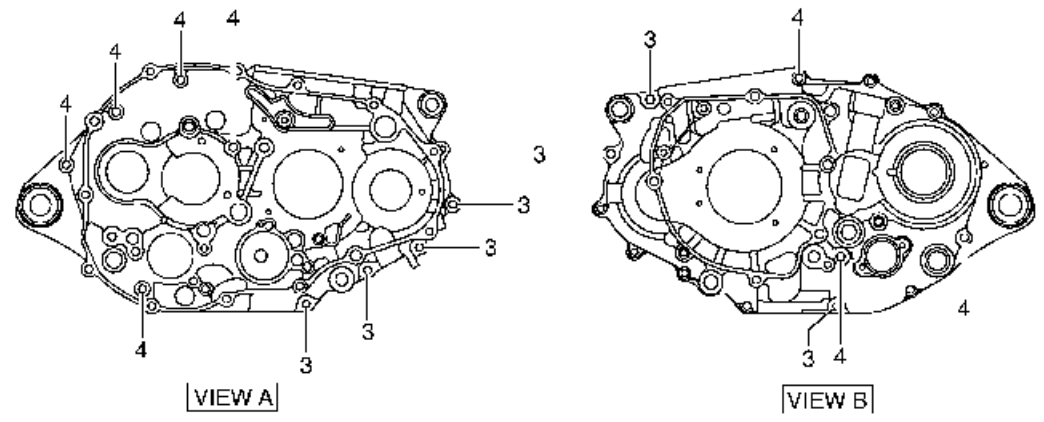  


Ref No	Part No	Description
1	11301-07810	Crankcase Set
2	04211-13189	. Pin
3	01547-06403	. Bolt
4	01547-06703	. Bolt
5	09248-10010	. Plug, Oil Gallery
6	09168-10002	. Gasket
7	09493-28010	. Jet, Oil Gallery Cylinder
8	09280-04004	. O Ring
9	11323-29F00	. Separator, Oil No.1
10	11324-29F00	. Separator, Oil No.2
11	09125-06086	. Screw, Separator
12	09247-12011	Plug, Oil Drain
13	09168-12002	Gasket
14	11451-29F00	Pipe, Oil Inner No.1
15	11460-07G00	Pipe, T/m Oil Inner No.2
16	09280-05004	O Ring (d:1.9,id:4.8)
17	09280-07004	O Ring (d:1.9,id:6.8)
18	09103-10110	Bolt (10x100)
19	09103-10136	Bolt (10x180)
20	11611-09F51	Spacer, Engine Mounting (l:30)
21	09159-10058	Nut

 
Ref No Part No Description

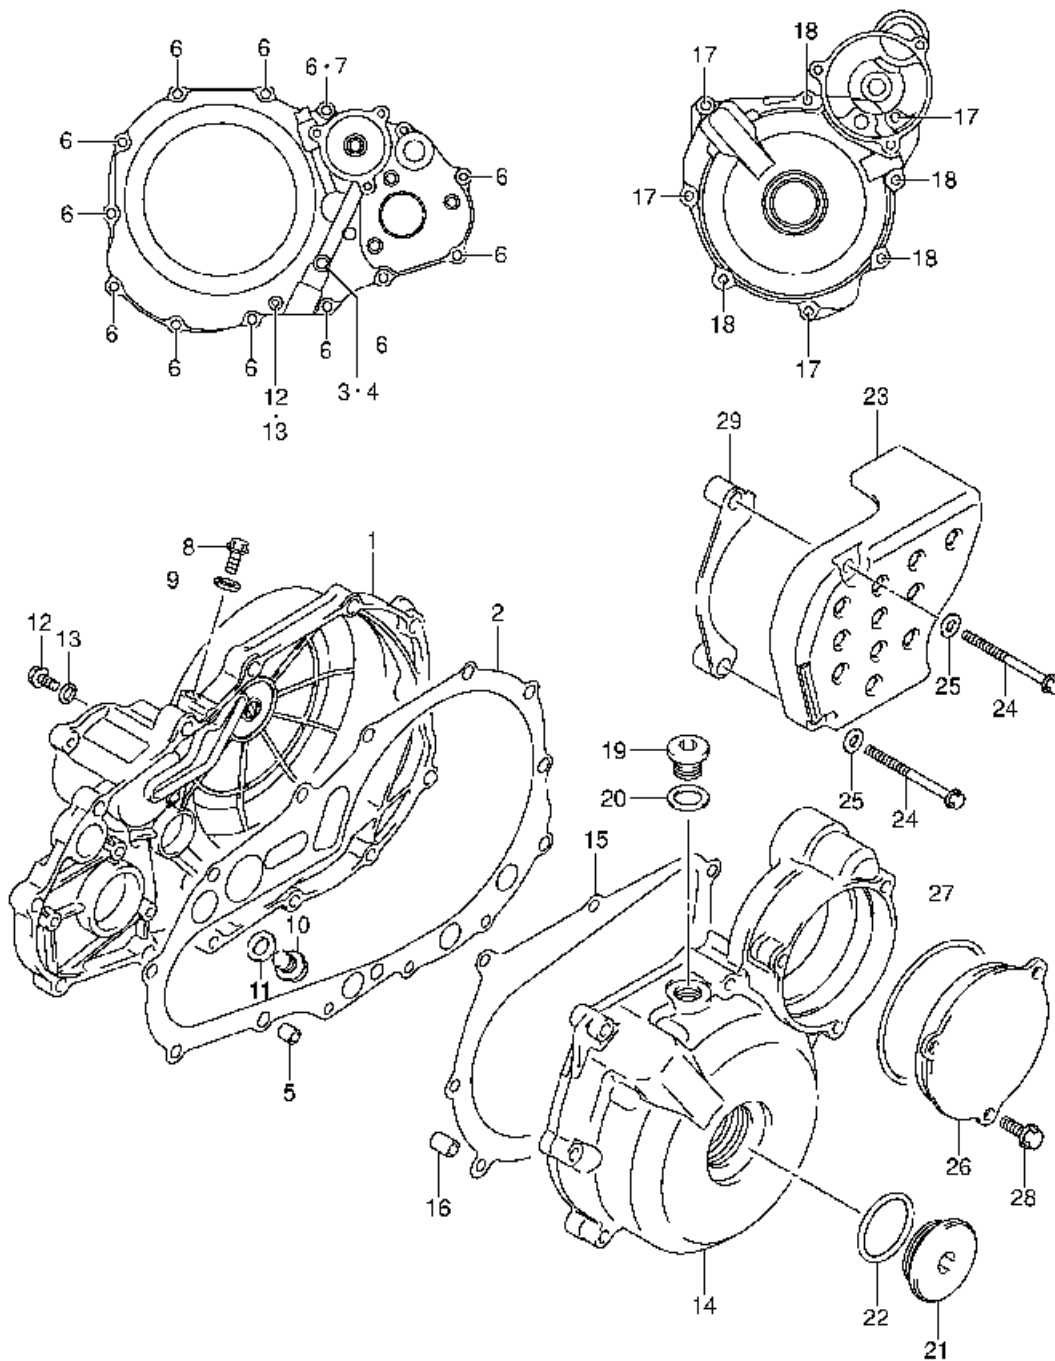


1	11341-07G00	Cover, Clutch
2	11482-07G00	Gasket, Clutch Cover
3	01550-08123	Plug, Oil Gallery
4	09168-08008	Gasket, Oil Gallery Plug
5	04211-09149	Pin
6	01547-06303	Bolt
7	09168-06023	Gasket
8	01547-06123	Plug, Oil Gallery
9	09168-06023	Gasket
10	09247-12006	Plug, Oil Gallery (12x10)
11	09168-12002	Gasket (12.1x16.2x1.2)
12	01550-06103	Bolt, Oil Level
13	09168-06004	Gasket (6.2x11x1.2)
14	11351-07G00	Cover, Magneto
15	11483-07G00	Gasket, Magneto Cover
16	04211-09149	Pin
17	01547-06303	Bolt
18	01547-06403	Bolt
19	09248-14011	Plug, T.d.c.
20	09168-14002	Gasket (13.8x18.8x0.4)
21	09259-36016-20H	Plug, Crank Hole
22	09280-33004	O Ring (d:3.1,id:32.7)
23	11360-07G00	Cover, Engine Sprocket
24	01547-06603	Bolt
25	09160-06126	Washer (6.5x14x2)
26	11352-29F50	Cover, Starter Idle Gear
27	09280-71004	O Ring (d:2.6,id:69.6)
28	01547-06163	Bolt
29	27640-07G00	Plate, Chain Guide

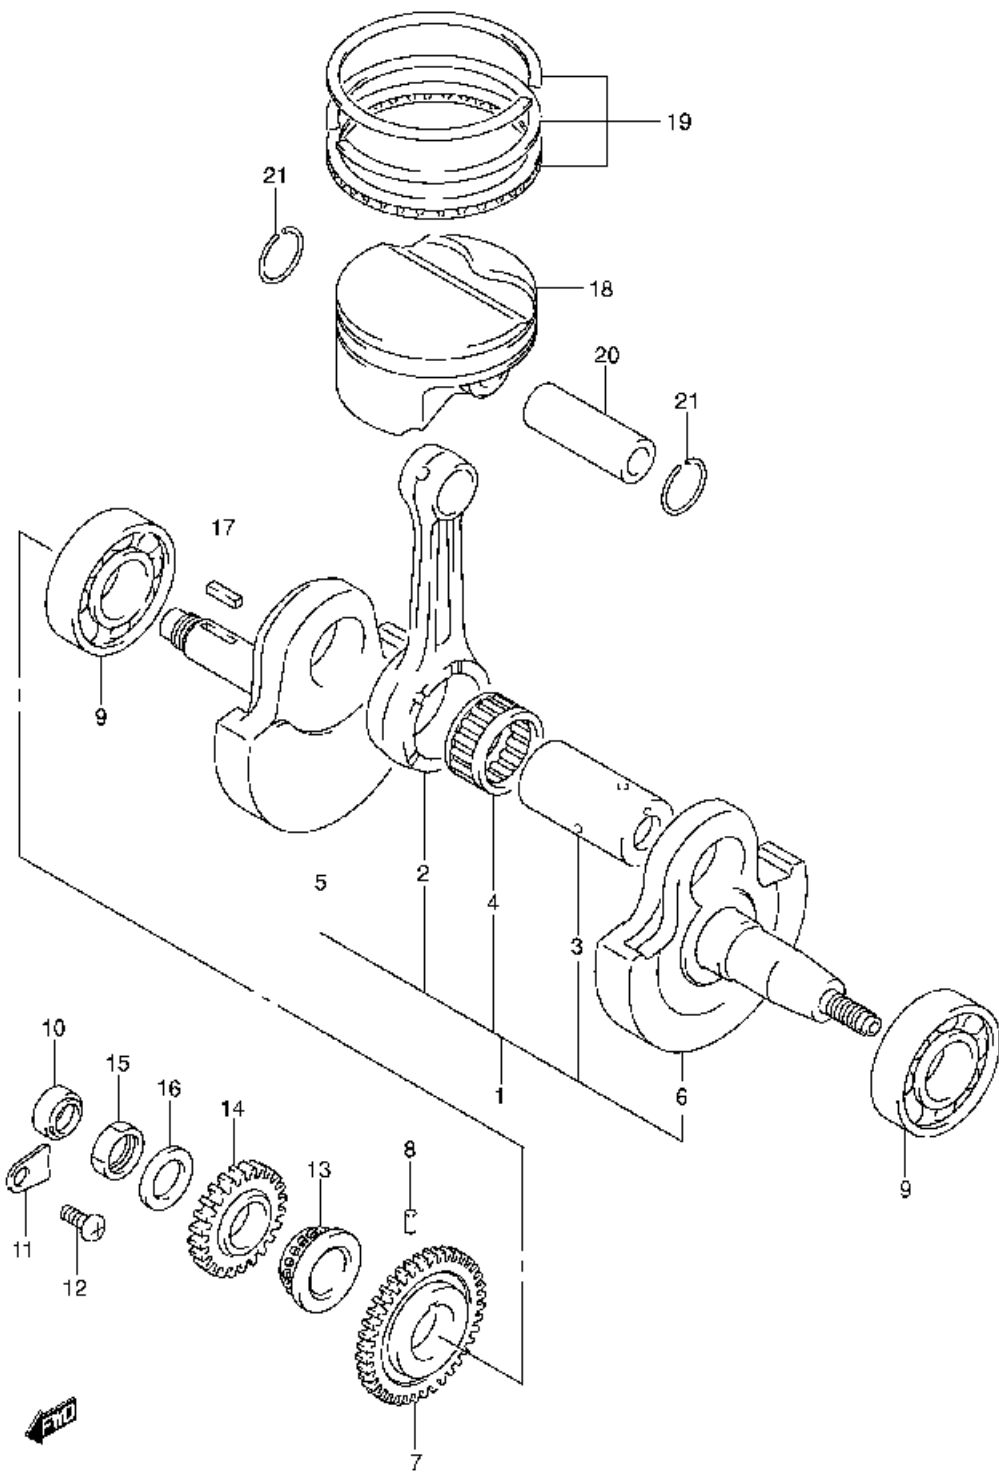 


Ref No	Part No	Description
1	12200-07G00	Crankshaft Assy
2	12160-29F01-0B0	• . Rod, Connecting
3	12210-29F10	• . Pin
4	09263-35035-0B0	• . Bearing
5	12221-07G00	• . Crankshaft, Rh
6	12261-07G00	• . Crankshaft, Lh
7	12661-29F00	Gear, Balancer Drive
8	09261-05005	Pin
9	09262-30100	Bearing
10	09282-14003	Oil Seal, Rh (14x24x6)
11	24742-18A00	Retainer, Oil Seal Rh
12	02112-06123	Screw
13	12731-29F00	Sprocket, Cam Chain Drive
14	21111-29F00	Gear, Primary Drive
15	09140-18012	Nut
16	09164-18008	Washer
17	09421-05002	Key, Gear
18	12111-29F00-0F0	Piston
19	12140-29F00	Ring Set, Piston
20	12151-24F10	Pin, Piston
21	09381-20004	Circlip

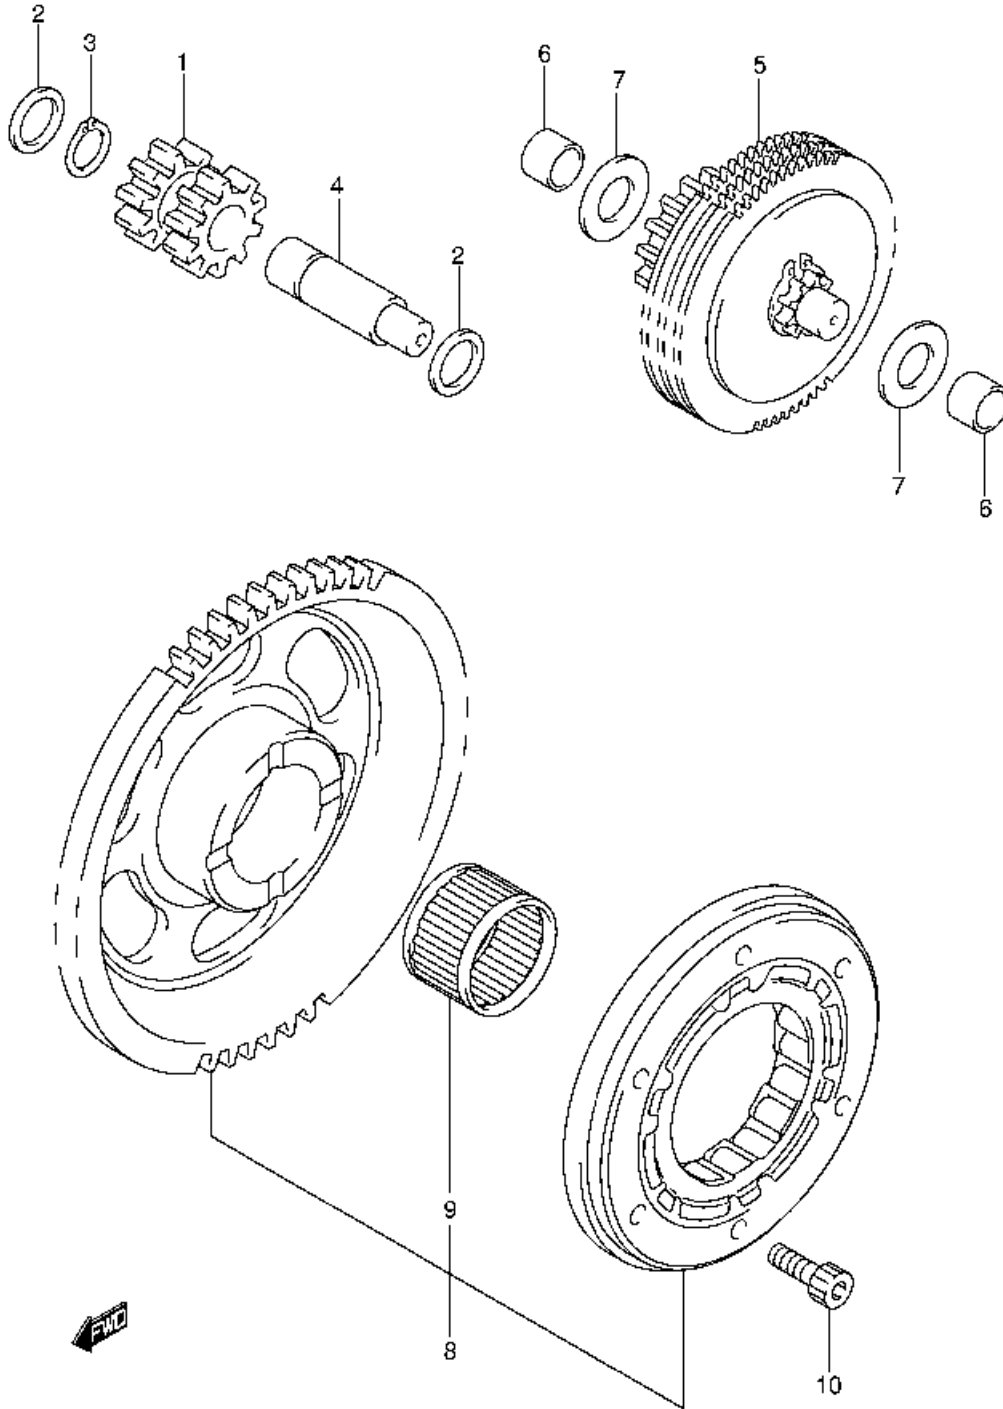 


Ref No	Part No	Description
1	12611-07G00	Gear, Starter Idle No.1
2	09181-12130	Washer
3	08331-31126	Circlip
4	12615-07G00	Pin
5	12600-29F00	Limiter Assy, Starter Idle Gear
6	12618-31D01	Bush
7	08211-10221	Washer
8	12600-29810	Clutch Set, Starter
9	09263-25049	• Bearing (25x31x19)
10	07130-06163	Bolt

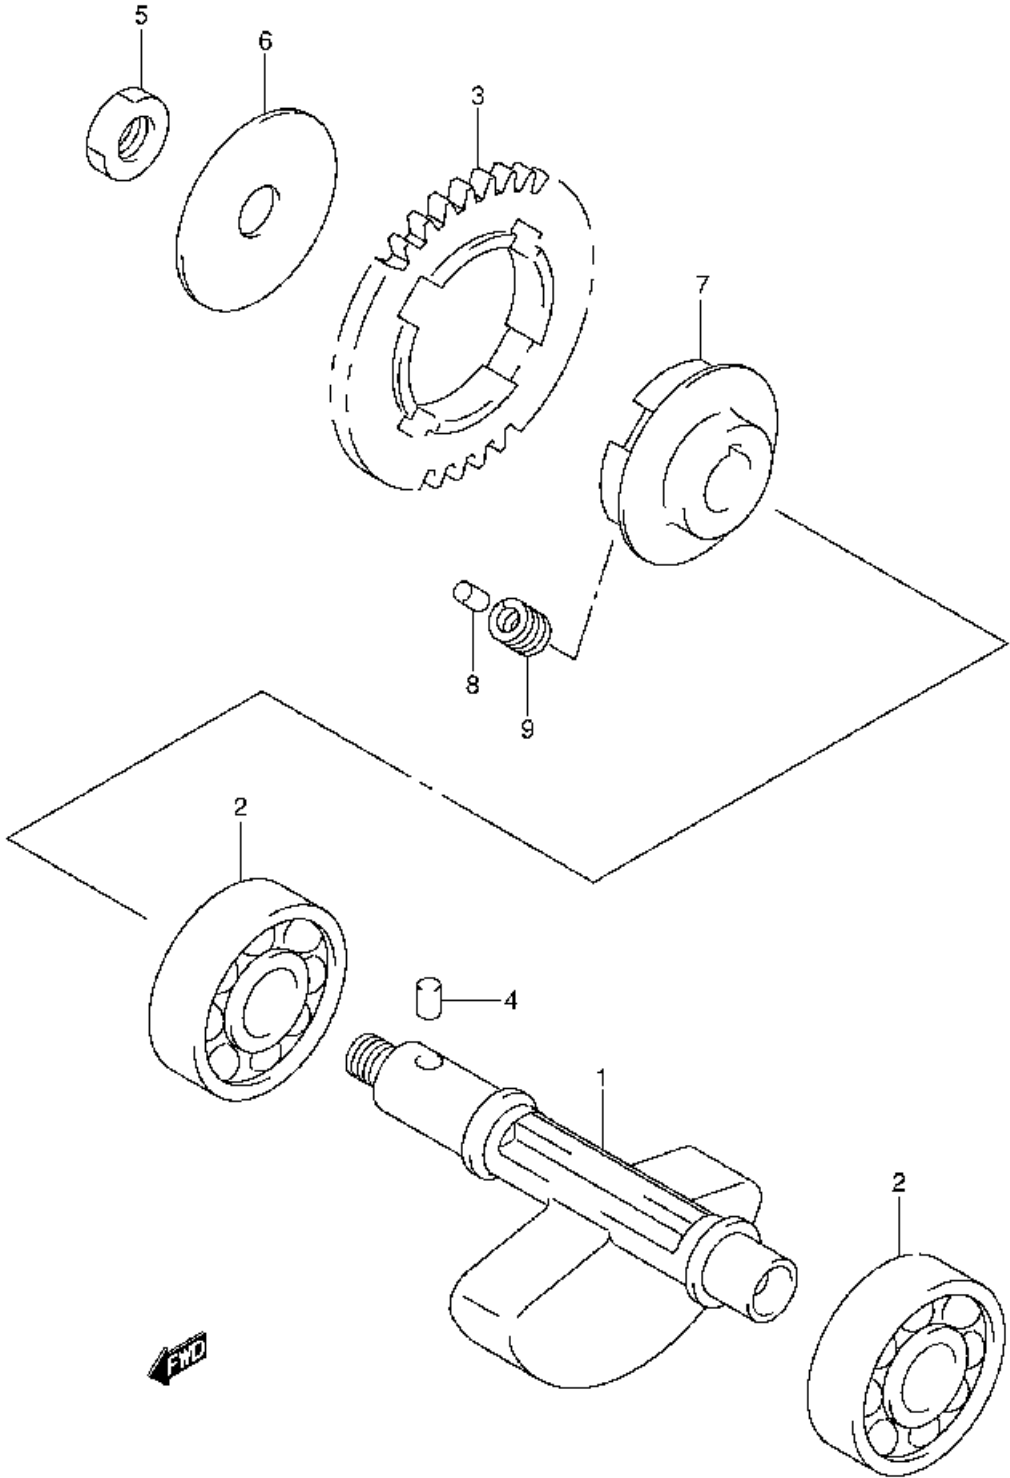 

Ref No	Part No	Description
1	12651-29F00	Balancer, Crank
2	09262-15030	Bearing
3	12666-29F10	Gear, Driven
4	09261-05005	Pin, Inner Race
5	09140-12038	Nut (m12)
6	09181-12009	Washer (12.2x47x1.6)
7	12669-29F00	Race, Driven Gear Inner
8	09202-04017	Pin, Driven Gear
9	09440-09031	Spring, Driven Gear

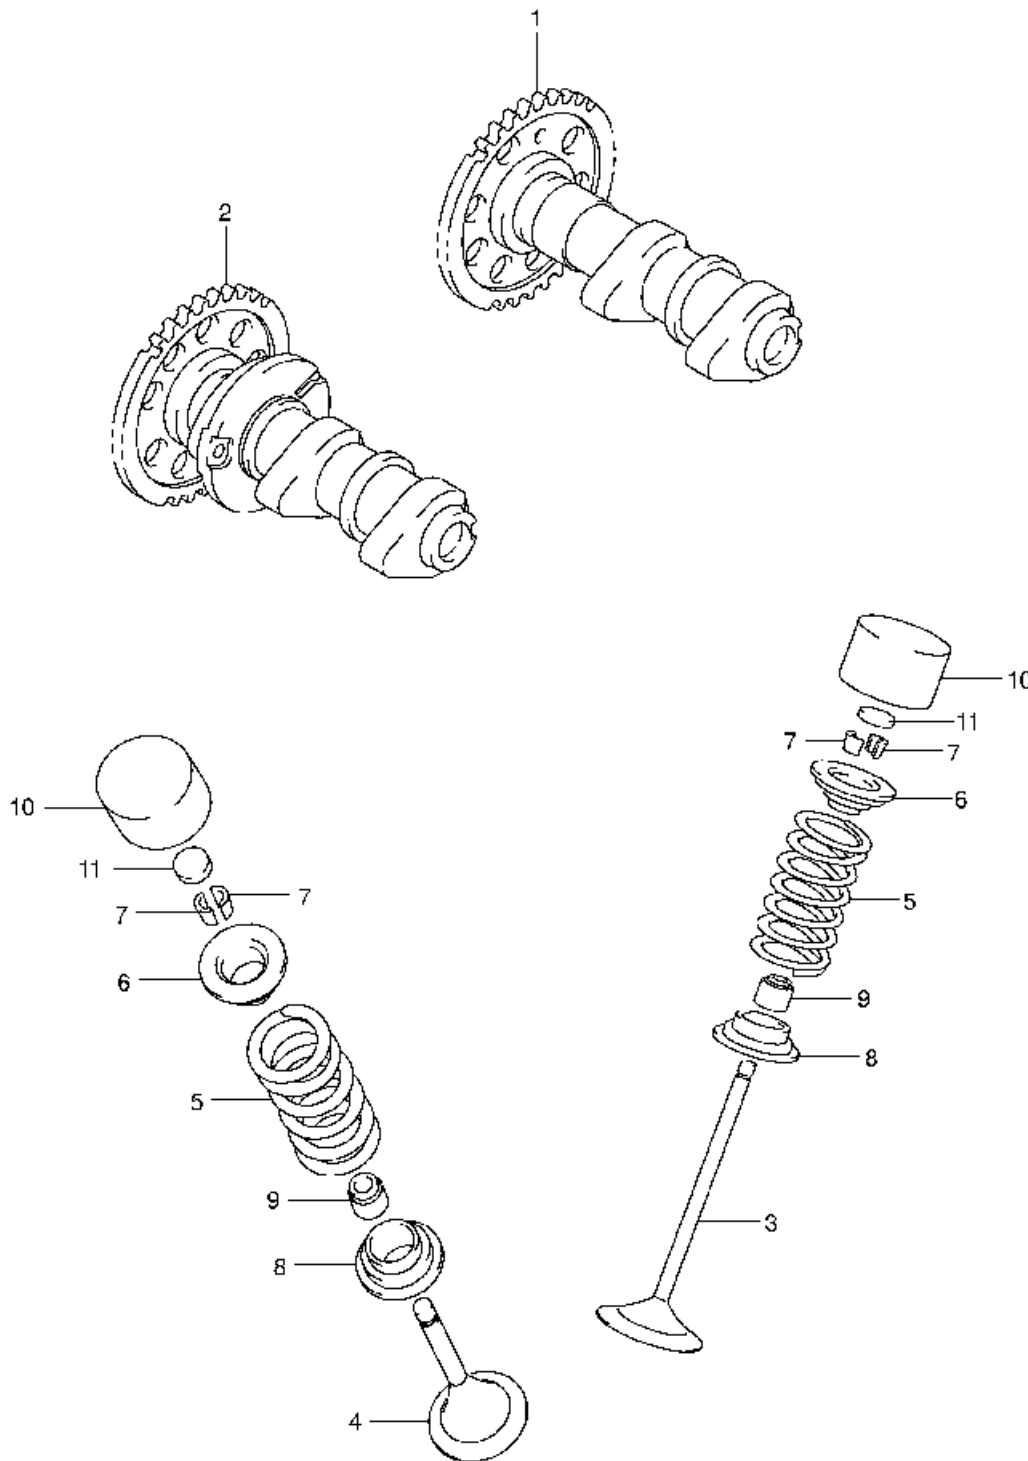 


Ref No	Part No	Description
1	12710-07G00	Cam Shaft, Intake
2	12720-07G00	Cam Shaft, Exhaust
3	12911-29F00	Valve, Intake
4	12912-29F00	Valve, Exhaust
5	12921-03G00	Spring, Valve
6	12931-02F10	Retainer, Spring
7	12932-24F00	Cotter, Valve
8	12933-38400	Seat, Spring
9	09289-05011	Oil Seal (5x10x8.7)
10	12891-02F00	Tappet
11	12892-41C00-230	Shim, Tappet (t:2.30)
11	12892-41C00-235	Shim, Tappet (t:2.35)
11	12892-41C00-240	Shim, Tappet (t:2.40)
11	12892-41C00-245	Shim, Tappet (t:2.45)
11	12892-41C00-250	Shim, Tappet (t:2.50)
11	12892-41C00-255	Shim, Tappet (t:2.55)
11	12892-41C00-260	Shim, Tappet (t:2.60)
11	12892-41C00-265	Shim, Tappet (t:2.65)
11	12892-41C00-270	Shim, Tappet (t:2.70)
11	12892-41C00-275	Shim, Tappet (t:2.75)
11	12892-41C00-280	Shim, Tappet (t:2.80)
11	12892-41C00-285	Shim, Tappet (t:2.85)
11	12892-41C00-290	Shim, Tappet (t:2.90)
11	12892-41C00-295	Shim, Tappet (t:2.95)
11	12892-41C00-300	Shim, Tappet (t:3.00)
11	12892-41C00-305	Shim, Tappet (t:3.05)
11	12892-41C00-310	Shim, Tappet (t:3.10)
11	12892-41C00-315	Shim, Tappet (t:3.15)
11	12892-41C00-320	Shim, Tappet (t:3.20)
11	12892-41C00-325	Shim, Tappet (t:3.25)
11	12892-41C00-330	Shim, Tappet (t:3.30)
11	12892-41C00-335	Shim, Tappet (t:3.35)
11	12892-41C00-340	Shim, Tappet (t:3.40)
11	12892-41C00-345	Shim, Tappet (t:3.45)
11	12892-41C00-350	Shim, Tappet (t:3.50)
12	12800-41810	Shim Set, Tappet Inc.ref.no.11-5~11-25 (5pcs.each) & No.13
13	99000-69471	• . Case, Tappet Shim

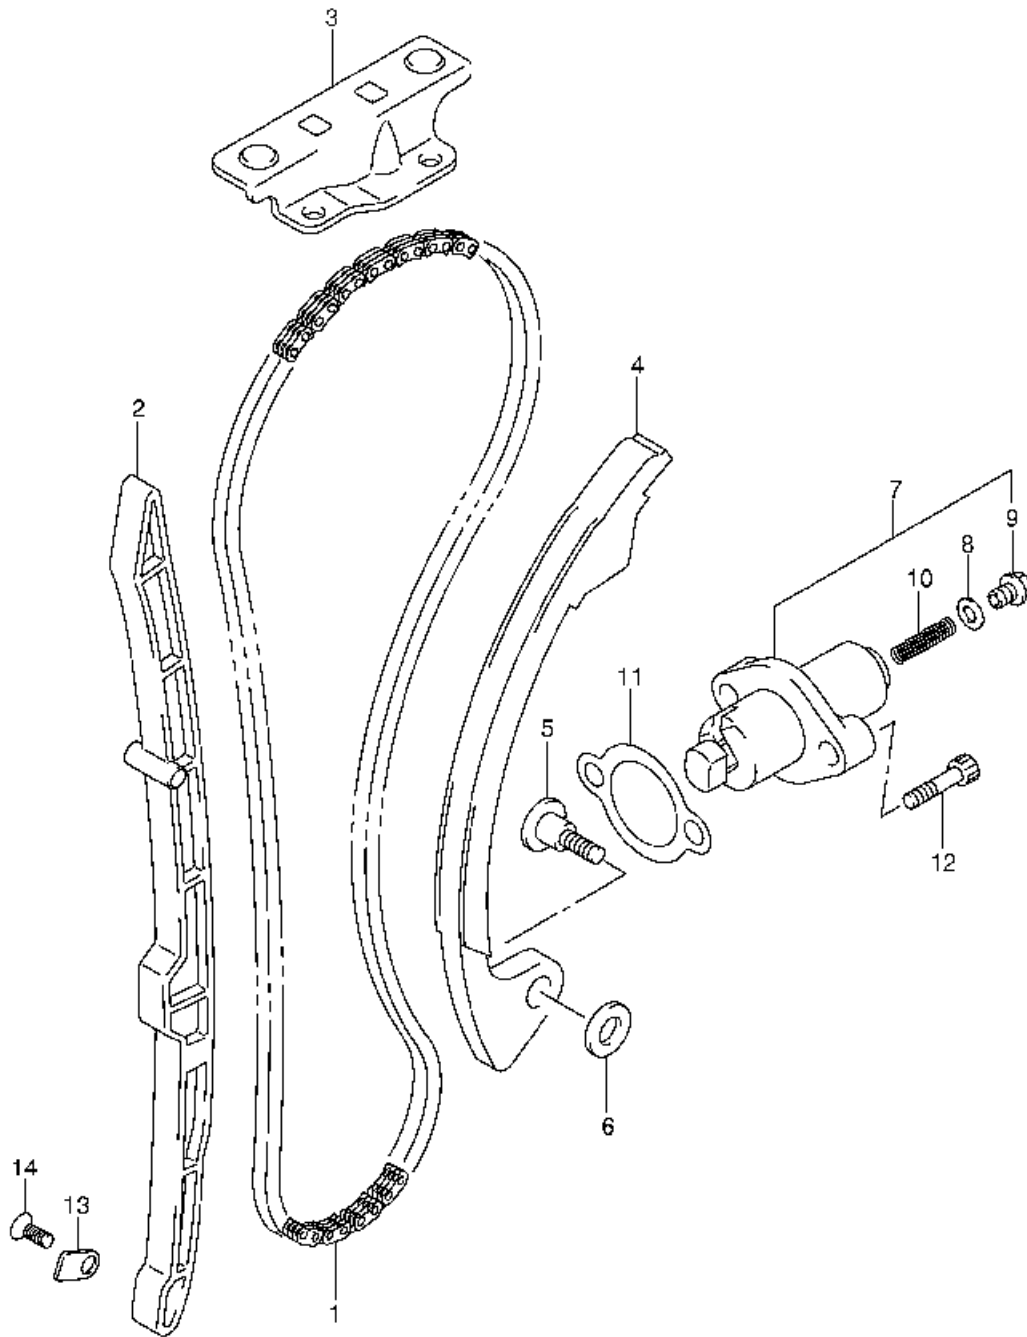 

Ref No	Part No	Description
1	12760-29F00	Chain, Cam Shaft Drive
2	12771-29F00	Guide, Cam Chain No.1
3	12782-29F00	Guide, Cam Chain No.2
4	12811-07G00	Tensioner, Cam Chain
5	12812-35C00	Bolt
6	08211-06181	Washer
7	12830-07G00	Adjuster Assy, Tensioner
8	12837-24F10	. . Gasket
9	12833-05A00	. . Plug
10	12831-39F00	. . Spring
11	12837-24A10	Gasket, Adjuster
12	07130-06253	Bolt
13	12773-24F00	Retainer, Cam Chain Guide No.1
14	09126-06011	Screw




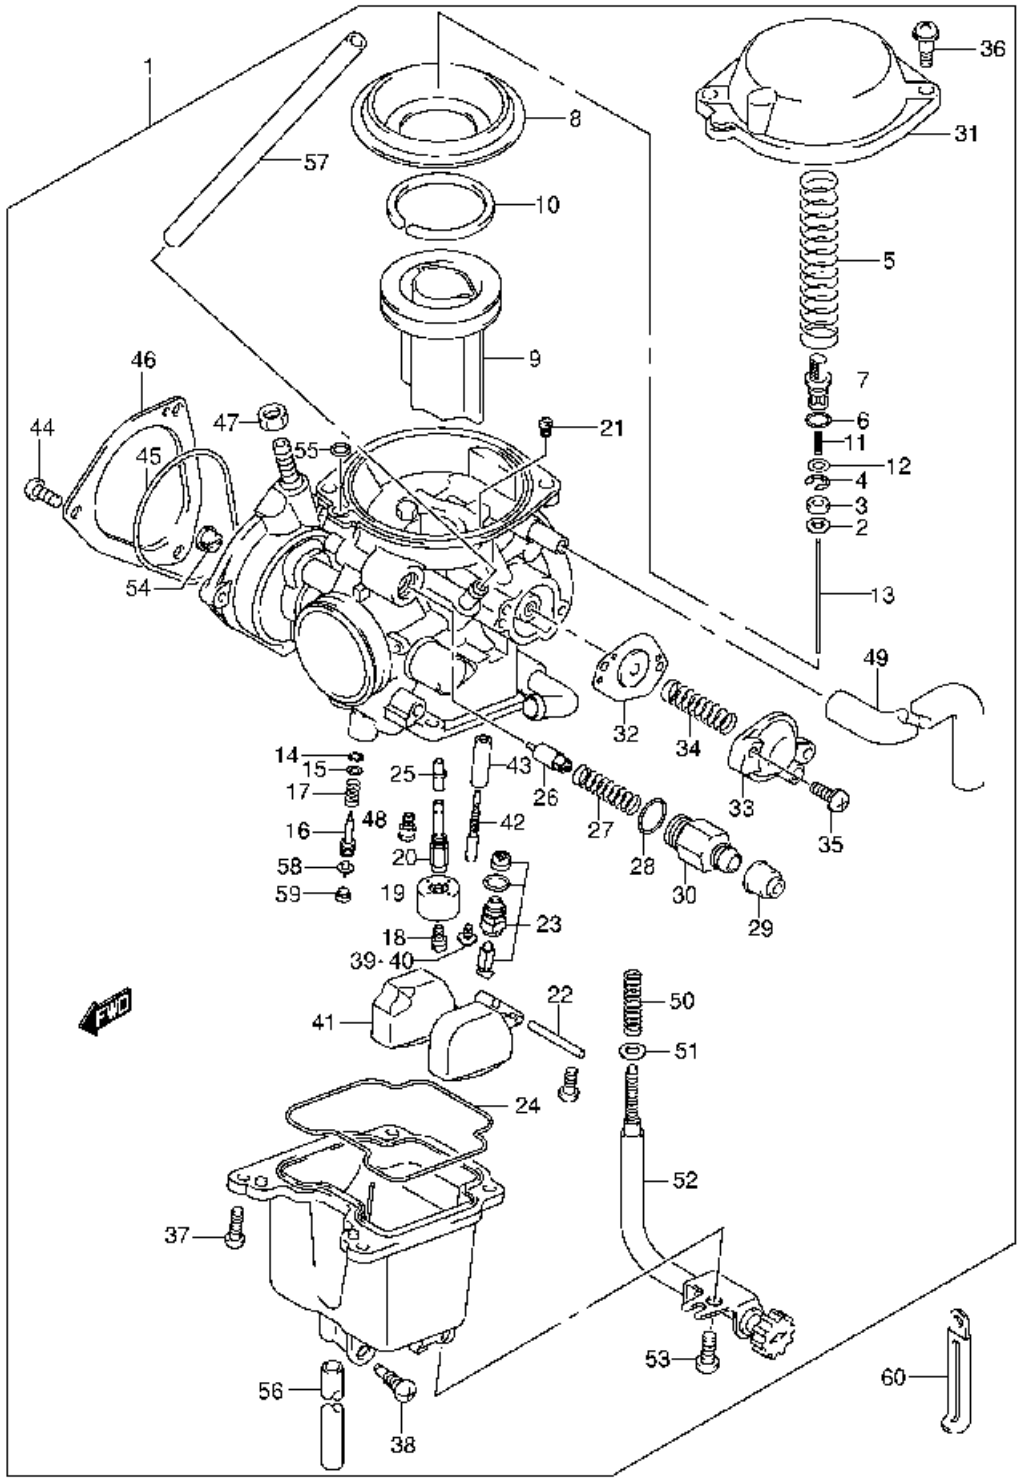 

CARBURETOR


Ref No	Part No	Description
1	13200-07G01	Carburetor Assy
1	13200-07G11	Carburetor Assy
2	13291-29FA0	. Washer
3	13387-13F00	. Ring
4	13394-17E60	. E Ring
5	13503-07G00	. Spring
6	09280-05004	. O Ring
7	13418-33E00	. Holder
8	13507-07G00	. Diaphragm
9	13501-29FA0	. Piston Valve
10	13504-14E00	. Ring
11	13481-04F00	. Spring
12	13382-19E00	. Washer
13	13383-07G00	. Jet Needle (5e26-1)
14	13295-29900	. O Ring
15	13291-29900	. Washer
16	13279-20B00	. Adjuster
17	13268-48700	. Spring
18	09491-26016	. Main Jet (#130)
19	13331-07G10	. Ring
20	13342-07G10	. Jet Holder
21	09493-33002	. Jet
22	13254-01010	. Pin
23	13370-07G00	. Needle Valve Assy
24	13258-04F00	. O Ring
25	13341-07G00	. Needle Jet (p-0m)
26	13411-07G00	. Plunger Assy
27	13417-07F00	. Spring
28	13278-47090	. O Ring
29	13681-04010	. Cap
30	13418-07G10	. Guide Holder
31	13502-08F00	. Diaphragm Cover
32	13480-10F00	. Diaphragm Assy
33	13502-10F00	. Cover Assy
34	13481-41F20	. Spring
35	13601-04148	. Screw
36	13247-33E00	. Screw
37	02112-04107	. Screw
38	13247-13A00	. Screw
39	02112-04083	. Screw
40	13602-05A10	. Screw
41	13250-04F00	. Float Assy
42	09492-22014	. Pilot Jet (#22.5)
43	13356-27A00	. Pipe
44	02112-04063	. Screw
45	13673-20B00	. O Ring
46	13502-02C10	. Cover
47	13607-98410	. Nut
48	09491-60005	. Starter Jet (#60.0)
49	13686-07G00	. Hose
50	13268-03110	. Spring
51	13615-05G00	. Washer
52	13267-07G00	. Adjust Screw Assy
53	13602-05108	. Screw
54	13579-05G00	. Cable Guide

 CARBURETOR

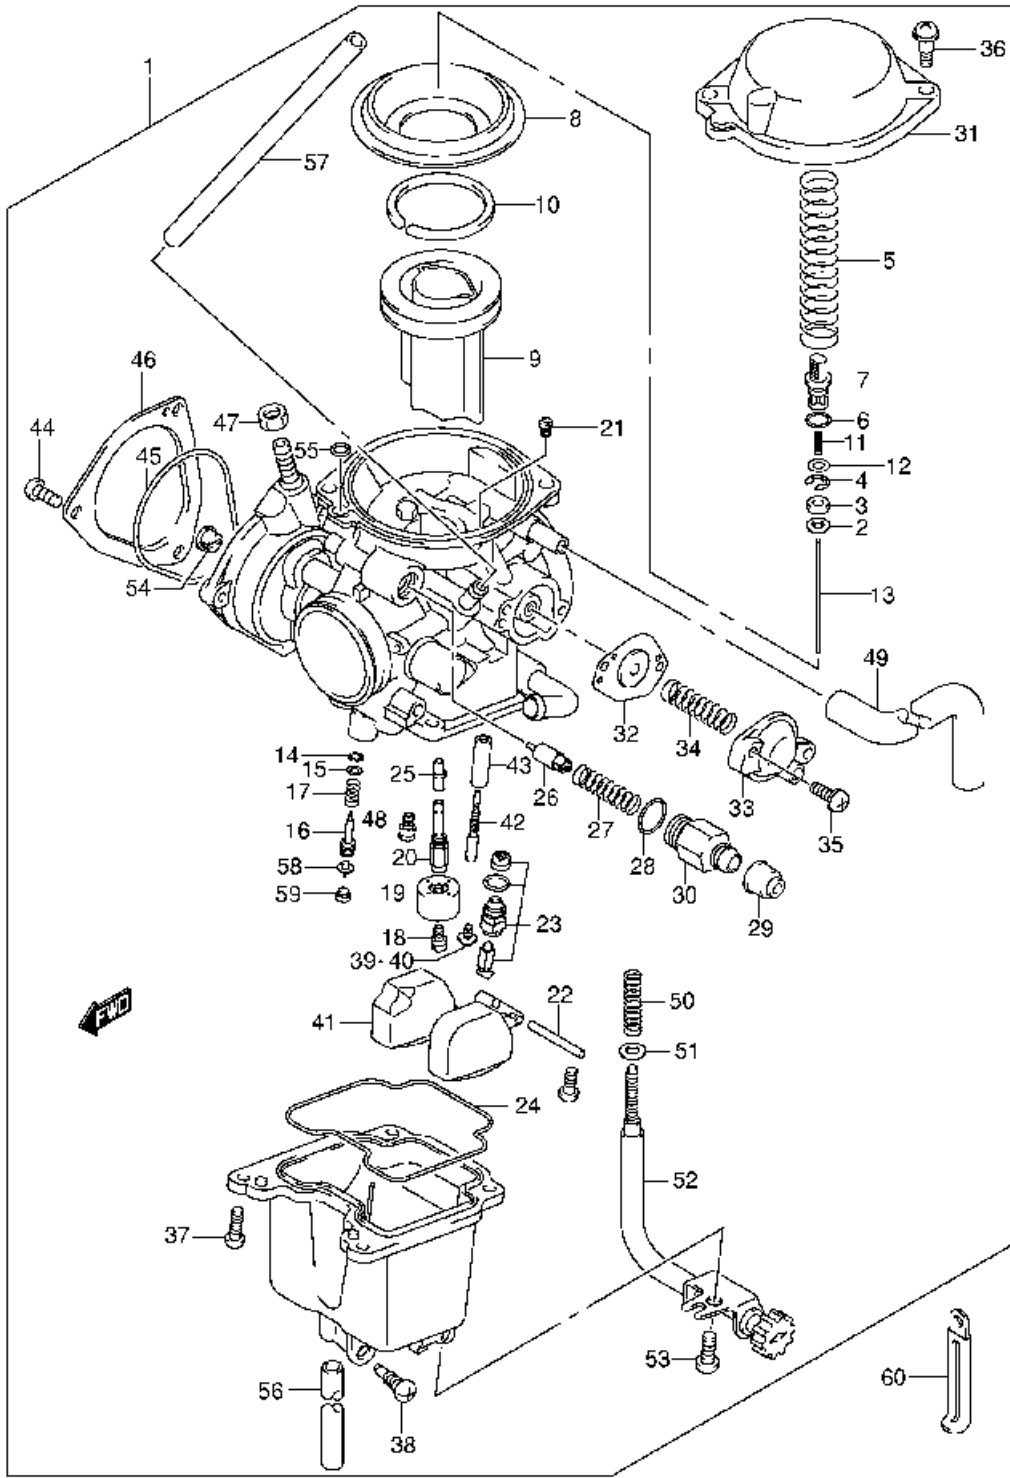



Ref No	Part No	Description
55	13295-33010	. . O Ring
56	13684-07G00	. . Hose
57	09352-50903-600	. . Hose
58	13357-36A00	. . Plug
59	13281-05A00	. . Plug
60	09404-06429	Clamp, Carb Drain Hose

 AIR CLEANER

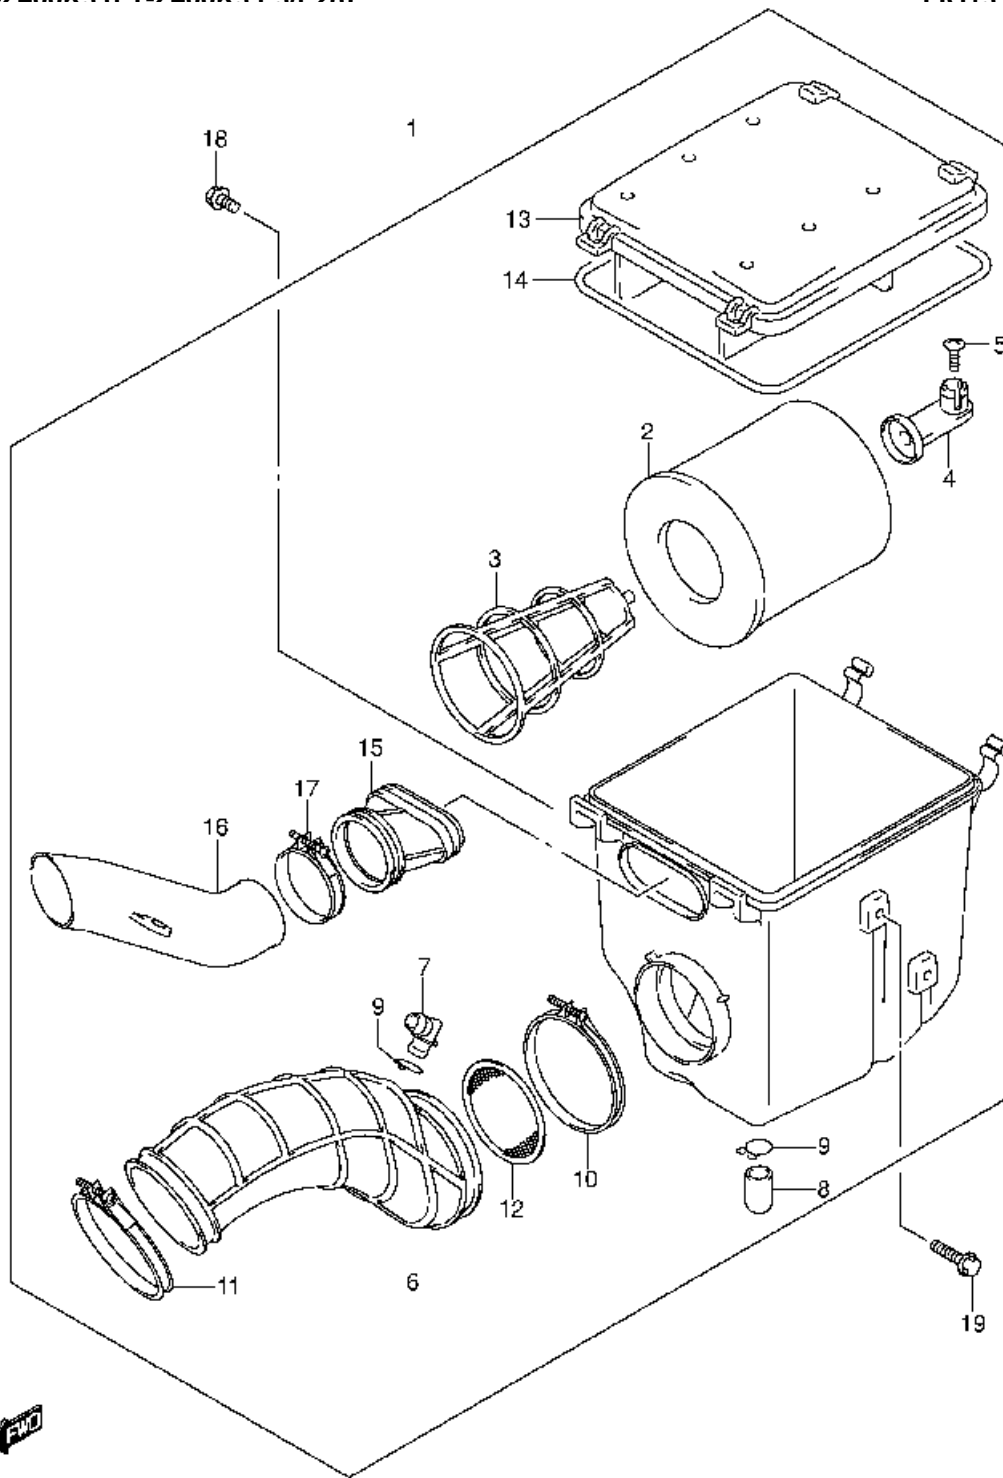


Ref No	Part No	Description
1	13700-07G00	Cleaner Assy, Air
2	13780-07G00	. Filter
3	13791-03G00	. Holder
4	13792-03G00	. Stopper, Holder
5	02142-06163	. Screw
6	13881-07G00	. Tube, Outlet
7	13858-14D20	. Joint
8	13859-41B10	. Plug, Breather
9	09401-14301	. Clip
10	09402-82208	. Clamp (cleaner Side)
11	09402-64203	. Clamp (carburetor Side)
12	13810-07G00	. Trap, Flame
13	13740-07G00	. Cap, Air Cleaner
14	13746-07G00	... Gasket
15	13891-07G00	. Joint, Inlet
16	13896-07G00	. Duct, Inlet
17	09402-56208	. Clamp
18	01550-06163	Bolt, Air Cleaner Rh
19	01547-06203	Bolt, Air Cleaner Lh




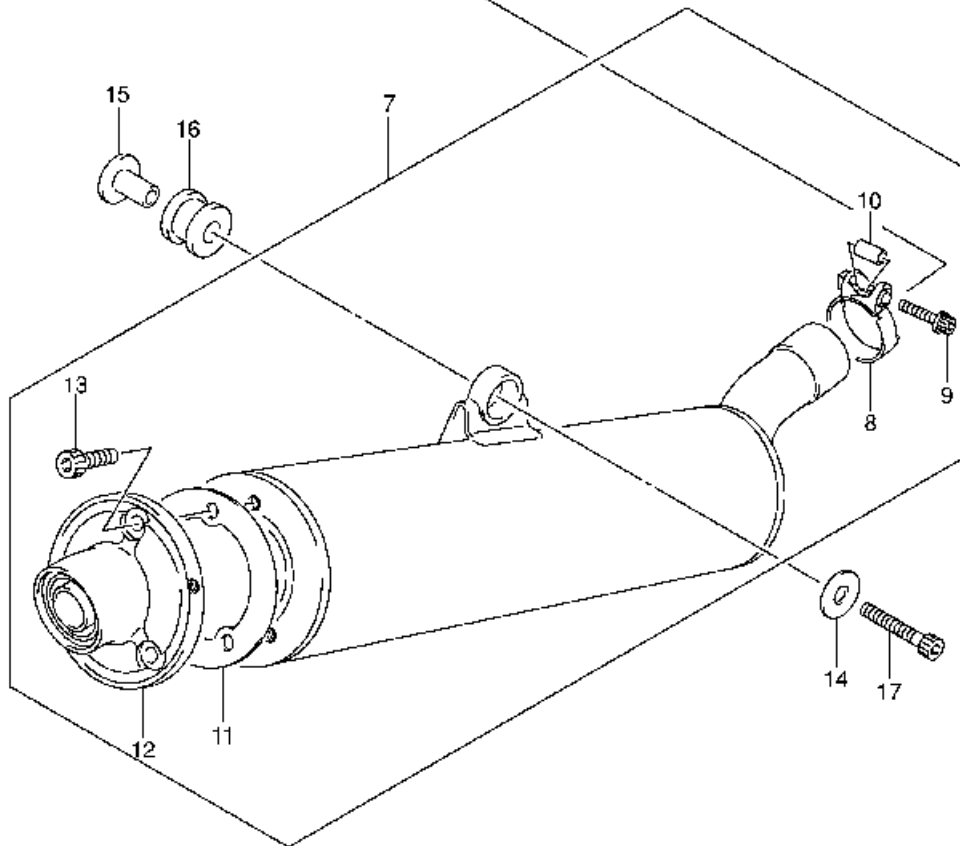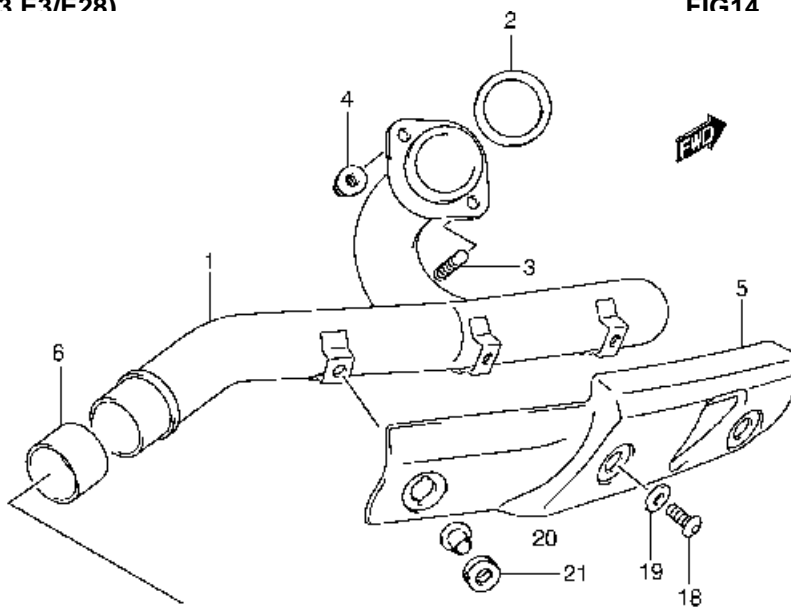  


Ref No	Part No	Description
1	14150-07G00	Pipe, Exhaust
2	14181-29E02	Gasket, Exhaust Pipe
3	01421-08253	Stud Bolt
4	08319-31083	Nut
5	14180-07G00	Cover, Exhaust Pipe
6	14771-07G00	Connector, Muffler
7	14310-07G10	Body, Muffler
8	14459-07G00	. . Clamp
9	07120-08403	. . Bolt
10	14424-07G01	. . Spacer
11	14773-29F00	. . Gasket
12	14850-07G10	. . Arrester
13	09106-06076	. . Bolt
14	09160-08503	Washer
15	09180-08152	Spacer
16	09320-12071	Cushion
17	07120-08403	Bolt
18	09139-06109	Screw, Exhaust Pipe Cover
19	14184-07G00	Washer, Exhaust Pipe Cover
20	14185-07G00	Spacer, Exhaust Pipe Cover
21	09320-08069	Cushion, Exhaust Pipe Cover

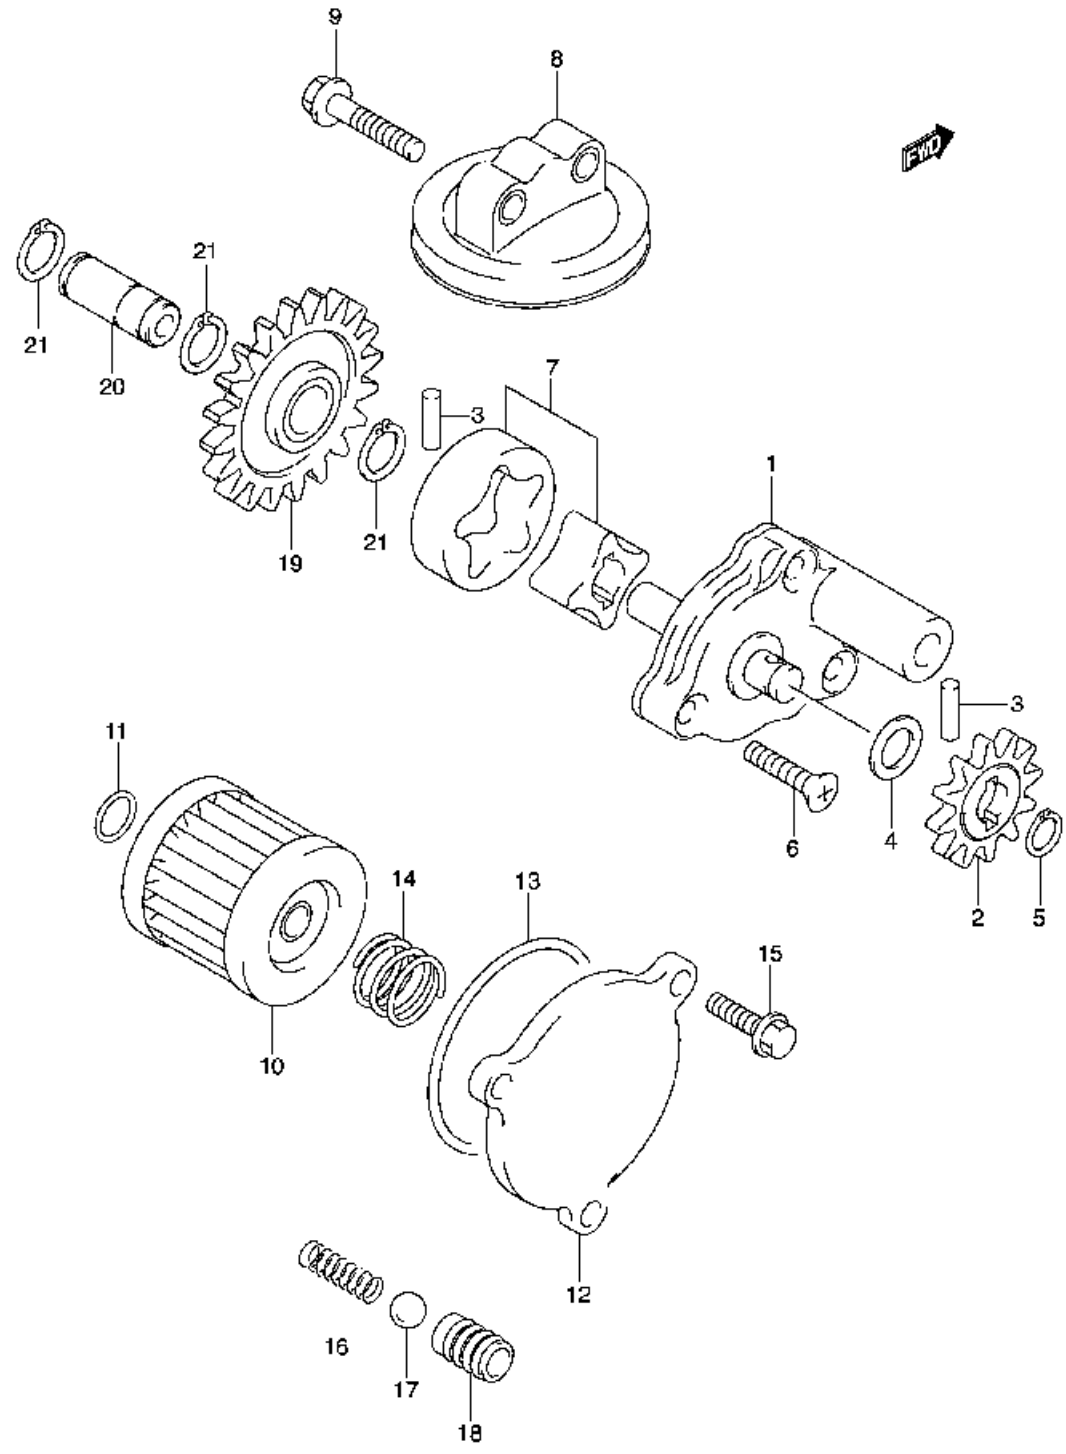 

Ref No	Part No	Description
1	16400-29F00	Pump Assy, Engine Oil No.1
2	16331-29F01	Gear, Driven
3	09261-04009	Pin
4	09181-10158	Washer
5	08331-31106	Circlip
6	02122-06253	Screw
7	16410-29F00	Rotor Set, Oil Pump No.2
8	16520-29F00	Strainer, Oil Pump
9	01550-06253	Bolt
10	16510-29F00	Filter, Engine Oil
11	09280-13004	O Ring (d:1.9,id:13.0)
12	16512-47E00	Cap, Oil Filter
13	09280-54001	O Ring (d:2.4,id:52.6)
14	09440-18002	Spring
15	01547-06163	Bolt
16	09440-07073	Spring
17	06111-12004	Ball
18	16442-29F00	Seat, Oil Check Valve
19	16321-29F00	Gear, Oil Pump Idle
20	16322-29F00	Shaft
21	08331-31126	Circlip

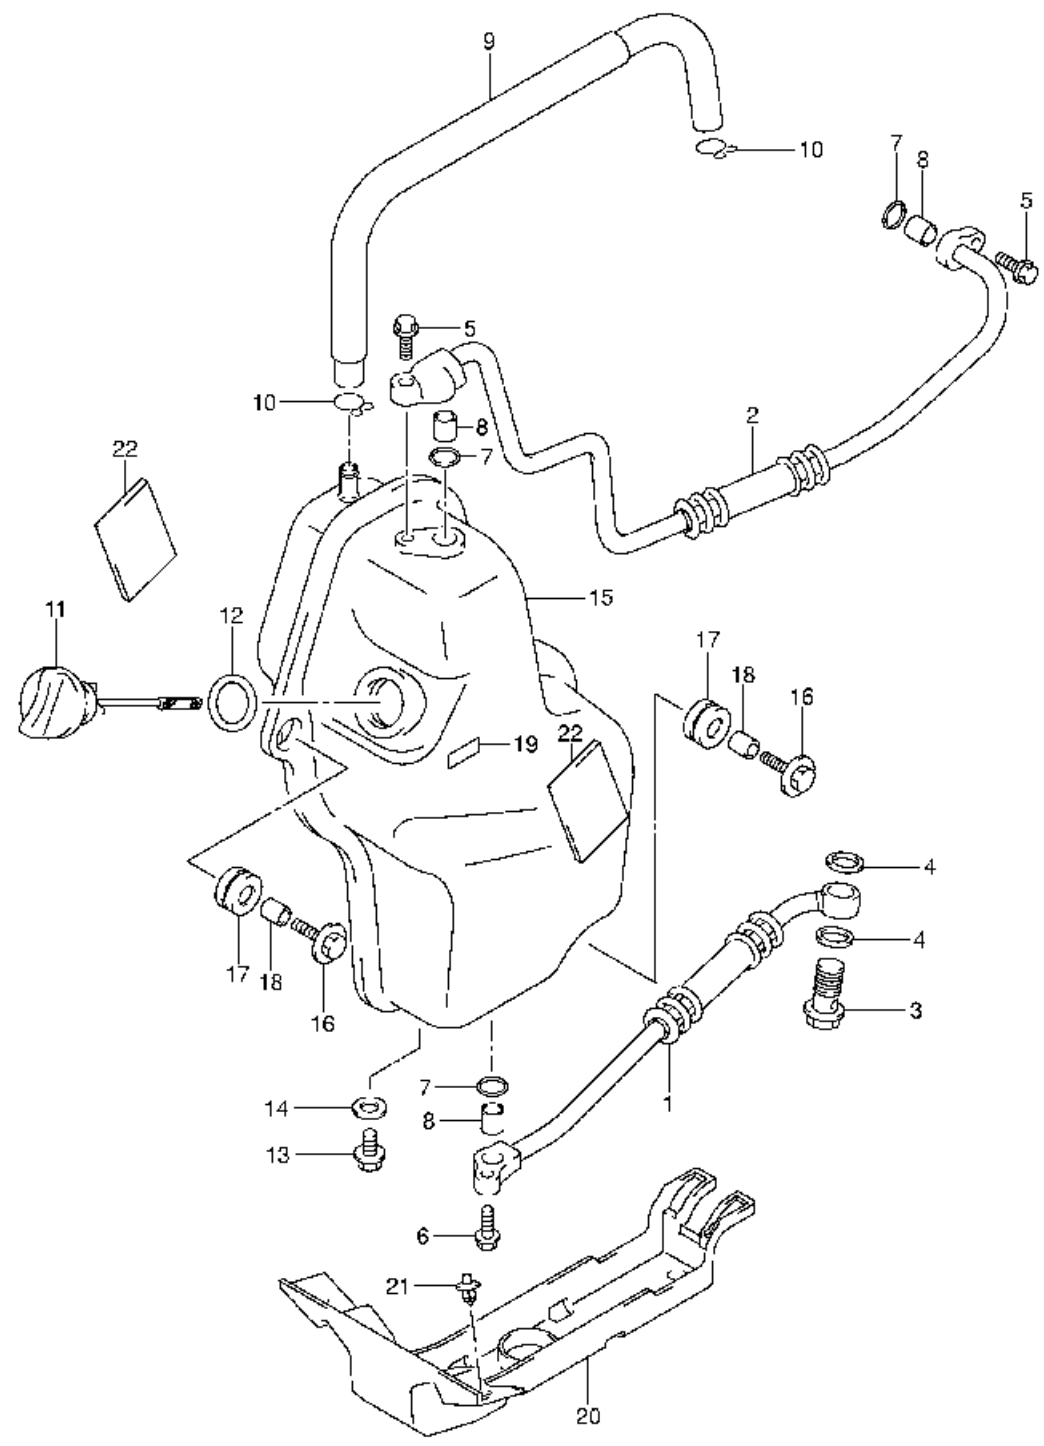 


Ref No	Part No	Description
1	16460-07G00	Hose, Oil Tank Rh
2	16470-07G00	Hose, Oil Tank Lh
3	09360-14012	Bolt, Union (14x27)
4	09168-14015	Gasket, Oil Hose Union
5	07120-06203	Bolt, Upper
6	07120-06203	Bolt
7	09280-11005	O Ring, Oil Hose
8	04211-11129	Pin, Oil Tank Hose
9	16480-07G00	Hose, Oil Overflow
10	09401-12403	Clip
11	11971-07G00	Gauge, Oil Level
12	09280-17003	O Ring, Oil Level Gauge
13	01550-08123	Plug, Oil Drain
14	09168-08008	Gasket, Oil Drain Plug
15	16410-07G00	Tank, Oil
16	09118-06097	Bolt, Oil Tank
17	09320-10042	Cushion, Oil Tank
18	09180-06290	Spacer, Oil Tank
19	68322-07G00	Note, Engine Oil (2000ml)
20	16421-07G00	Protector, Oil Tank
21	09409-06322-5PK	Clip
22	51553-42AA0	Cushion, Oil Tank

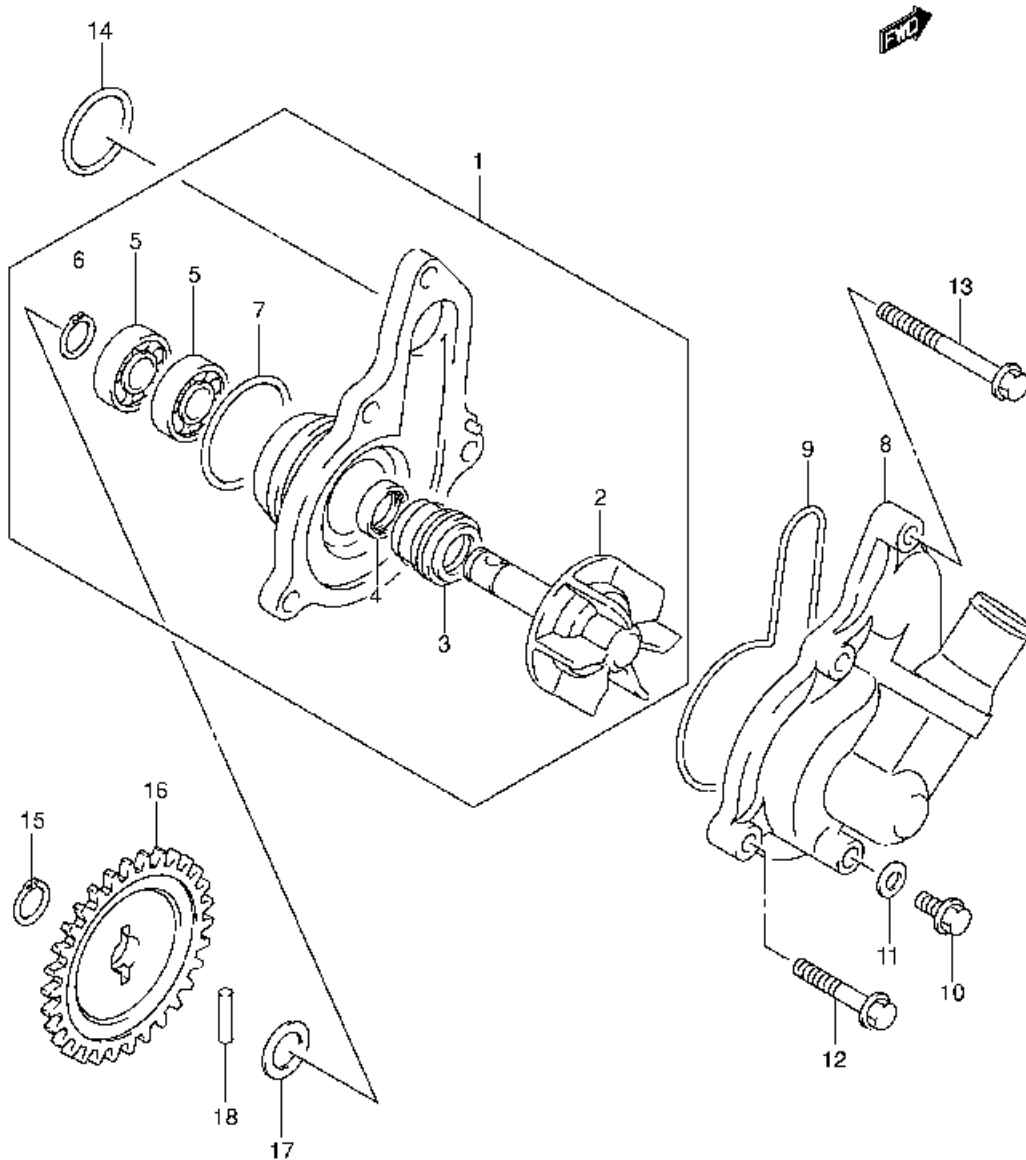 



Ref No	Part No	Description
1	17400-29F00	Pump Assy, Water
2	17491-29F00	• Impeller/shaft
3	17470-02F10	• Seal, Mechanical
4	17419-29F00	• Oil Seal
5	08110-69000	• Bearing
6	08332-11086	• E Ring
7	17435-33400	• O Ring
8	17410-29F21	Case, Water Pump
9	17435-29F00	O Ring
10	01547-06103	Bolt, Drain
11	09168-06004	Gasket (6.2x11x1.2)
12	09103-06204	Bolt (6x30)
13	09103-06209	Bolt
14	09280-22001	O Ring (d:2.4,id:21.8)
15	08331-31106	Circlip
16	17461-29F00	Gear, Water Pump Driven
17	09181-10158	Washer
18	09261-04001	Pin

Ref No	Part No	Description
1	17710-07G10	Radiator Assy, Water
2	17760-07G00	Cover, Radiator
3	09118-06097	Bolt
4	09180-06290	Spacer
5	09320-10042	Cushion
6	17680-50F70	Switch, Radiator Fan
7	17689-50F00	O Ring
8	17800-07G10	Fan Assy, Radiator
8a	17820-07G10	Boot
9	17802-14F00	Nut
10	01550-06103	Bolt
11	34850-07G00	Switch Assy, Water Temp

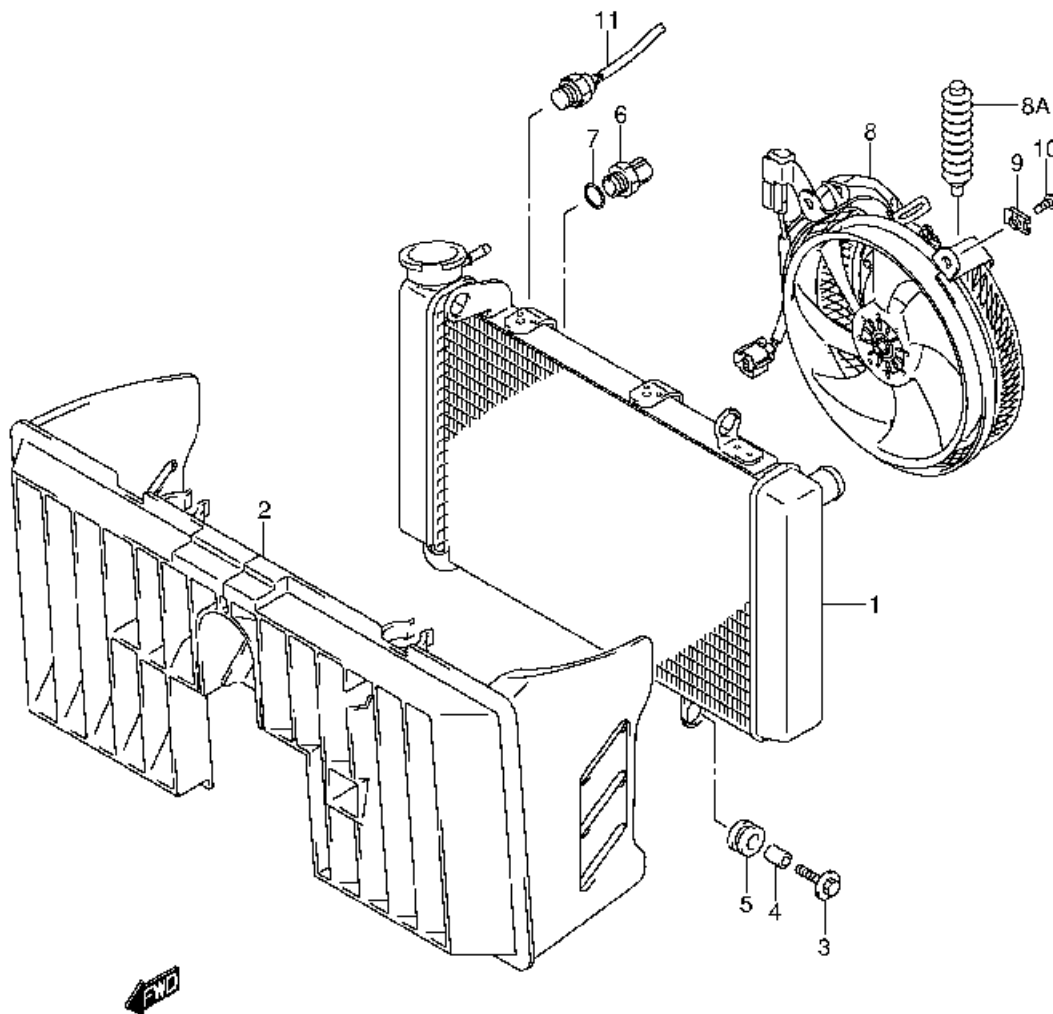 


Ref No	Part No	Description
1	17851-07G00	Hose, Radiator Inlet
2	17852-07G00	Hose, Radiator Outlet
3	09402-32511	Clamp
4	17910-07G00	Tank Assy, Reservoir
5	17931-02FA0	• . Cap, Reservoir Tank
6	09116-06168	Screw
7	17981-45C00	Hose, Inlet
8	09401-08411	Clip
9	17981-19F00	Hose, Overflow
10	17730-14G00	Cap

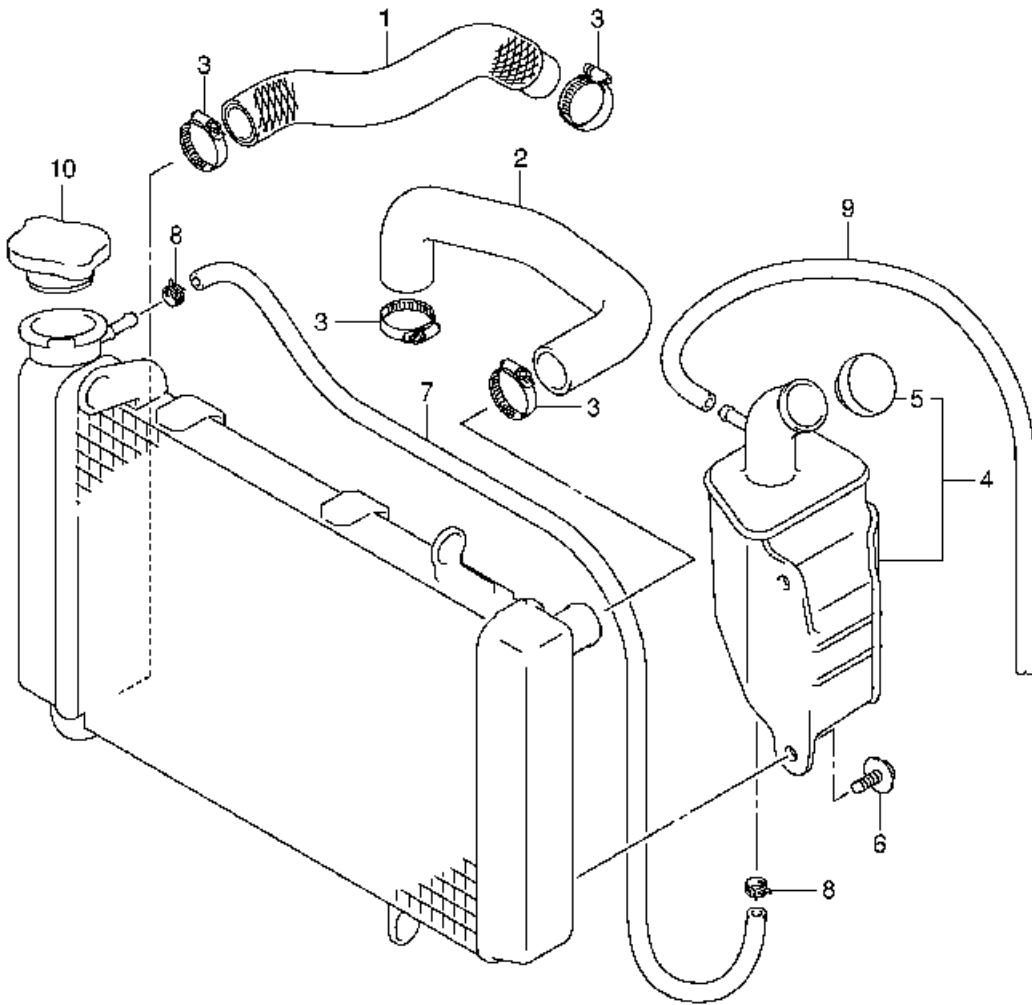 

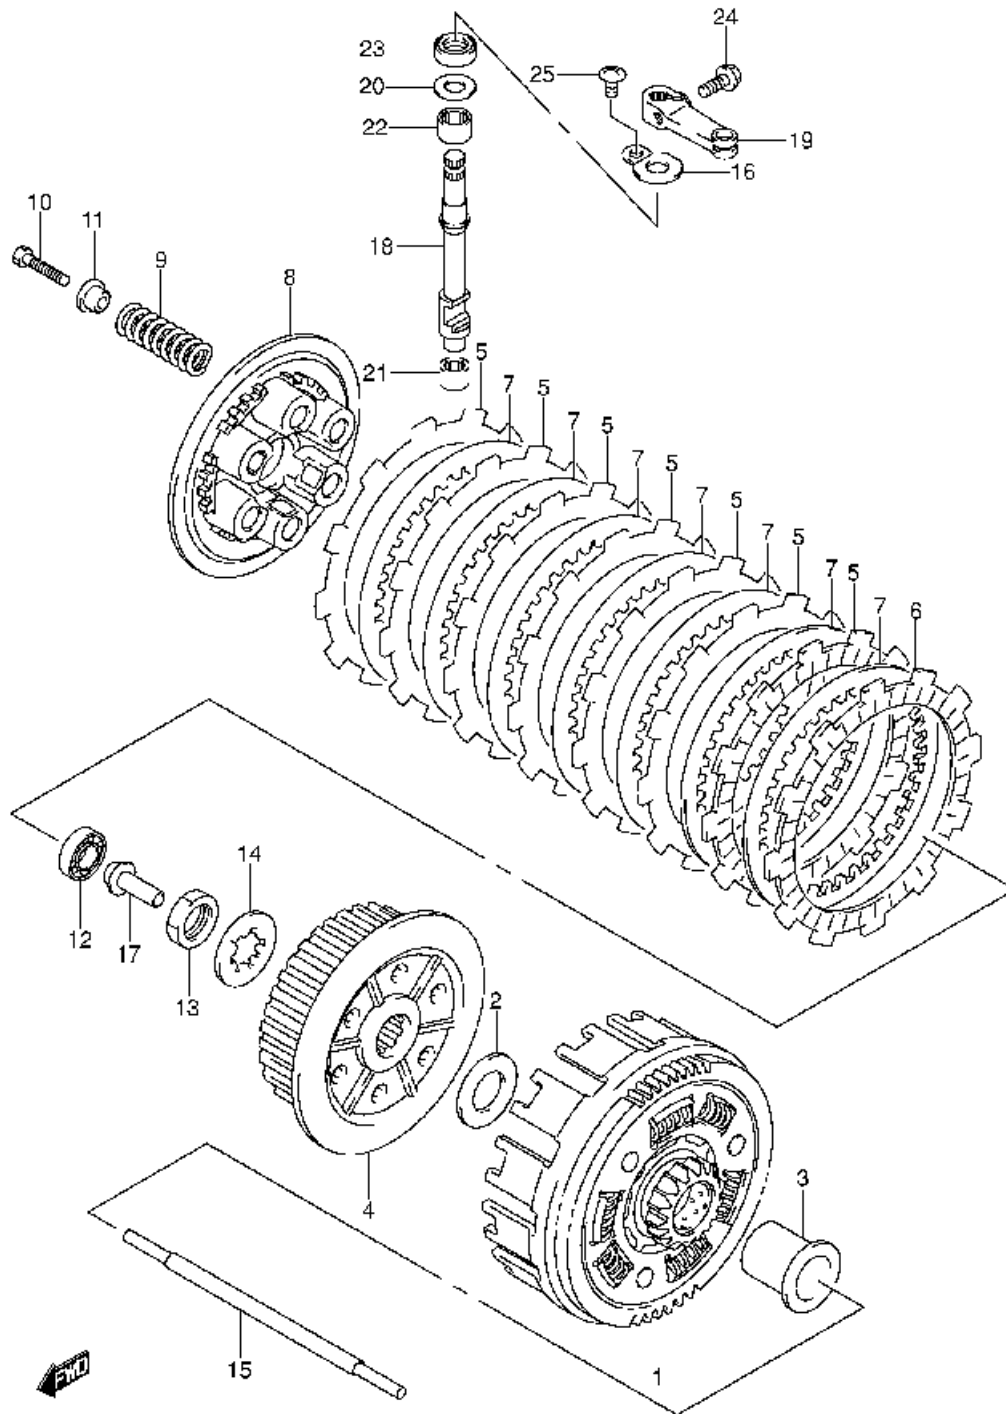 


Ref No	Part No	Description
1	21200-07G00	Gear Assy, Primary Driven
2	08211-22425	Washer
3	21251-29F00	Spacer, Primary Driven
4	21410-07G00	Hub, Sleeve
5	21441-29F00	Plate, Drive No.1
6	21442-29F00	Plate, Drive No.2
7	21451-44D00	Plate, Driven
8	21462-29F00	Disc, Pressure
9	21413-29F00	Spring
10	07130-06303	Bolt
11	21414-29F00	Washer
12	09262-12001	Bearing, Pressure Disk
13	09140-20001	Nut
14	09167-22021	Lock Washer
15	23110-07G00	Rod, Clutch Push
16	23117-05200	Retainer, CI Rlse Oil Seal
17	23121-29F00	Piece, CI Rlse
18	23122-29F00	Cam Shaft, CI Rlse
19	23271-20902	Arm, CI Rlse
20	09181-10195	Washer, CI Rlse
21	09263-10014	Bearing, CI Rlse Low
22	09263-12024	Bearing, CI Rlse Up
23	09282-10012	Seal, CI Rlse Arm
24	01547-06163	Bolt, CI Rlse Arm
25	02142-06103	Stopper, CI Rlse Cam Shaft

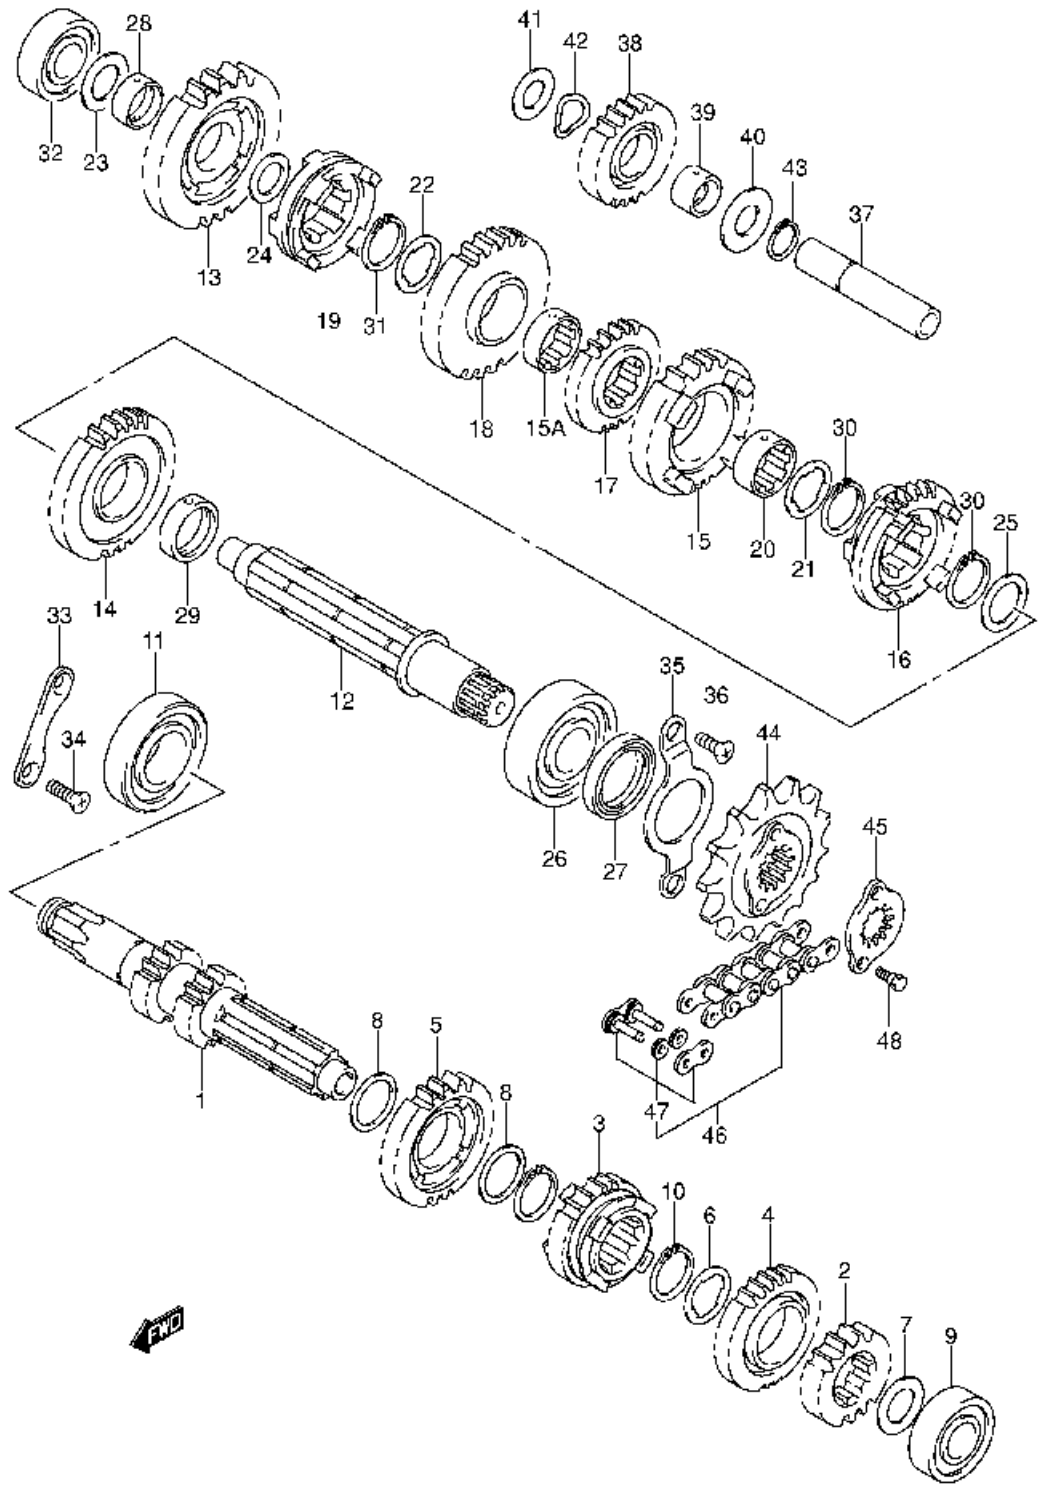 


TRANSMISSION

Ref No	Part No	Description
1	24120-07G00	Shaft, Counter (nt:13)
2	24221-07G00	Gear, 2nd Drive (nt:18)
3	24231-07G00	Gear, 3rd Drive (nt:21)
4	24241-07G00	Gear, 4th Drive (nt:23)
5	24251-07G00	Gear, 5th Drive (nt:26)
6	09167-25012	Washer, 4th
7	09181-17223	Washer, 2nd (17x30x1.0)
8	09181-25139	Washer, 5th (25x32x1.0)
9	09262-17027	Bearing, Cntr Shaft Lh
10	09380-25003	Circlip, 4th/5th Drive
11	09262-25122	Bearing, Cntr Shaft Rh
12	24130-07G00	Drive Shaft
13	24311-07G00	Gear, 1st Driven (nt:33)
14	24321-07G00	Gear, 2nd Driven (nt:30)
15	24331-07G00	Gear, 3rd Driven (nt:26)
15a	24332-24510	Bush, Reverse Driven
16	24341-07G00	Gear, 4th Driven (nt:23)
17	24351-07G00	Gear, 5th Driven (nt:22)
18	24571-07G01	Gear, Reverse Driven (nt:28)
19	24581-07G00	Dog, Reverse
20	29215-07G00	Bush, 3rd Driven
21	09167-25016	Washer, 3rd Driven
22	09167-25016	Washer, Reverse Driven
23	09181-17223	Washer, 1st Driven Rh
24	09181-20195	Washer, 1st Driven Lh
25	09181-25167	Washer, 2nd Driven
26	09262-25125	Bearing, Drive Shaft Lh
27	09283-25086	Seal, Drive Shaft Oil
28	09300-20033	Bush, 1st Driven
29	09300-25020	Bush, 2nd Driven
30	09380-25003	Circlip, 2nd/3rd Driven
31	09380-25003	Circlip, Reverse Driven
32	09262-17023	Bearing, Drive Shaft Rh
33	24741-05G00	Retainer, Counter Shaft Rh
34	09126-06011	Screw (6x12)
35	24751-07G00	Retainer, Drive Shaft Oil Seal
36	09126-06007	Bolt, Retainer
37	24551-05G00	Shaft, Reverse Idle
38	24561-07G00	Gear, Reverse Idle (nt:24)
39	24562-05G00	Bush, Reverse
40	09181-17195	Washer (17x28x1.0)
41	09181-17021	Washer (17x36x1.0)
42	09164-22011	Wave Washer
43	08331-31176	Circlip
44	27511-07G00	Sprocket, Engine (nt:14)
45	27512-07G00	Plate, Sprocket
46	27600-29F10-112)	Chain Assy (rk520kz0,112l)
47	27620-29F10	• Joint Set
48	09111-06039	Bolt

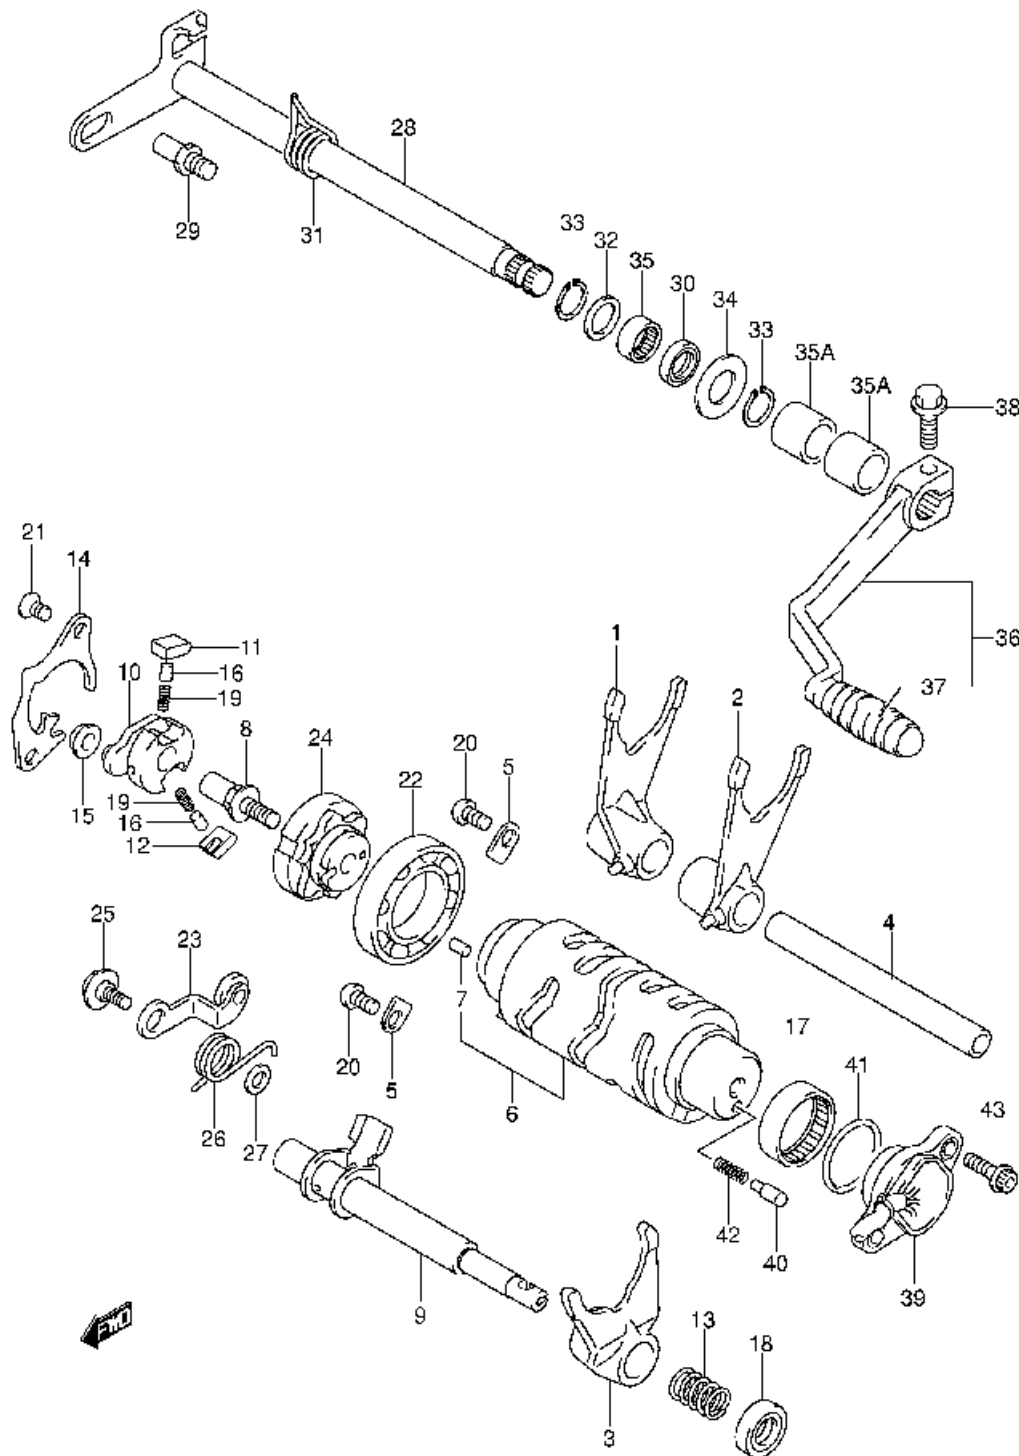 

GEAR SHIFTING


Ref No	Part No	Description
1	25211-07G00	Fork, Gear Shift No.1
2	25221-07G00	Fork, Gear Shift No.2
3	25231-07G00	Fork, Gear Shift No.3
4	25411-07G00	Shaft, Gear Fork No.1
5	24741-21A00	Retainer, Shift Cam Brg
6	25310-07G00	Cam, Gear Shift
7	04221-04089	• . Pin, Shift Cam
8	25313-27C02	Pin, Shift
9	25320-07G00	Shaft, Reverse Lock
10	25322-36E00	Shifter, Gear Shift Cam
11	25323-34201	Pawl, Gear Shift No.1
12	25324-34201	Pawl, Gear Shift No.2
13	25328-07G00	Spring, Reverse Lock
14	25331-37E10	Lifter, Gear Shift Pawl
15	09180-07014	Roller, Gear Cam Shifter
16	09261-05003	Pin, Shift Pole (5x8)
17	09263-25018	Bearing, Shift Cam Lh
18	09283-10010	Seal, Reverse Lock
19	09440-04003	Spring, Shift Pawl Return
20	09125-06110	Screw, Shift Cam Brg
21	09126-06011	Screw, Shift Pawl Lifter
22	08113-69050	Bearing, Shift Cam Rh
23	25350-07G00	Stopper, Shift Cam
24	25381-36E11	Plate, Shift Cam Stopper
25	09111-06041	Bolt, Cam Stopper Arm
26	25355-07G00	Spring, Shift Cam
27	08211-06121	Washer, Shift Cam
28	25510-07G00	Shaft, Gear Shift
29	25671-38B00	Stopper, Gear Shift Arm
30	09283-14006	Seal, Shift Shaft Oil
31	09444-20006	Spring, Shift Shaft Return
32	09181-14139	Washer, Gear Shaft
33	08331-31146	Circlip, Gear Shaft
34	09160-14046	Washer, Gear Shift Lh
35	09263-14027	Bearing, Gear Shaft (14x20x12)
35a	09180-14016	Spacer (14x20x17.5)
36	25600-07G01	Lever Assy, Gear Shift
37	25652-16500	• . Rubber, Gear Pedal
38	01550-06203	Bolt, Gear Shift
39	37720-07G00	Base Assy, Gear Shift Term
40	09209-05011	Contact
41	09280-26005	O Ring (d:2.4,id:26.2)
42	09440-04010	Spring
43	07120-05163	Bolt

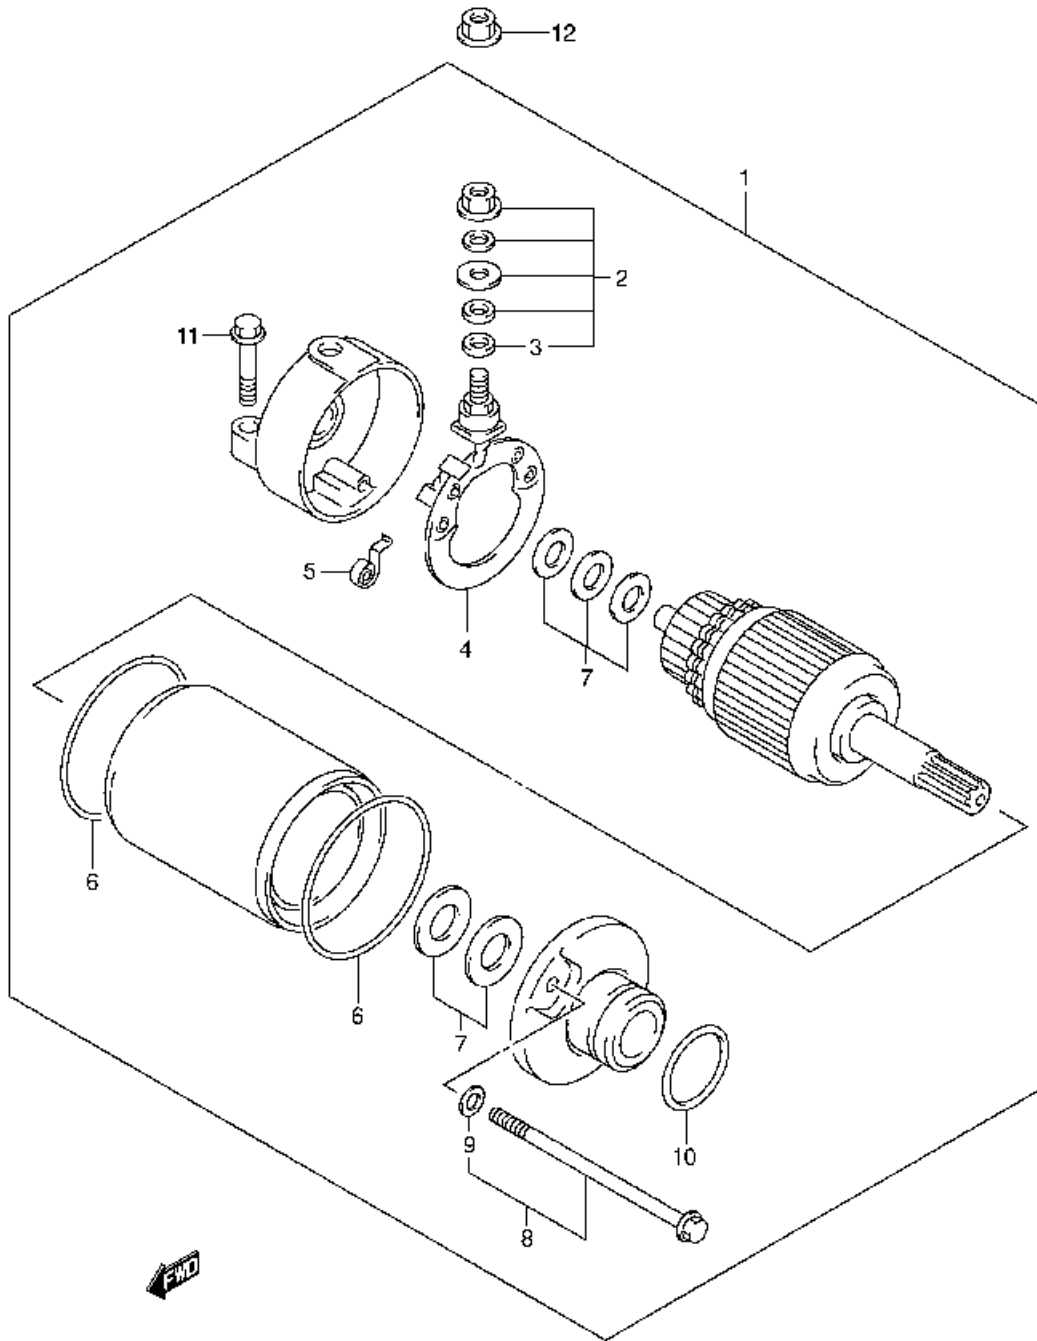 


Ref No	Part No	Description
1	31100-29F00	Motor Assy,starting
2	31130-13E00	. . Brush Terminal Set
3	31143-49040	. . O Ring
4	31132-13E00	. . Brush Holder Set
5	31135-31300	. . Brush Spring
6	31264-13E00	. . O Ring
7	31170-19B10	. . Washer Set
8	31280-19F00	. . Set Bolt
9	31156-13E00	•• . O Ring
10	09280-24003	. . O Ring (d:3.0,id:24.5)
11	01547-06253	Bolt
12	08361-35068	Nut, Starting Motor




Ref No	Part No	Description
1	32101-07G00	Stator Assy
2	32102-07G00	Rotor Assy
3	32371-13E00	Clamp, Magneto Lead No.1
4	07130-05123	Bolt, Pulser/clamp
5	07130-05253	Bolt, Stator
6	31792-07G00	Nut, Magneto Rotor
7	09420-04008	Key

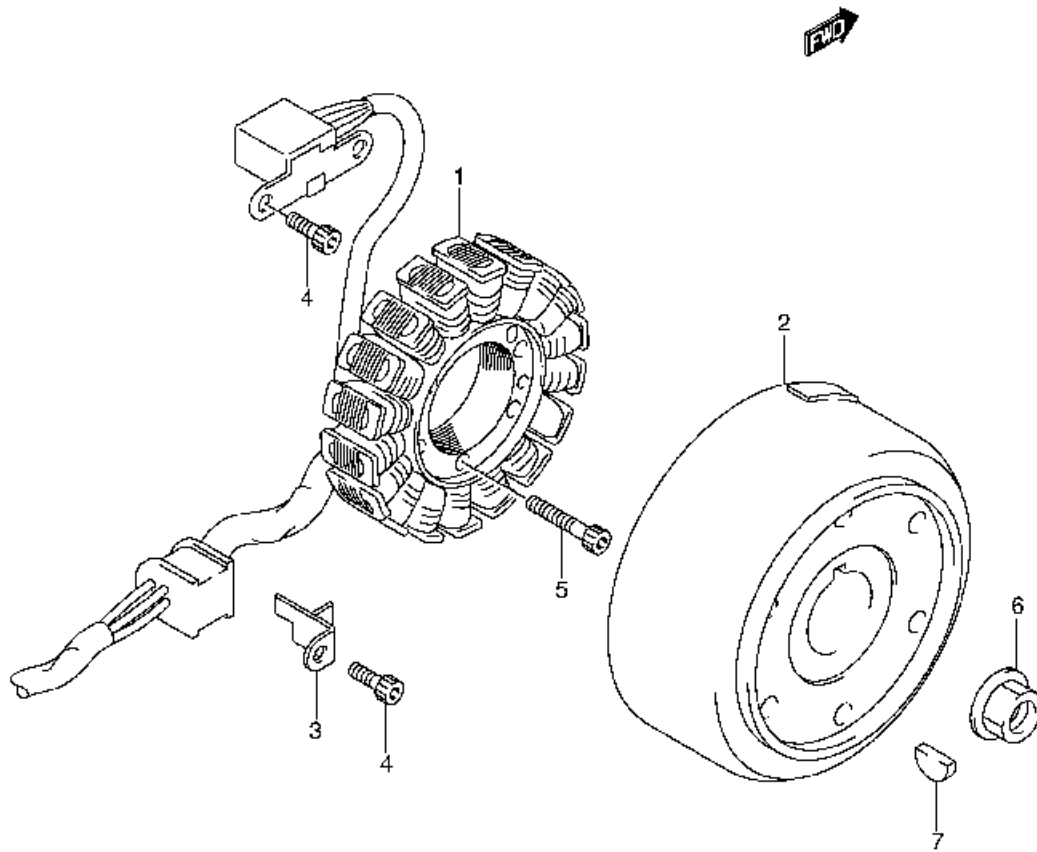 

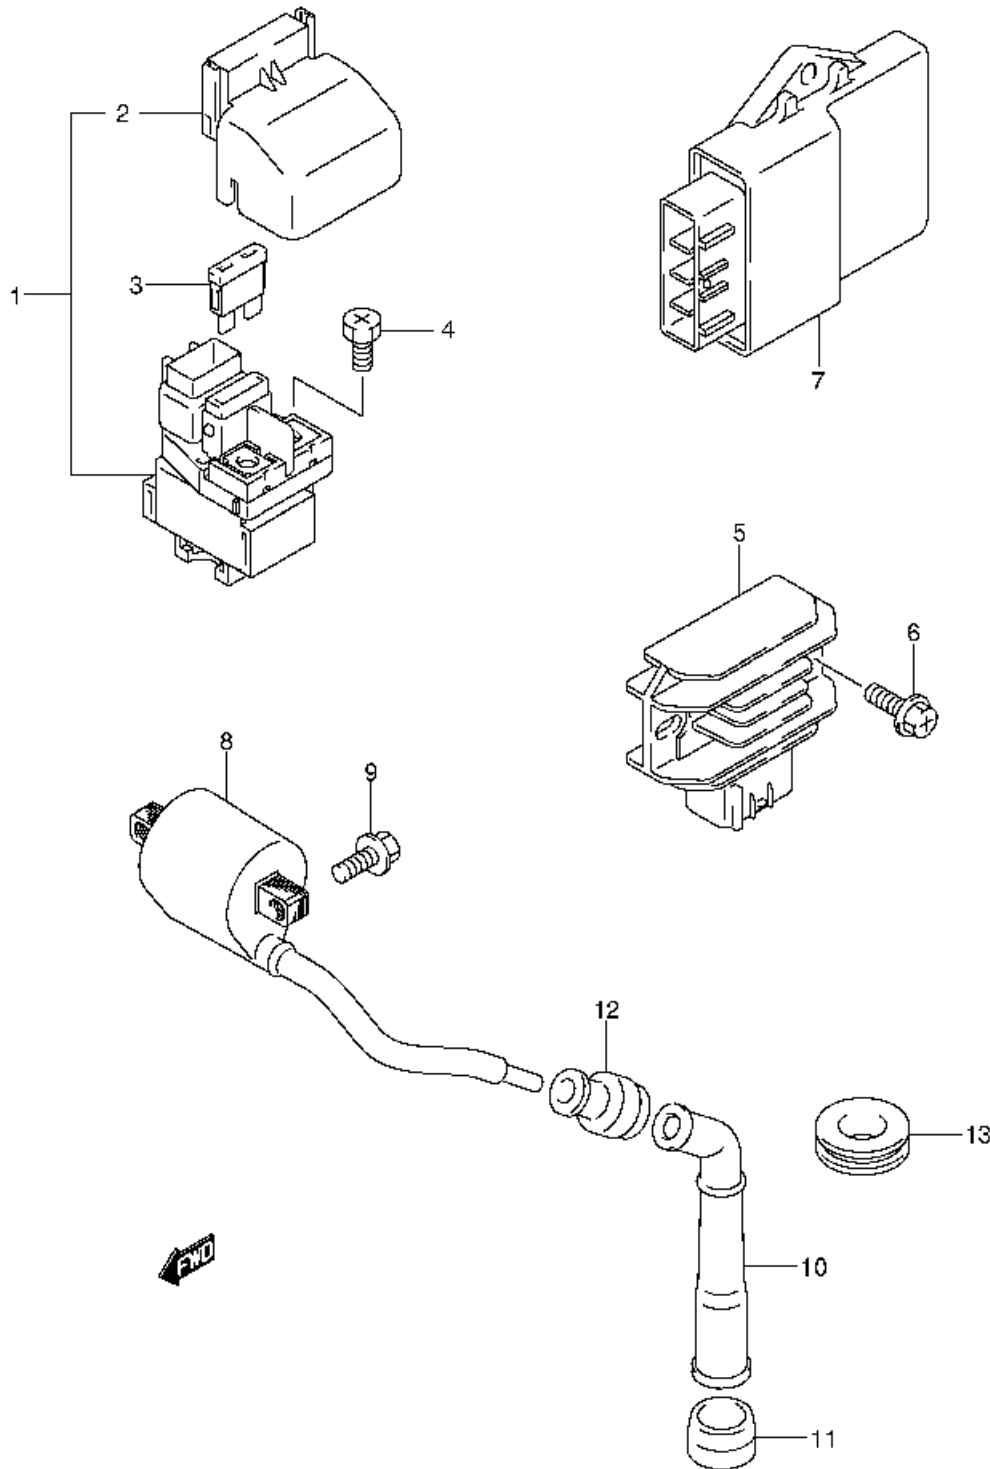 


Ref No	Part No	Description
1	31800-07G00	Relay Assy, Starting Motor
2	31861-07G00	• . Cover
3	09481-20101	• . Fuse (20a)
4	09128-06013	Bolt, Starting Motor (6x8)
5	32800-05F10	Rectifier Assy
6	02162-06203	Bolt, Rectifier
7	32900-07G00	Cdi Unit
8	33410-09F00	Coil Assy, Ignition
9	01550-06163	Bolt
10	33510-48B10	Cap Assy, Spark Plug
11	33541-23E01	Seal, Spark Plug Cap
12	33542-38B00	Seal, High Tension Cord
13	33543-33E01	Cover, Spark Plug Cap

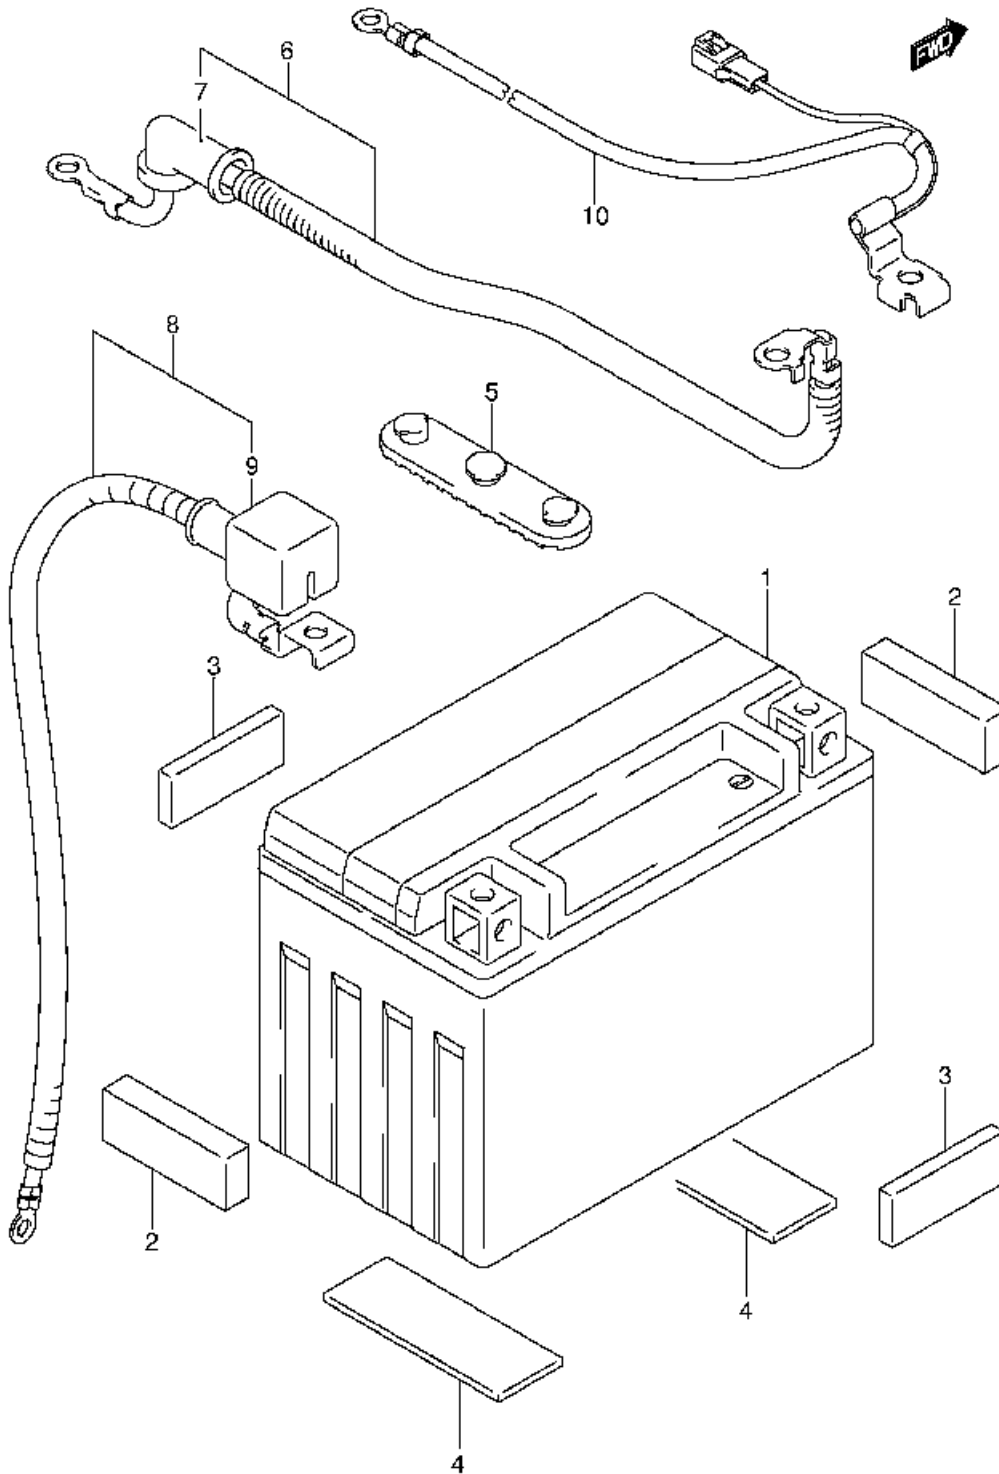 

Block Title.
BATTERY


Ref No	Part No	Description
1	33610-32C10	Battery Assy (12v,8ah)
2	33652-03G00	Protector (20x50x11)
3	33652-28010	Protector (20x45x6)
4	33652-41B00	Protector (27x80x3)
5	33652-07G00	Protector, Battery
6	33810-07G00	Wire, Starter Motor
7	31861-48B10	• . Cap, Starter Motor
8	33820-07G00	Wire, Battery Plus
9	33624-10D00	• . Cap, Battery Plus
10	33860-07G00	Wire, Battery Minus

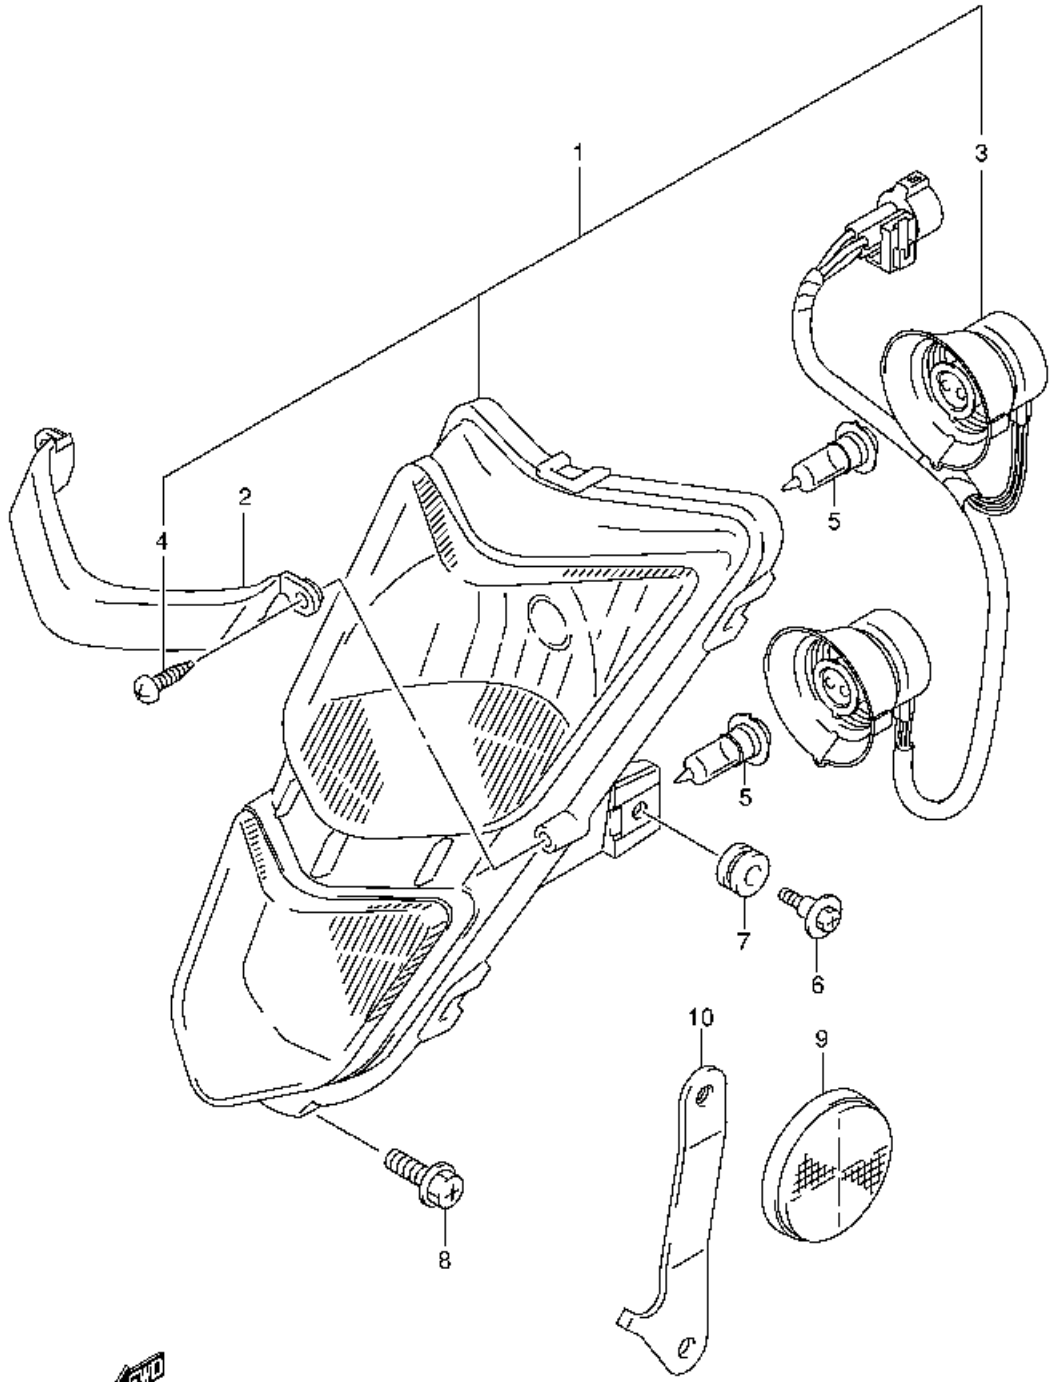 


Ref No	Part No	Description
1	35100-07G00-YU1	Headlamp Assy (yellow)
1	35100-07G00-30H	Headlamp Assy (white)
2	35143-07G00-YU1	. . Molding (yellow)
2	35143-07G00-30H	. . Molding (white)
3	35171-07G00	. . Socket/cord Assy
4	03511-04123	. . Screw
5	09471-12097	Bulb (14v30/30w)
6	09139-06118	Screw, Headlamp
7	09320-10501	Cushion
8	02162-06163	Bolt, Headlamp Adjust
9	35950-14A00	Reflex Reflector Assy, Fr
10	35956-07G01	Bracket, Fr Side Rh
10	35957-07G01	Bracket, Fr Side Lh




Ref No	Part No	Description
1	35710-03G00	Lamp Assy, Rear Comb
2	35718-03G00	• . Socket & Cord Assy
3	09471-12083	• . Bulb (12v,21/5w)
4	09320-06023	Cushion
5	35726-07G00	Bracket, Rear Comb
6	33652-05G20	Cushion (12x17x17)
7	33652-07G10	Cushion (6x17x17)

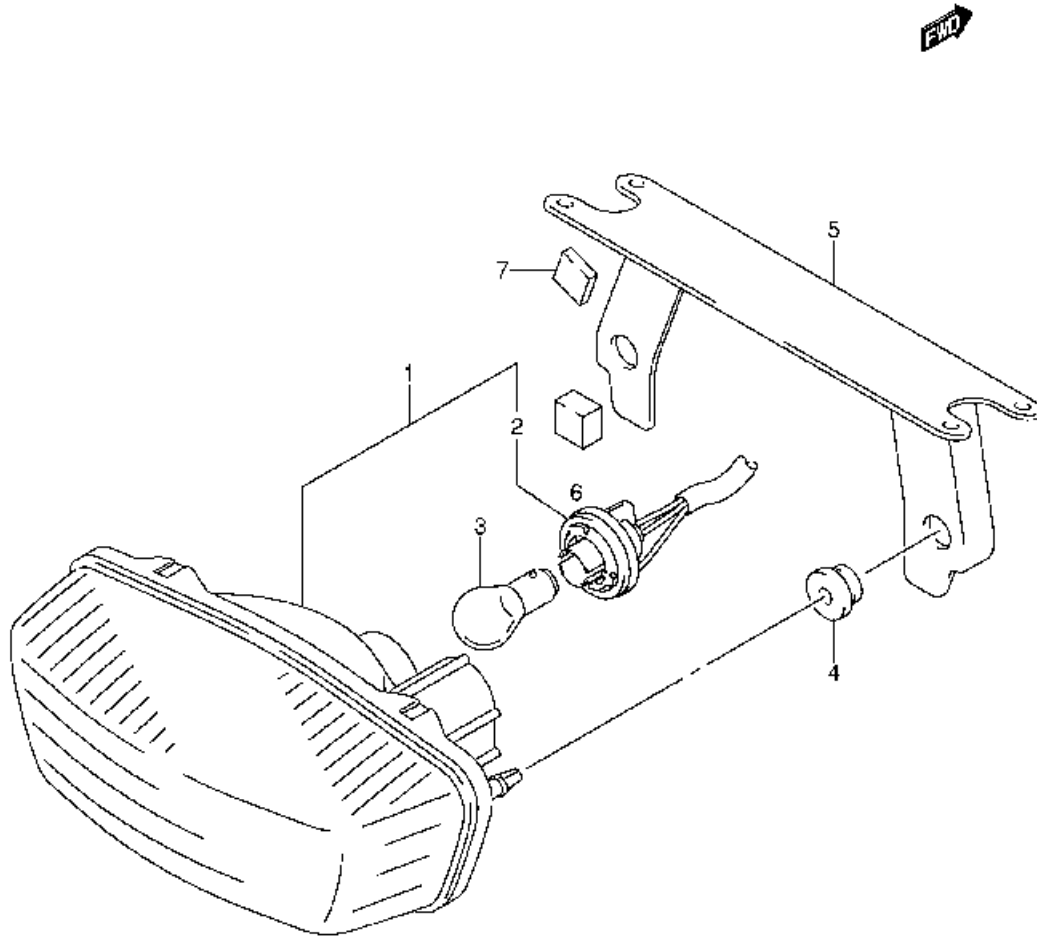 


Ref No	Part No	Description
1	35710-03G00	Lamp Assy, Rear Comb
2	35718-03G00	• . Socket & Cord Assy
3	09471-12083	• . Bulb (12v,21/5w)
4	09320-06023	Cushion
5	33652-05G20	Cushion (12x17x17)
6	33652-07G10	Cushion (6x17x17)

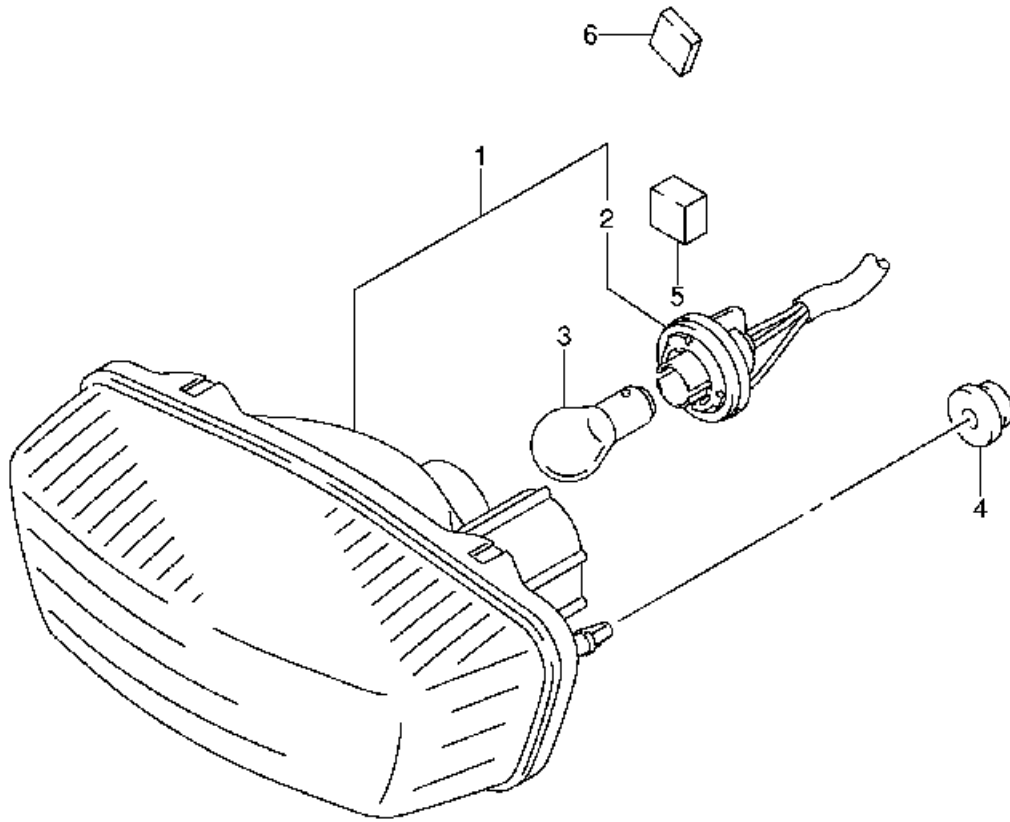 


Ref No	Part No	Description
1	35710-03G00	Lamp Assy, Rear Comb
2	35718-03G00	• . Socket/cord Assy
3	09471-12083	• . Bulb (12v,21/5w)
4	09320-06023	Cushion
5	35726-07G10	Bracket, Rear Comb
6	35970-14A10	Reflector Assy, Rear Side
7	35975-07G00	Bracket, Rear Side Rr Rh
8	02142-06163	Screw, Rr Side Rr Bkt
9	08316-10053	Nut, Rr Side Rr
10	08316-10063	Nut, Rr Side Rr Bkt
11	33652-05G20	Cushion (12x17x17)
12	33652-07G10	Cushion (6x17x17)
13	35970-07F00	Reflector Assy, Rear
14	08316-10053	Nut

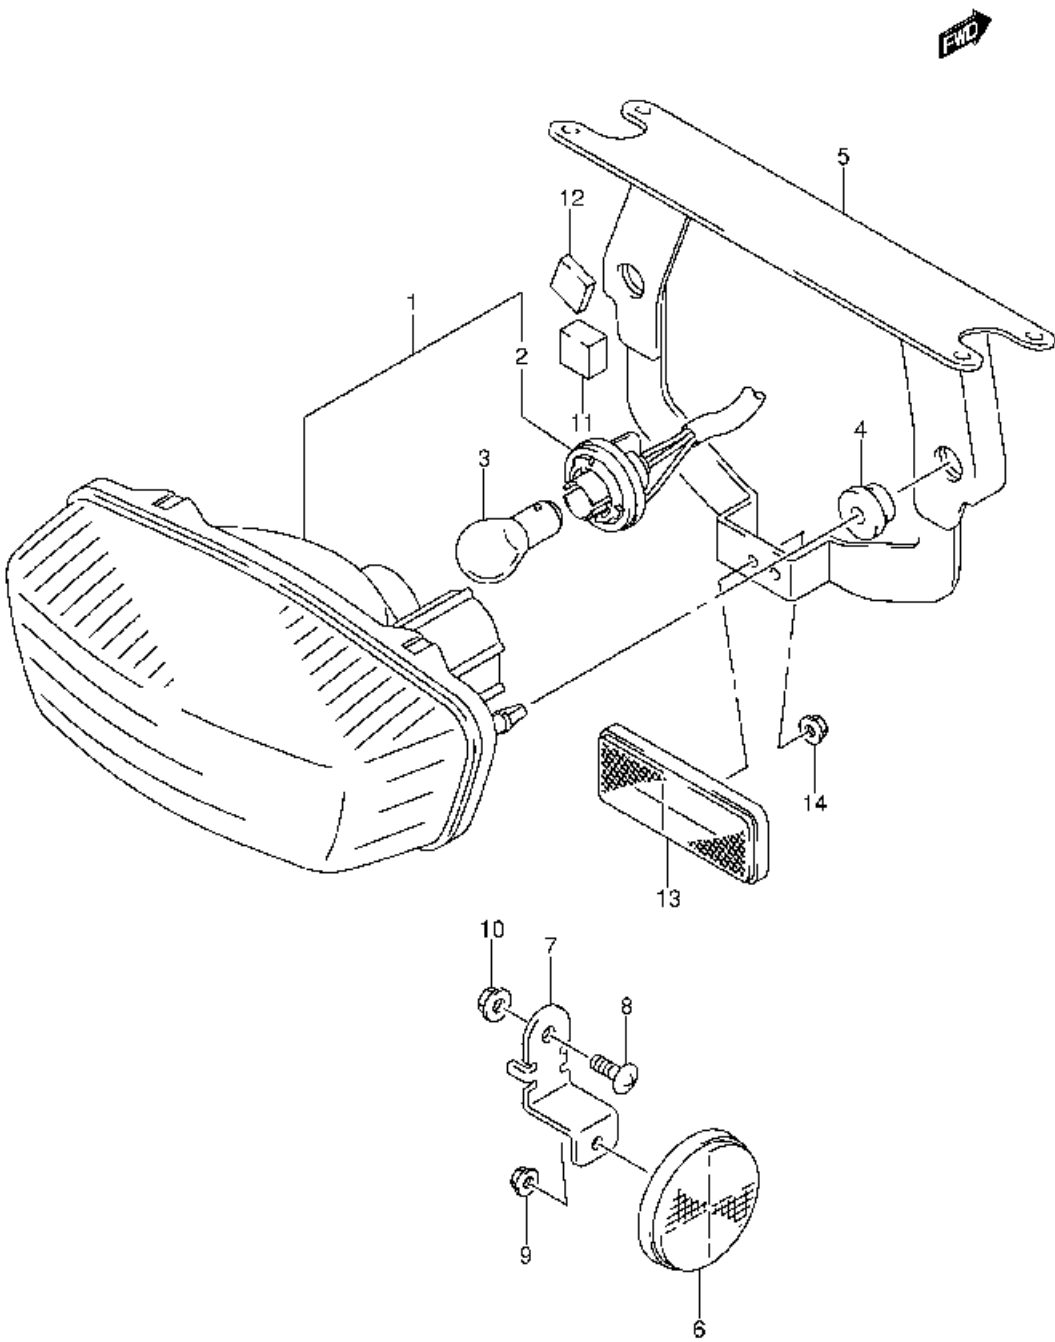 


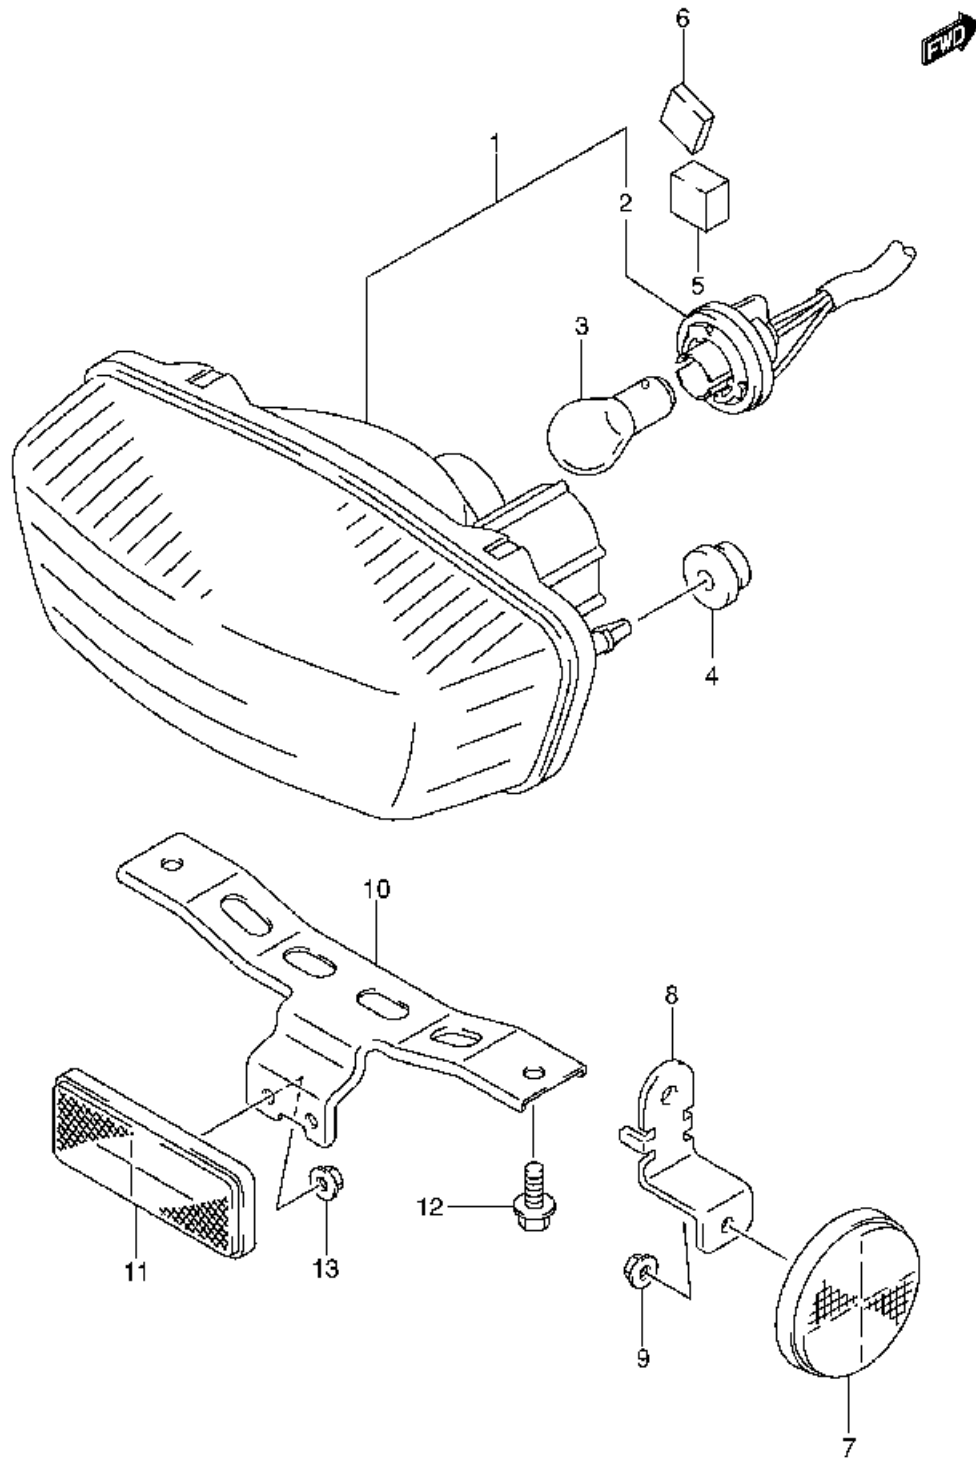 


Ref No	Part No	Description
1	35710-03G00	Lamp Assy, Rear Comb
2	35718-03G00	• . Socket/cord Assy
3	09471-12083	• . Bulb (12v,21/5w)
4	09320-06023	Cushion
5	33652-05G20	Cushion (12x17x17)
6	33652-07G10	Cushion (6x17x17)
7	35970-14A10	Reflector Assy, Rear Side
8	35975-07G00	Bracket, Rear Side Rr Rh
9	08316-10053	Nut, Rr Side Rr
10	35726-07G20	Bracket, Rear Rr
11	35970-07F00	Reflector Assy, Rr
12	02162-06163	Screw, Rr Bkt
13	08316-10053	Nut

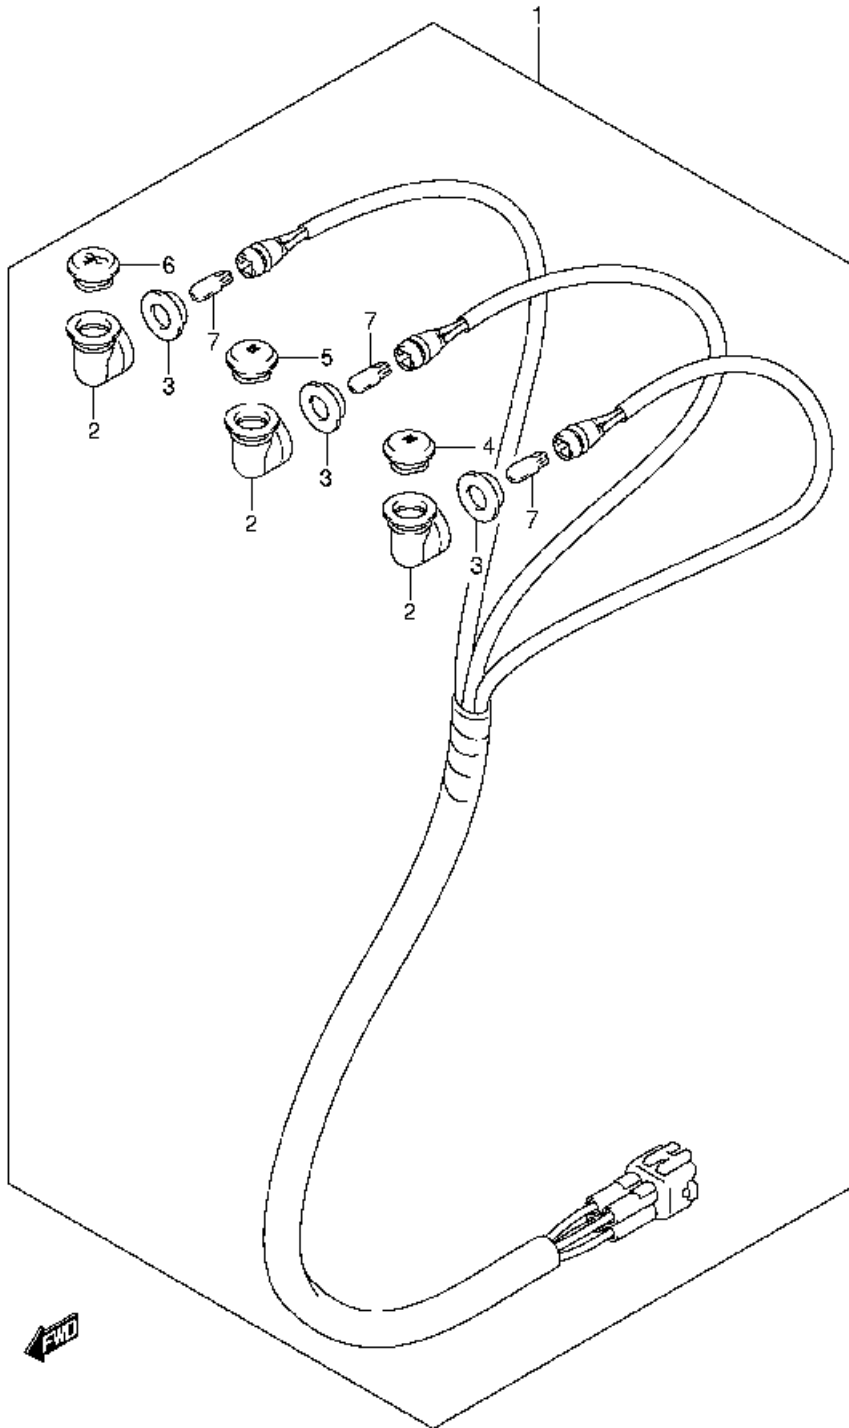 


Ref No	Part No	Description
1	36380-07G00	Lamp Assy, Pilot
2	34173-26F00	. Socket
3	34178-26F00	. Ring
4	36321-05G00	. Lens, Neutral (green)
5	36329-05G00	. Lens, Reverse (red)
6	36361-05G00	. Lens, Water Temp (red)
7	09471-12103	. Bulb (14v,3w,t6.5)

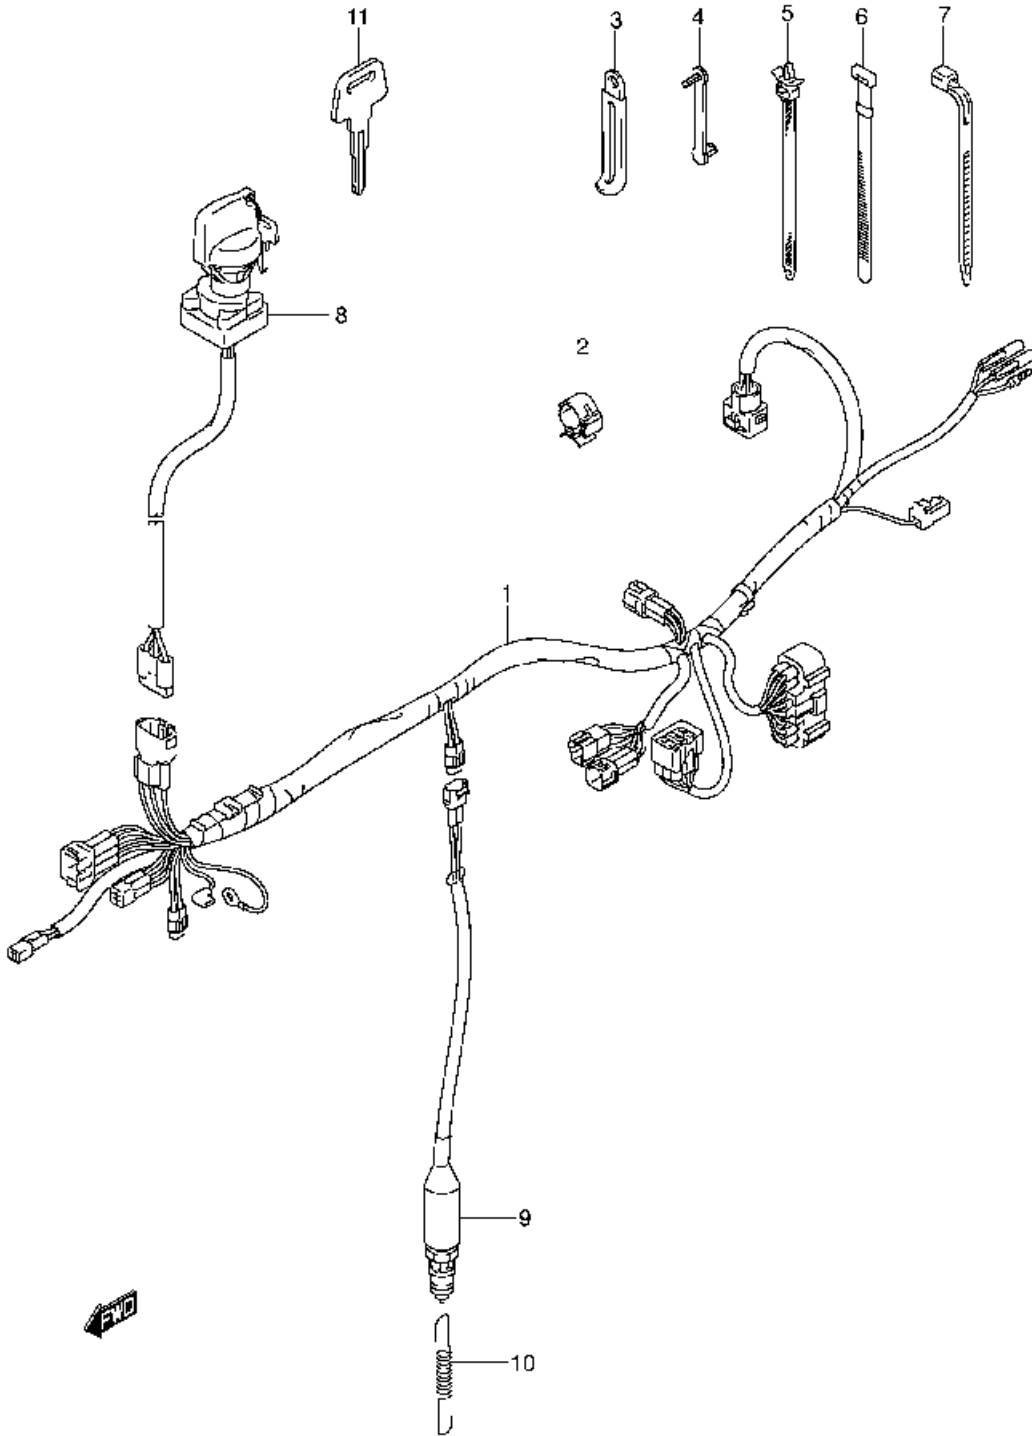 

Ref No	Part No	Description
1	36610-07G00	Harness, Wiring
2	09403-20403	Clamp
3	09404-06435	Clamp (l:135)
4	09407-03401	Clamp (l:33)
5	09407-11402	Clamp (l:90)
6	09407-12402	Clamp (l:120)
7	09407-14403	Clamp (l:125)
8	37110-07G00	Switch Assy, Ignition
9	37740-07G00	Switch Assy, Stop Lamp
10	09443-06073	Spring
11	37146-19B00	Key, Blank (type:c)
11	37146-19B10	Key, Blank (type:d)
11	37146-19B20	Key, Blank (type:e)
11	37146-19B30	Key, Blank (type:f)

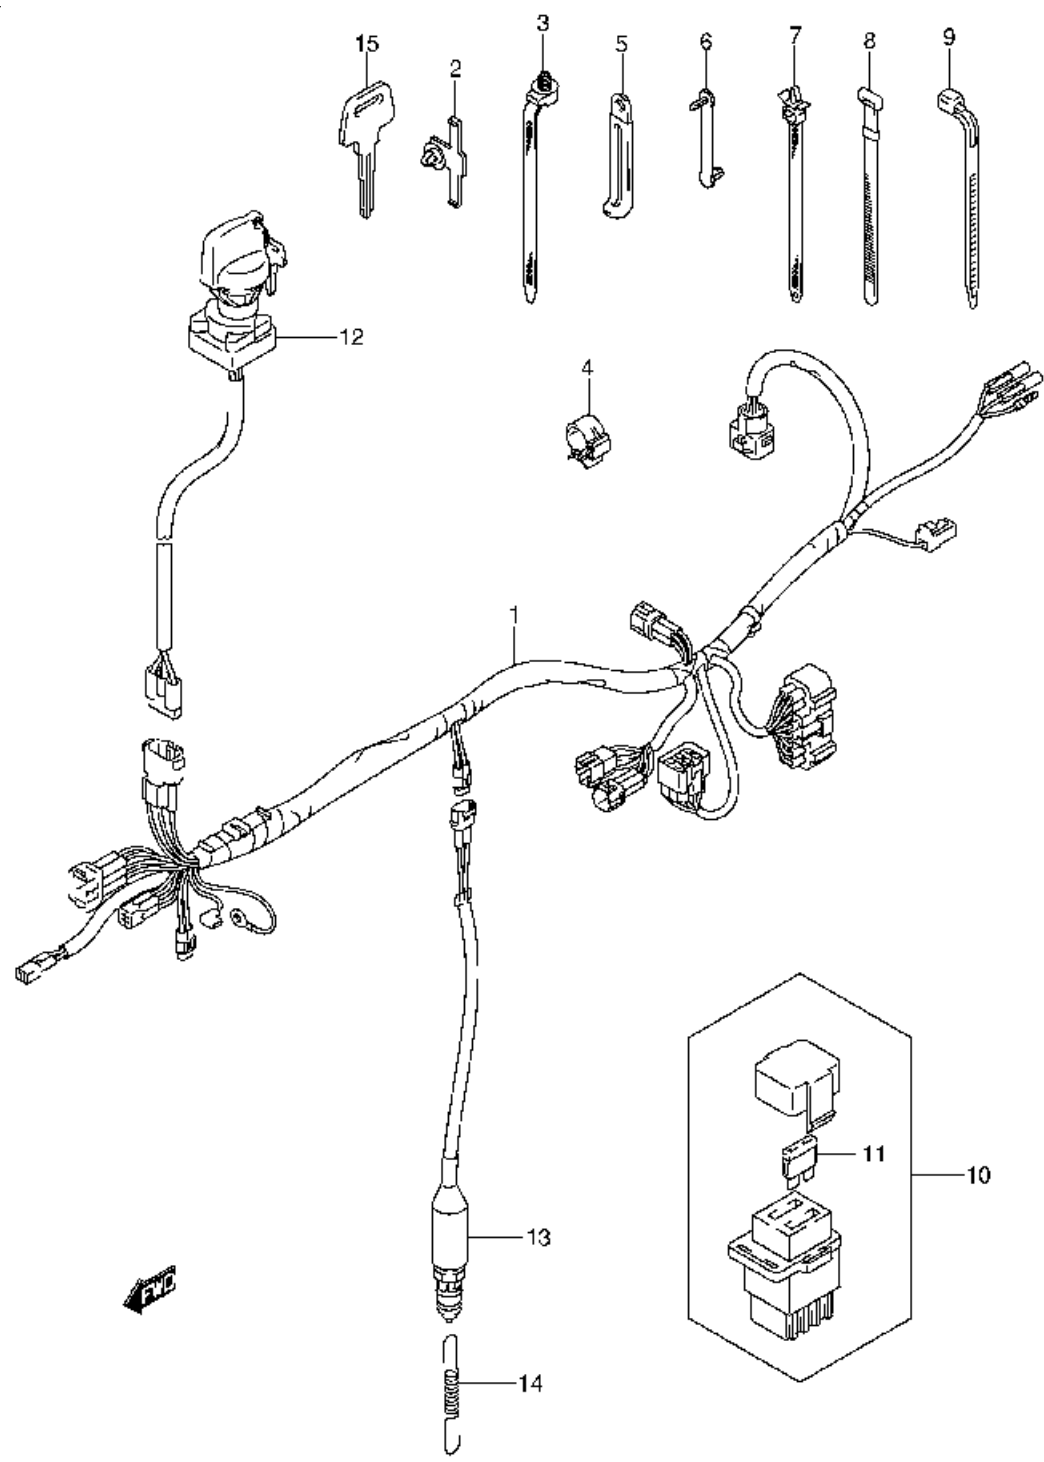 


Ref No	Part No	Description
1	36610-07G10	Harness, Wiring
2	09407-05411	• . Clamp
3	09407-17403	• . Clamp
4	09403-20403	Clamp
5	09404-06435	Clamp (l:135)
6	09407-03401	Clamp (l:33)
7	09407-11402	Clamp (l:90)
8	09407-12402	Clamp (l:120)
9	09407-14403	Clamp (l:125)
10	36740-19B10	Box Assy, Cooling Fan Fuse
11	09481-10101	• . Fuse (10a)
12	37110-07G00	Switch Assy, Ignition
13	37740-07G00	Switch Assy, Stop Lamp
14	09443-06073	Spring
15	37146-19B00	Key, Blank (type:c)
15	37146-19B10	Key, Blank (type:d)
15	37146-19B20	Key, Blank (type:e)
15	37146-19B30	Key, Blank (type:f)

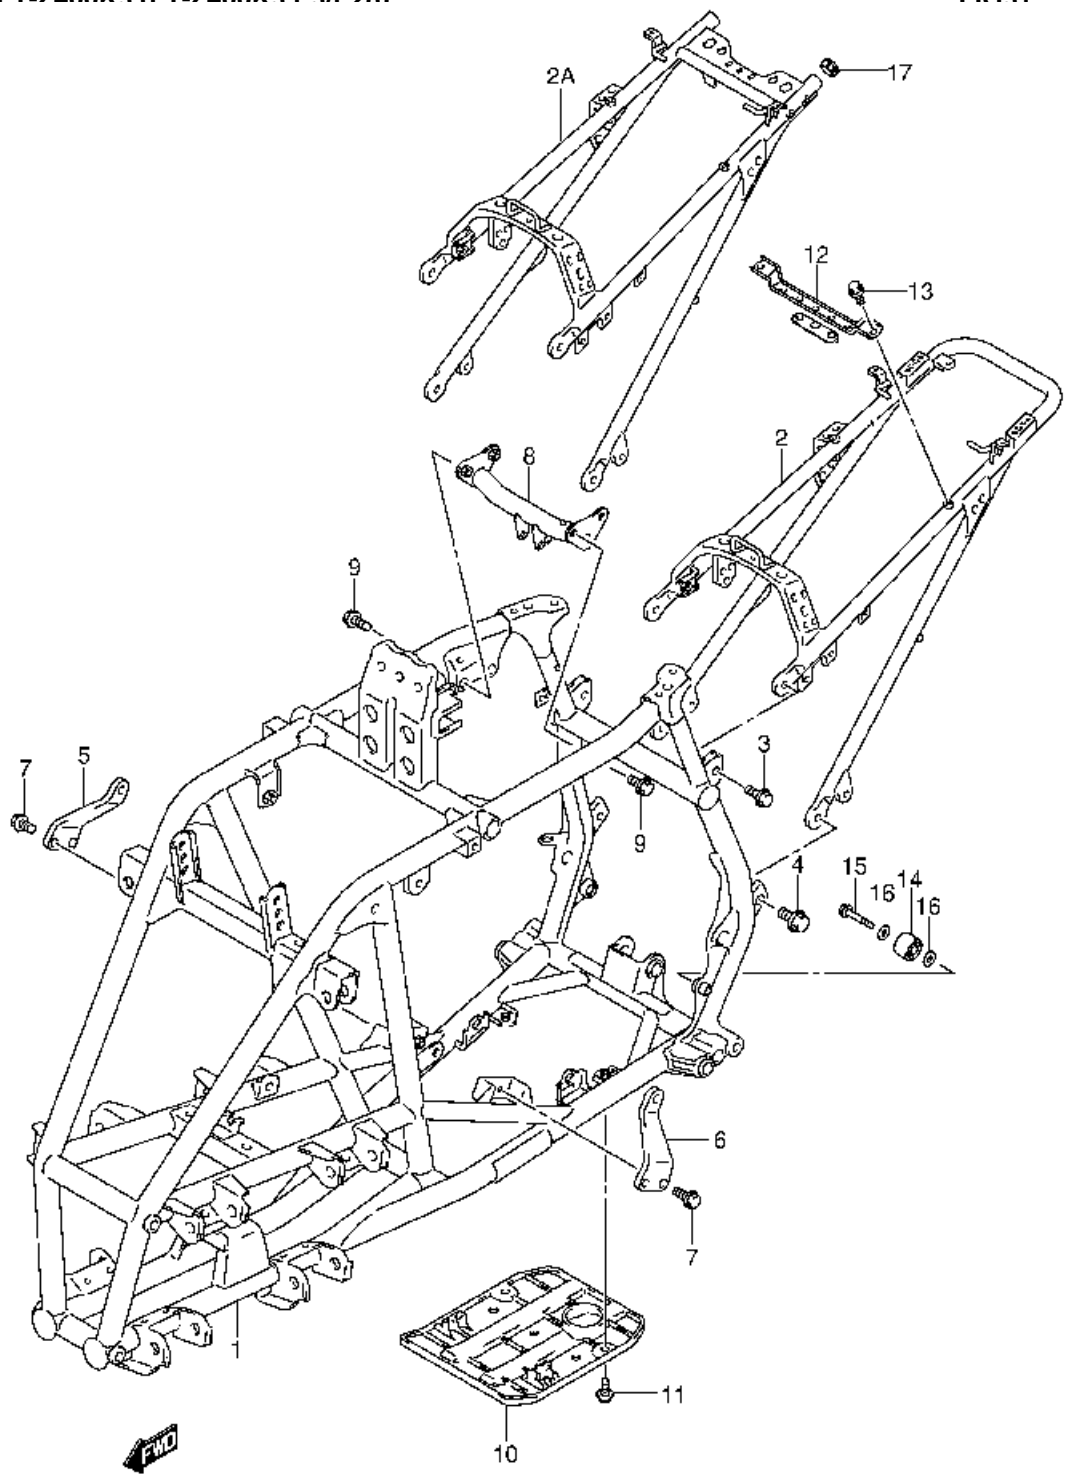 



Ref No	Part No	Description
1	41100-07G10-YU8	Frame (gray)
2a	41200-07G10-YD8	Rail, Seat (silver)
2a	41200-07G20-YD8	Rail, Seat (silver)
3	09103-08266	Bolt, Upper
4	09103-10293	Bolt, Lower
5	41911-07G00	Plate, Mount Front Rh
6	41912-07G00	Plate, Mount Front Lh
7	01550-08203	Bolt
8	41990-07G00	Plate, Mount Upper
9	01550-08163	Bolt
10	42511-07G00	Protector, Engine
11	09111-06063	Bolt
12	41560-07G00	Plate, Battery
13	01550-06163	Bolt
14	43910-37F00	Roller, Chain Control
15	09103-08083	Bolt
16	09181-08111	Washer
17	43978-24500	Cap, Seat Rail

Ref No	Part No	Description
1	43110-07G10	Pedal, Brake
2	09280-14011	O Ring
3	01550-06653	Bolt
4	09160-06138	Washer
5	08319-21063	Nut
6	09443-12019	Spring, Return

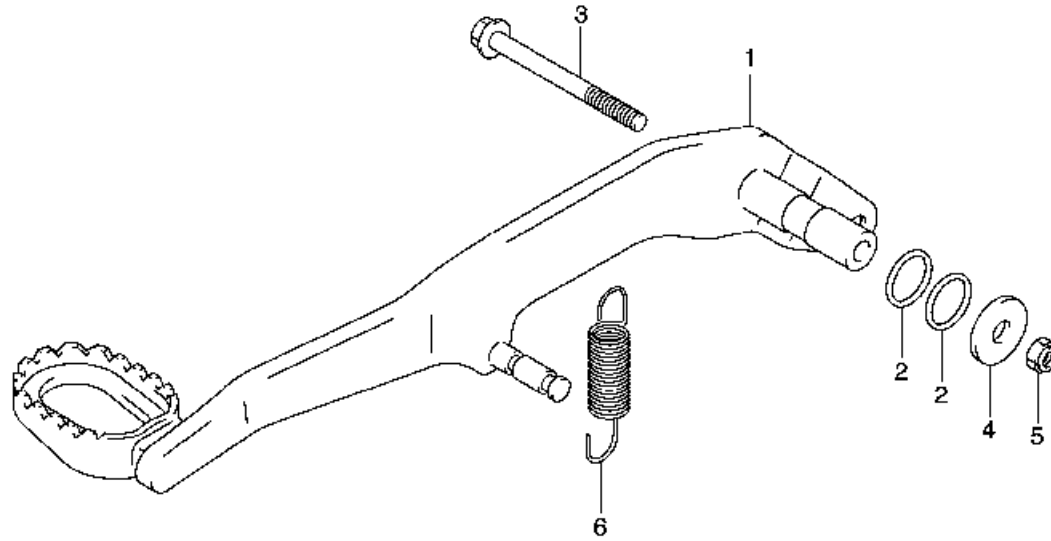 


Ref No	Part No	Description
1	43510-07G10	Footrest, Rh
2	43520-07G10	Footrest, Lh
3	09103-10275	Bolt
4	43570-07G10	Reinforce, Mudguard Rh
5	43580-07G10	Reinforce, Mudguard Lh
6	09103-08266	Bolt
7	43990-07G00-YD8	Grip, Front (silver)
8	01550-08163	Bolt
9	43980-07G10-YD8	Grip, Rear (silver)
10	01550-08203	Bolt

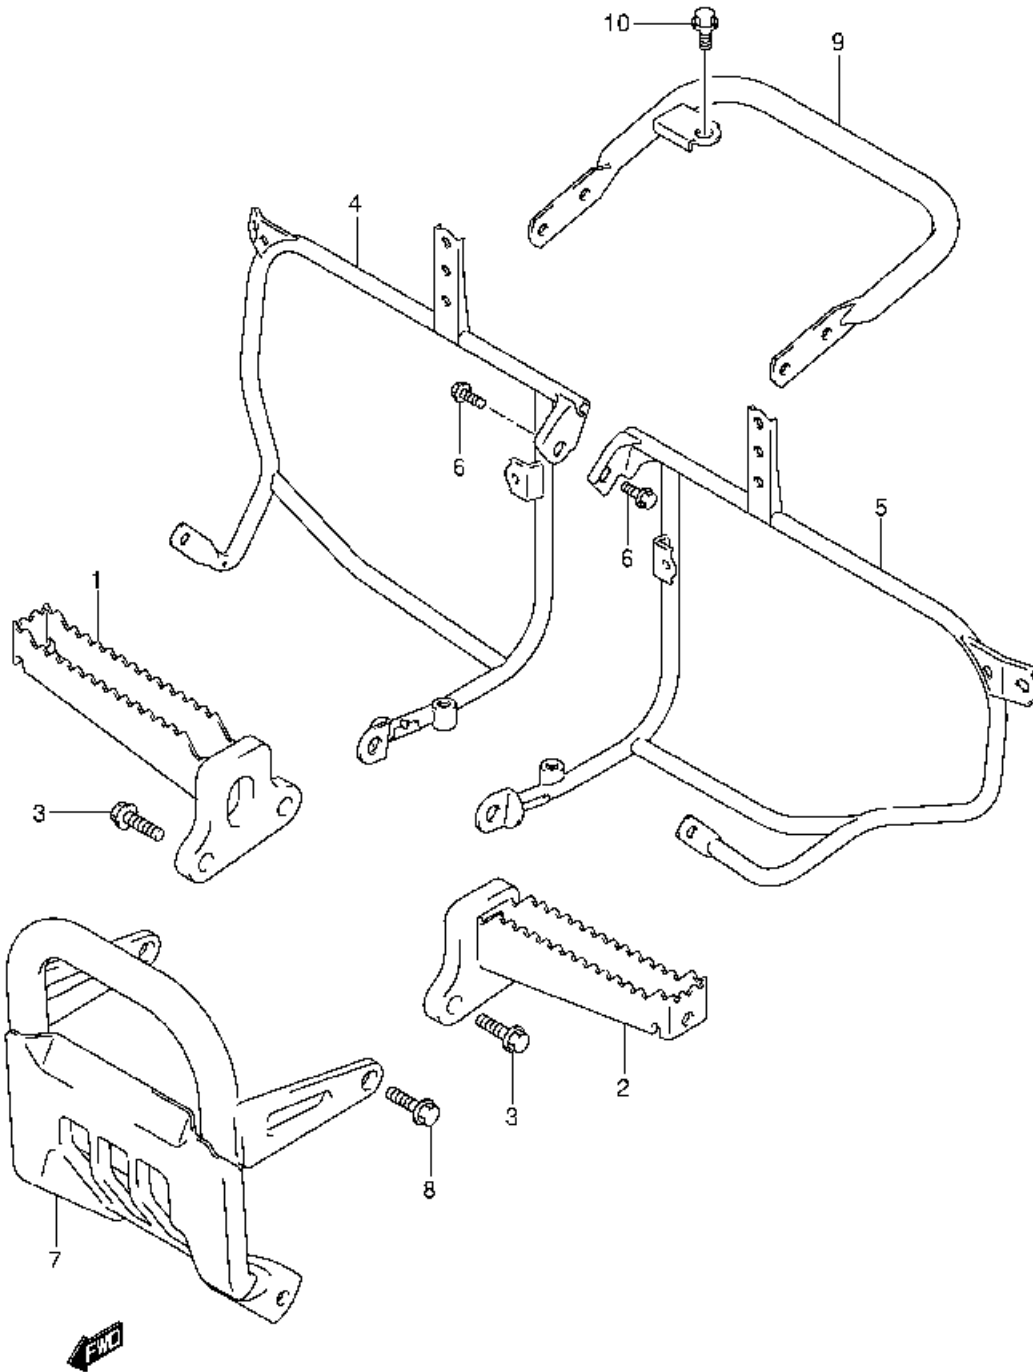 

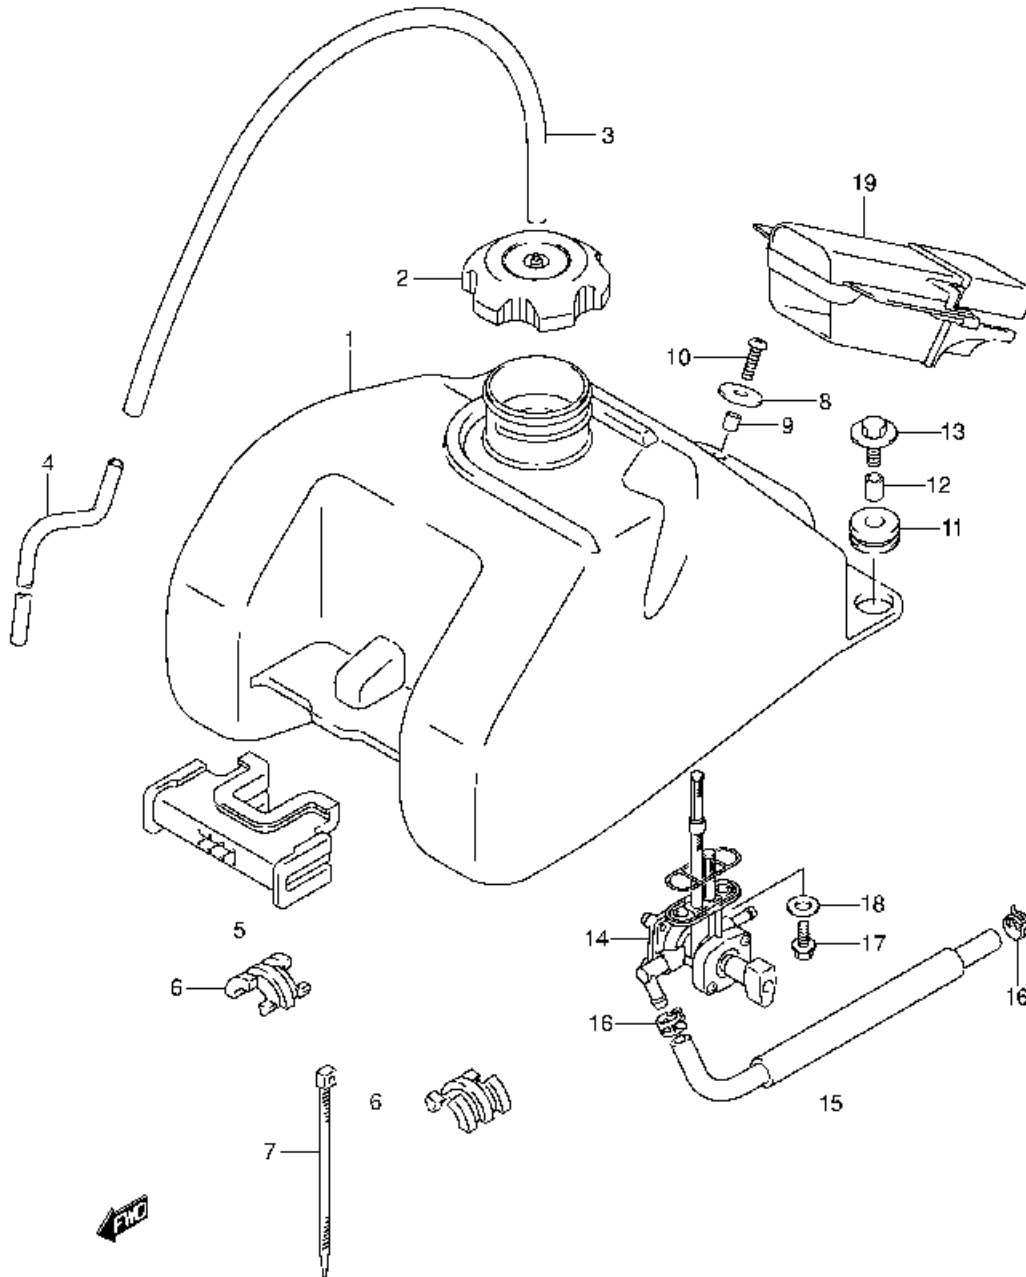 



Ref No	Part No	Description
1	44100-07G00	Tank Assy, Fuel
2	44200-29F00	Cap Assy, Fuel Tank
3	09352-50823-600	Hose, Breather (l:600->90)
4	44425-20E00	Hose, Breather No.2
5	44511-03G00	Cushion, Front
6	44542-07G00	Cushion, Side
7	09407-14407	Clamp
8	09160-06136	Washer, Seat Hook
9	09180-06286	Spacer
10	02142-06203	Screw
11	44281-03G00	Cushion, Rear
12	09180-06293	Spacer
13	09116-06190	Bolt
14	44300-07G00	Cock Assy, Fuel
15	44420-07G00	Hose, Fuel
16	09401-11407	Clip
17	01547-06163	Bolt
18	09168-06026	Gasket
19	47150-07G00	Cover, Cleaner Inlet Duct

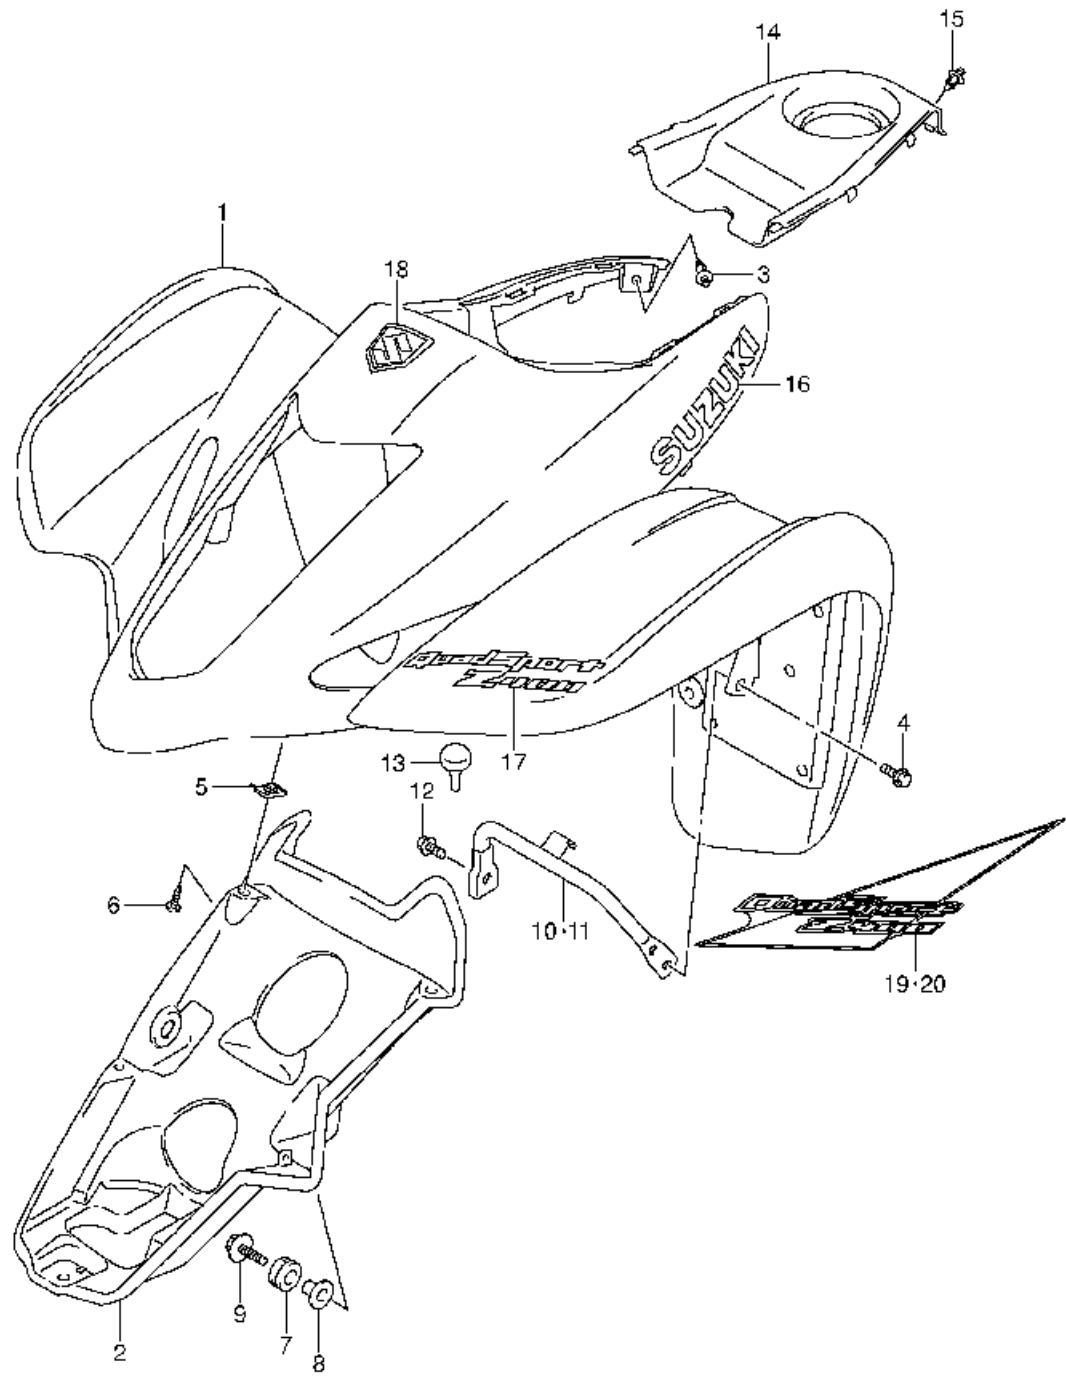 


Ref No	Part No	Description
1	53111-07G00-YU1	Fender, Front (yellow)
1	53111-07G00-30H	Fender, Front (white)
2	53118-07G01	Fender, Front Lower
3	09409-07333	Clip
4	09111-06063	Bolt
5	09148-05038	Nut
6	03541-05163	Screw
7	09320-11008	Cushion
8	09169-06074	Spacer
9	01550-06253	Bolt
10	53210-07G00	Bracket, Rh
11	53220-07G00	Bracket, Lh
12	09103-06083	Bolt
13	09321-06033	Cushion
14	53119-07G00-YU1	Fender, Center (yellow)
14	53119-07G00-30H	Fender, Center (white)
15	09409-07333	Clip
16	68111-01C20-GY8	Emblem, "suzuki"
16	68111-01C20-8YM	Emblem, "suzuki"
17	68151-07G00-NA2	Emblem, "quad sport"
17	68151-07G00-NN7	Emblem, "quad sport"
18	68281-07G00	Emblem, "s"

Ref No	Part No	Description
1	53112-07G00-YU1	Cover, Side Rh (yellow)
1	53112-07G00-019	Cover, Side Rh (black)
2	53122-07G00-YU1	Cover, Side Lh (yellow)
2	53122-07G00-019	Cover, Side Lh (black)
3	09409-07333	Clip
4	53145-07G00	Cushion
7	68155-07G20-KD2	Tape, Side Rh
7	68155-07G20-YDS	Tape, Side Rh
8	68156-07G20-KD2	Tape, Side Lh
8	68156-07G20-YDS	Tape, Side Lh

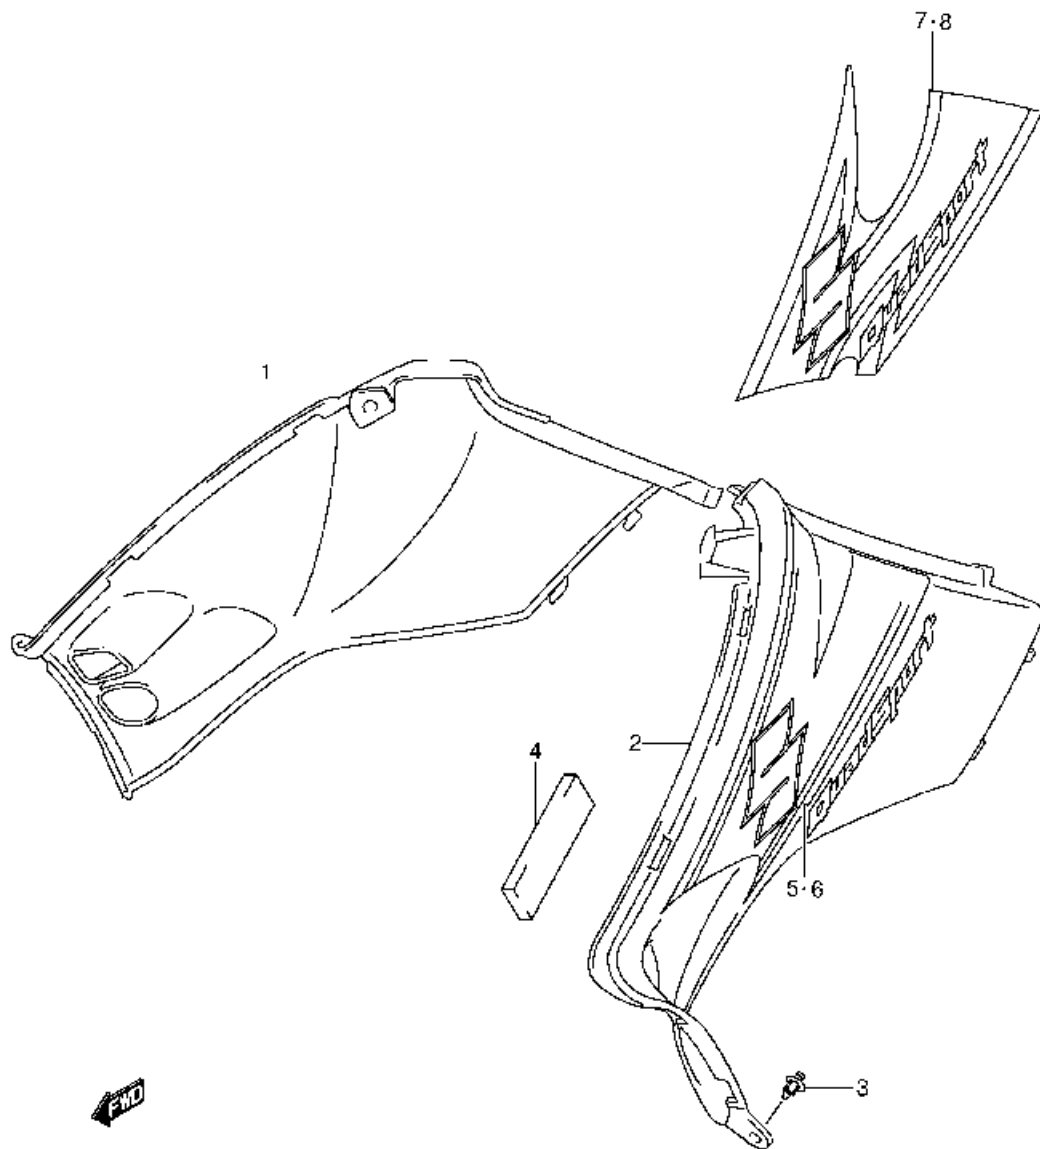 

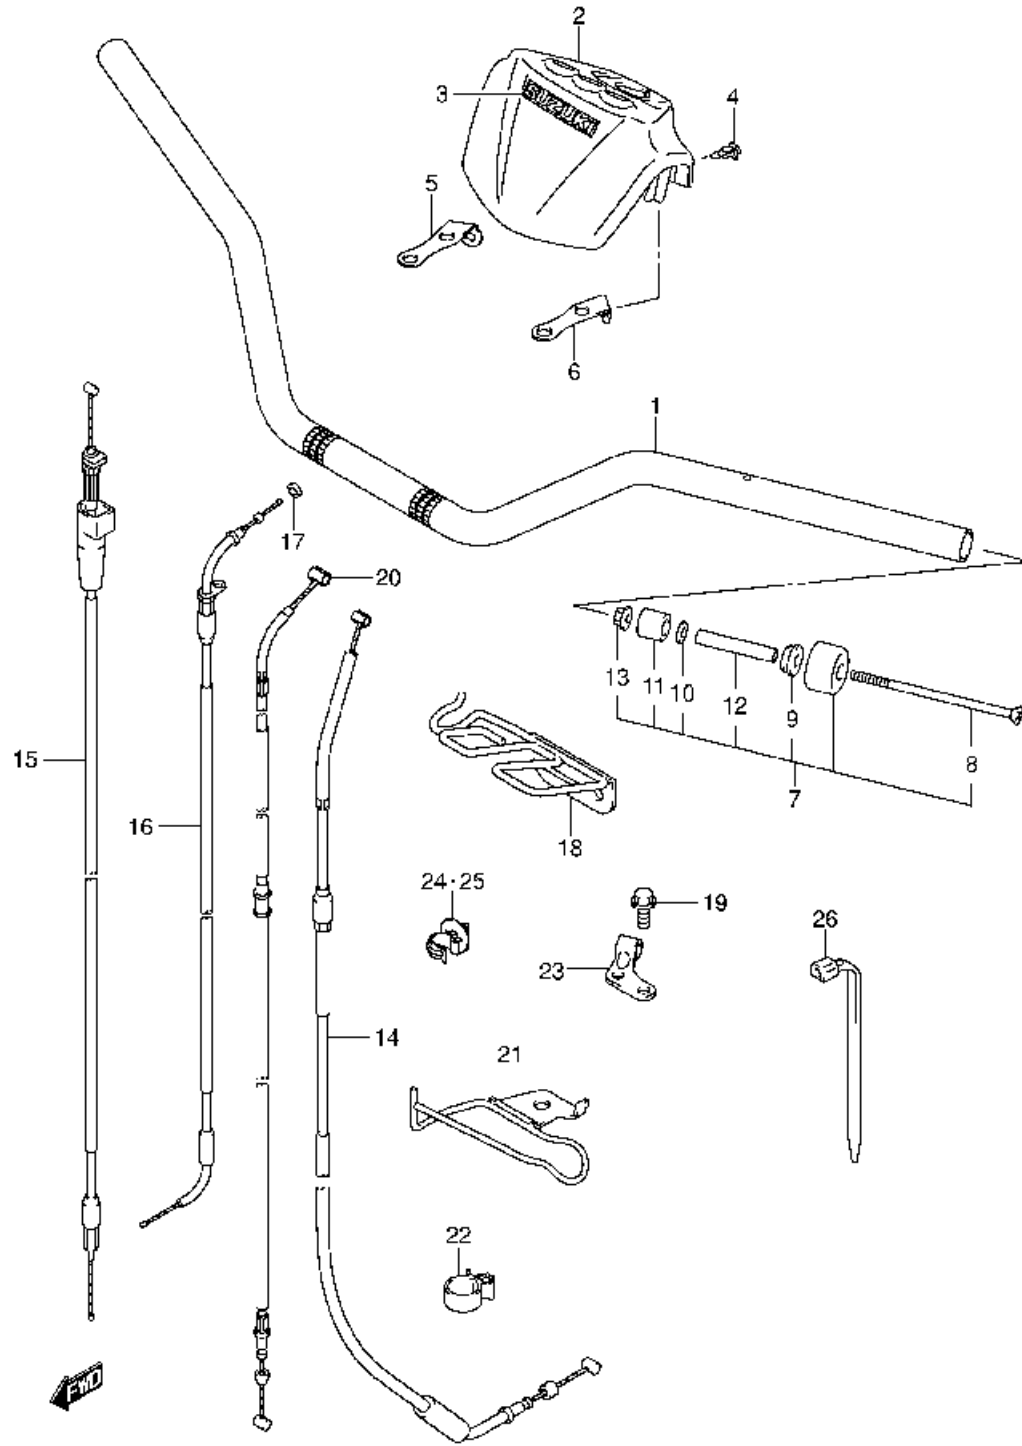 


Ref No	Part No	Description
1	56111-07G10	Handlebar
2	56171-07G00-GY8	Cover, Steering Head
2	56171-07G00-60K	Cover, Steering Head
3	68721-05D00-GY8	Emblem
3	68721-05D00-8YM	Emblem
4	09409-06314-5PK	Clip (black)
5	56411-07G00	Bracket, Rh
6	56421-07G00	Bracket, Lh
7	56200-07850	Balancer Set, Handlebar
8	09127-06018	. . Screw
9	56272-23F00	. . Expander
10	09160-06126	. . Washer
11	56272-42F00	. . Expander
12	56276-17D00	. . Spacer
13	09159-06024	. . Nut
14	58200-07G00	Cable, Clutch
15	58300-07G00	Cable Assy, Throttle
16	58410-07G00	Cable, Starter
17	09320-06503	Washer
18	58620-07G00	Guide, Cable
19	09103-06092	Bolt
20	58810-07G10	Cable, Parking Brake
21	58631-07G10	Guide, Parking Cable
22	09403-14304	Clamp
23	58634-29F00	Stopper, Cable
24	09403-07325	Clamp
25	09403-07327	Clamp
26	09407-14403	Clamp, Cable

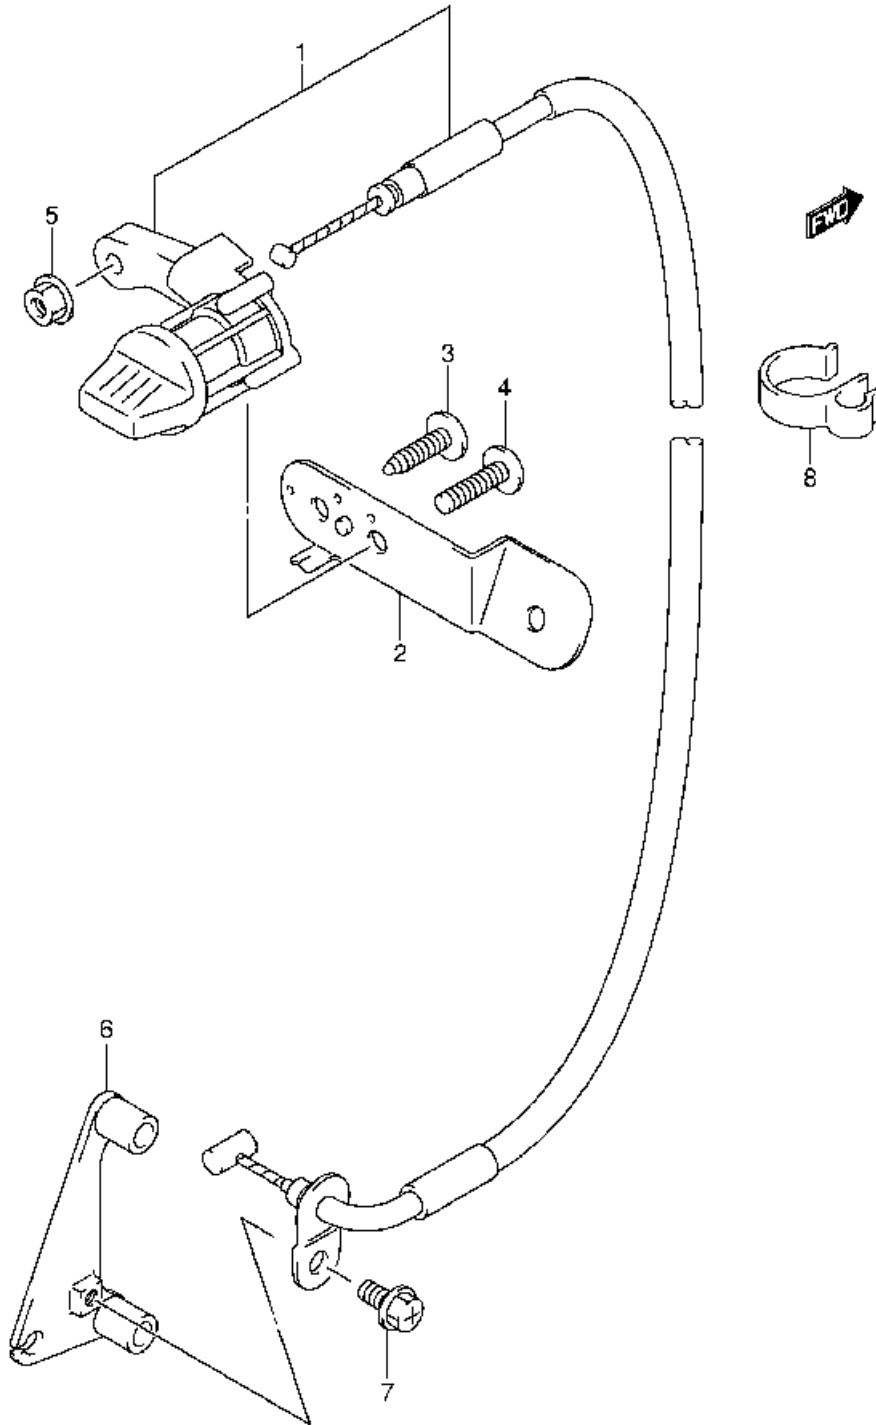 


Ref No	Part No	Description
1	57900-07860	Knob Set, Reverse Lock
2	57940-07G00	Bracket, Knob
3	03541-05203	Screw
4	02142-05203	Screw
5	08316-10053	Nut
6	58850-07G00	Bracket, Reverse Cable
7	02162-05103	Bolt
8	09408-00044	Clip

 HANDLE LEVER (MODEL K3)

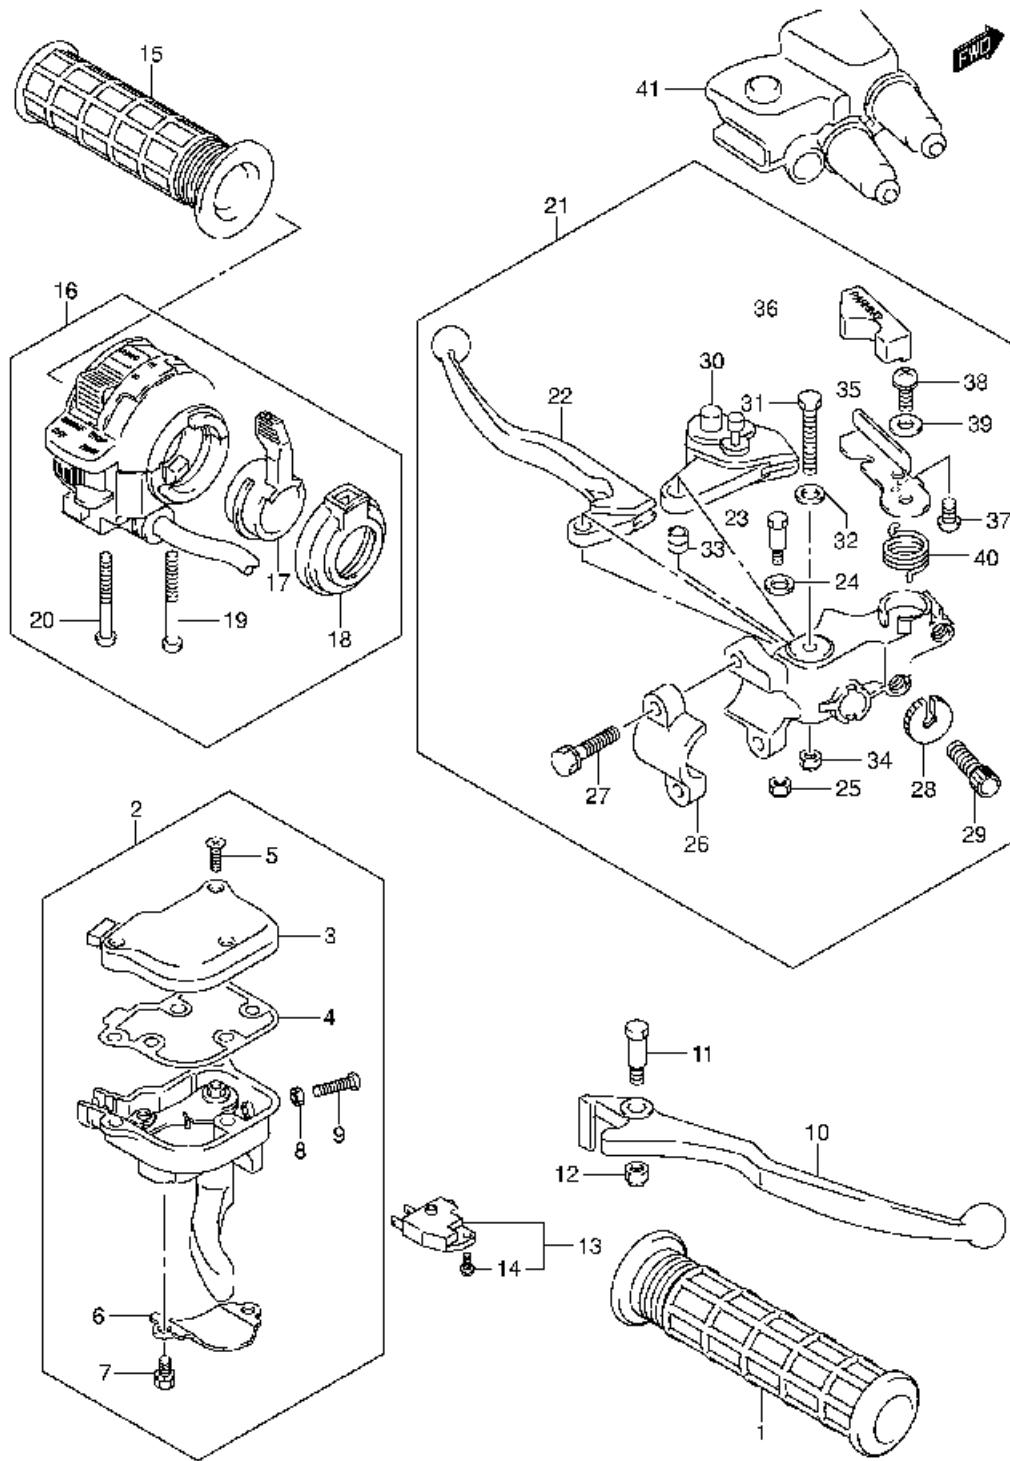


Ref No	Part No	Description
1	57211-22A01-291	Grip (black)
2	57100-07G00	Case Assy, Throttle
3	57121-07G00	. . Cap
4	57157-07G00	. . Gasket
5	57128-07G00	. . Screw
6	57126-07G00	. . Holder
7	57127-07G00	. . Bolt
8	08310-00053	. . Nut
9	02112-05203	. . Screw
10	57421-39D20	Lever, Front Brake
11	57431-04F00	Bolt, Pivot
12	57433-09F00	Nut
13	57460-17C00	Switch Assy, Stop
14	57465-17C00	. . Screw
15	57211-22A01-291	Grip (black)
16	37400-07G00	Switch Assy, Handle Lh
17	37571-19B01	. . Lever, Choke
18	37576-19B01	. . Cover, Choke
19	02112-05457	. . Screw
20	02112-05407	. . Screw
21	57500-07G00	Lever Set, Clutch
22	57621-07G00	. . Lever
23	57513-07G00	. . Bolt, Pivot
24	57432-07G00	. . Washer
25	08319-21063	. . Nut
26	57512-07G00	. . Holder
27	01547-06203	. . Bolt
28	57442-07G00	. . Nut, Adjuster
29	57441-45C00	. . Bolt, Adjuster
30	57800-07850	. . Lock Set, Parking Lock
31	57431-07G00	. . Bolt, Parking Lock
32	57433-07G00	. . Washer
33	57623-07G00	. . Spacer
34	08319-21063	. . Nut
35	57700-07850	. . Knob Set, Parking
36	57619-07G00	. . Screw, Parking Plate
37	57618-07G00	. . Washer
38	57624-07G00	. . Spring, Return
39	57541-07G00	Cover, Lever

 
HANDLE LEVER (MODEL K4)

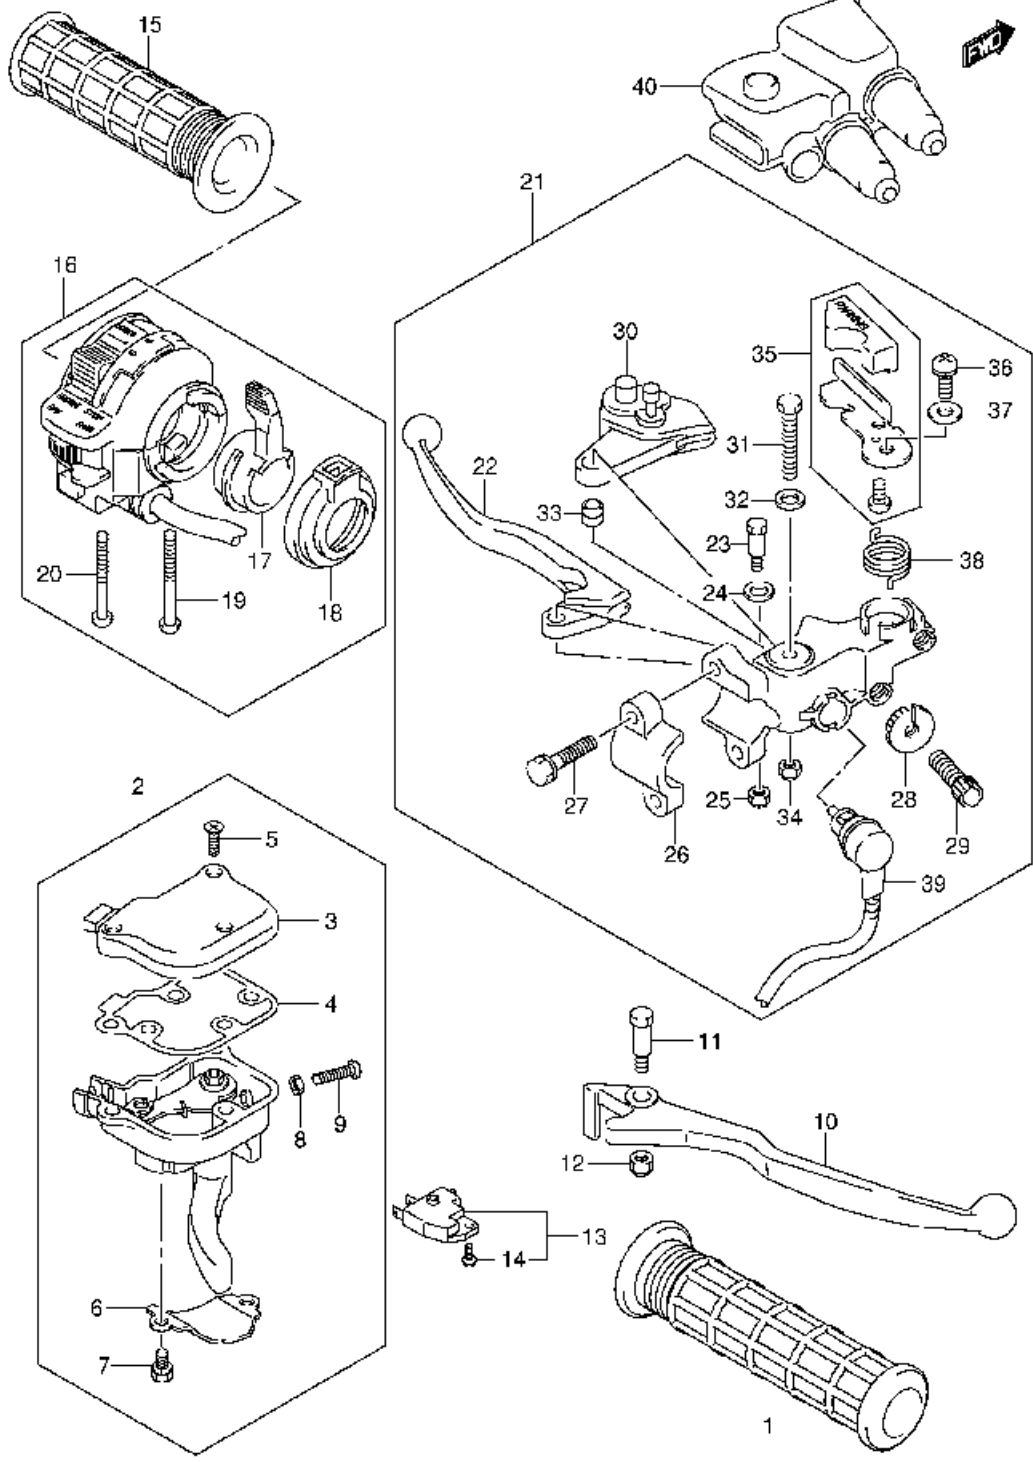


Ref No	Part No	Description
1	57211-03G10	Grip
2	57100-38F50	Case Assy, Throttle
3	57121-38F50	. . Cap
4	57157-38F50	. . Gasket
5	57128-07G00	. . Screw
6	57126-07G00	. . Holder
7	57127-07G00	. . Bolt
8	08310-00053	. . Nut
9	02112-05203	. . Screw
10	57421-39D20	Lever, Front Brake
11	57431-04F00	Bolt, Pivot
12	57433-09F00	Nut
13	57460-17C11	Switch Assy, Stop
14	57465-17C00	. . Screw
15	57211-03G10	Grip
16	37400-07G10	Switch Assy, Handle Lh
17	37571-19B01	. . Lever, Choke
18	37576-19B01	. . Cover, Choke
19	02112-05457	. . Screw
20	02112-05407	. . Screw
21	57500-07G01	Lever Set, Clutch
22	57621-07G00	. . Lever
23	57513-07G00	. . Bolt, Pivot
24	57432-07G00	. . Washer
25	08319-21063	. . Nut
26	57512-07G00	. . Holder
27	01547-06203	. . Bolt
28	57442-07G00	. . Nut, Adjuster
29	57441-45C00	. . Bolt, Adjuster
30	57800-07850	. . Lock Set, Parking Lock
31	57431-07G00	. . Bolt, Parking Lock
32	57433-07G00	. . Washer
33	57623-07G00	. . Spacer
34	08319-21063	. . Nut
35	57700-07850	. . Knob Set, Parking
36	57619-07G00	. . Screw, Parking Plate
37	57618-07G00	. . Washer
38	57624-07G00	. . Spring, Return
39	57560-07G10	. . Switch Assy, Clutch
40	57541-07G00	Cover, Lever

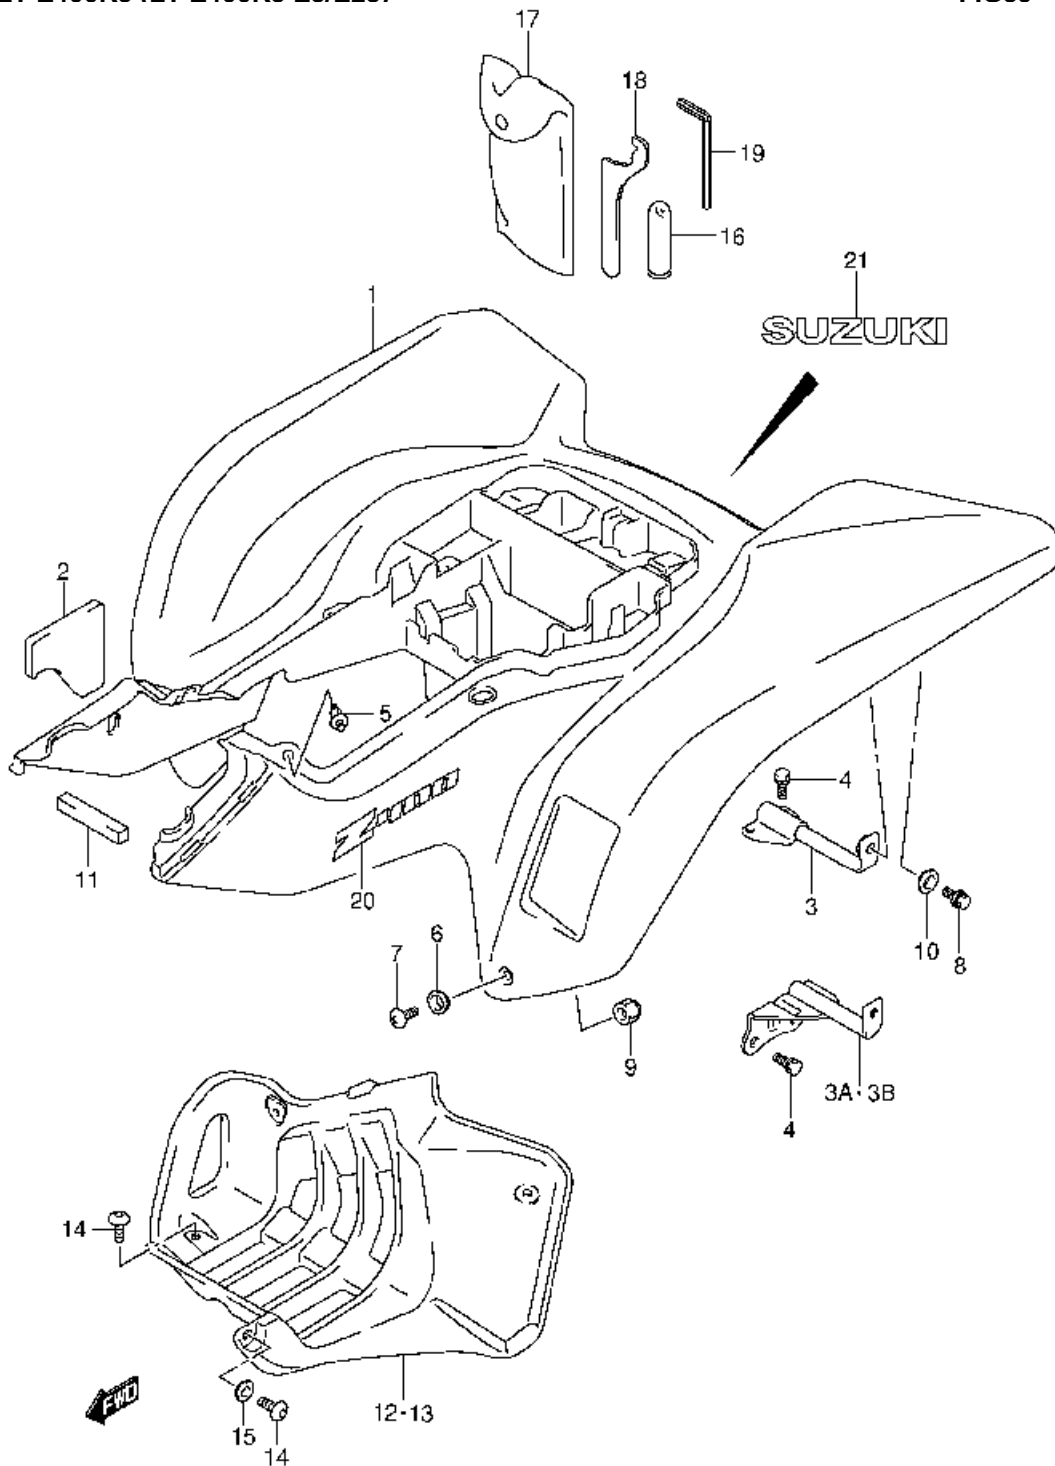 

Ref No	Part No	Description
1	63111-07G00-YU1	Fender, Rear (yellow)
1	63111-07G00-30H	Fender, Rear (white)
2	63261-07G00	Shield
3a	63140-07G10	Bracket, Rh
3b	63150-07G10	Bracket, Lh
4	01570-06163	Bolt
5	09409-07333	Clip
6	09169-06045	Washer, Front
7	09139-06109	Bolt
8	01570-06203	Bolt, Rear
9	08319-21063	Nut
10	09169-06045	Washer Rear
11	63129-07G00	Cushion
12	63331-07G00-291	Mudguard, Footrest Rh (black)
13	63341-07G00-291	Mudguard, Footrest Lh (black)
14	09139-06109	Bolt
15	09169-06071	Washer
16	96200-18A02	Gauge, Air
17	09800-21046	Tool Assy
18	09822-00004	Clamp, Wrench
19	09816-00103	Hexagon Spanner, 4
21	68111-19B30-GY8	Emblem, "suzuki"
21	68111-19B30-8YM	Emblem, "suzuki"

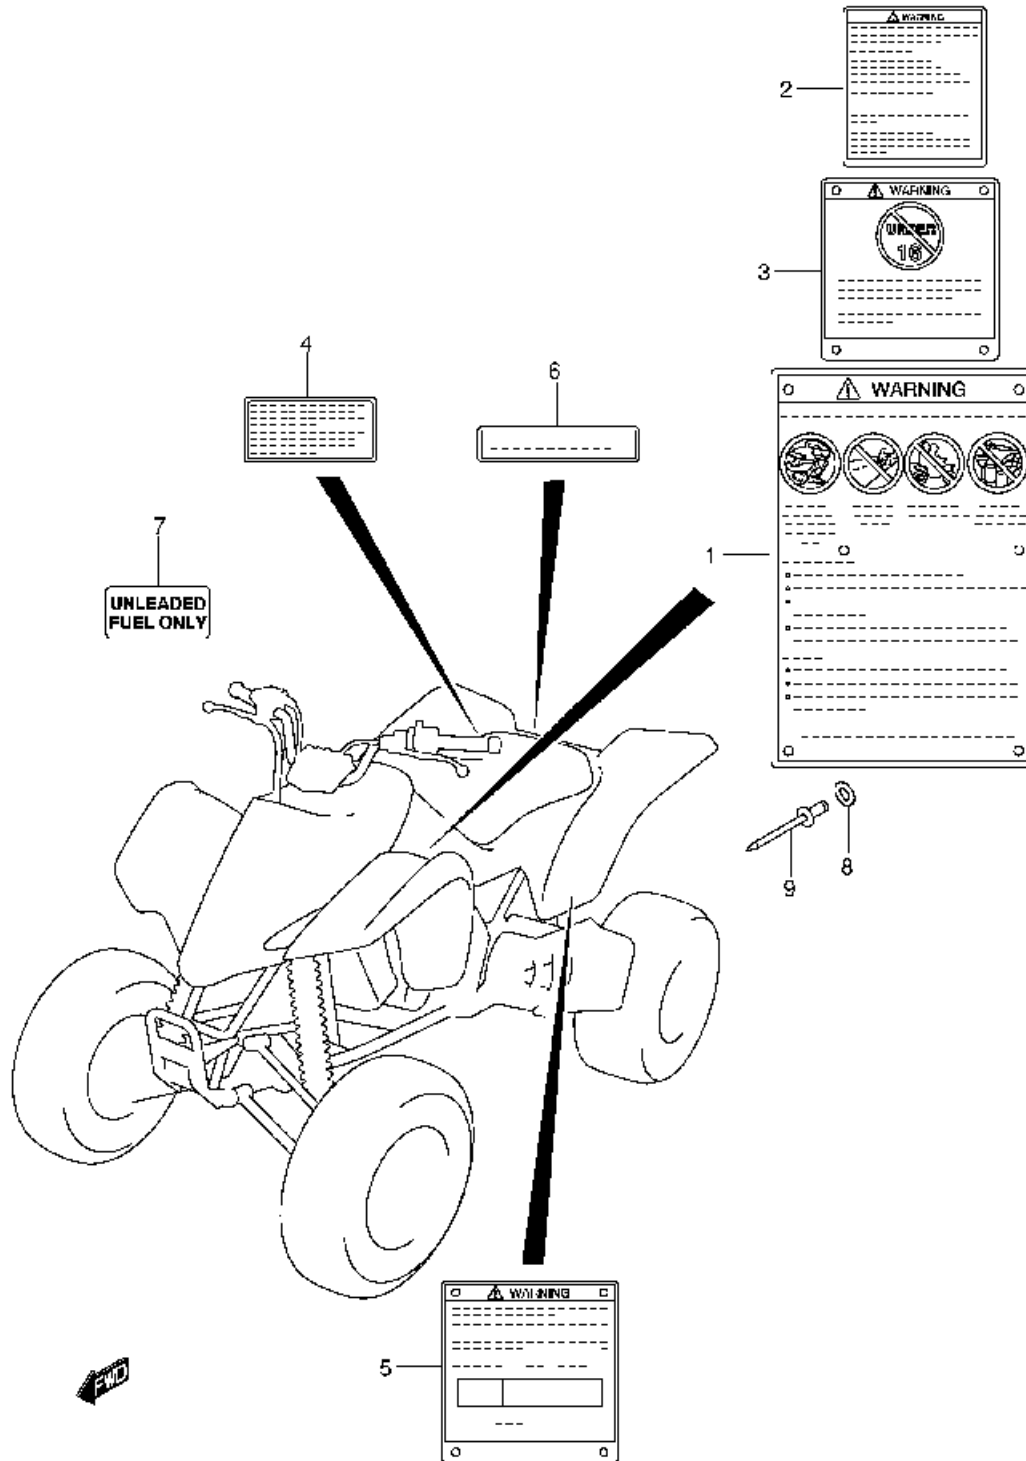 


Ref No	Part No	Description
1	68921-09F00	Label, Warning
1	68366-20B60	Label, Warning
2	68366-07G00	Label, Gear Shifting
2	68366-07G10	Label, Gear Shifting
3	68931-09F00	Label, Age 16
3	68367-04640	Label, Age 16
4	68353-26E02	Label, Manual Notice
5	68332-07G00	Label, Tire Air
5	68332-07G10	Label, Tire Air
6	68382-07G00	Label, Chain Adjuster
6	68382-07G10	Label, Chain Adjuster
7	68928-09F00	Washer
8	68929-09F00	Rivet
9	99011-07G50-03A	Manual, Owner's
9	99011-07G50-28B	Manual, Owner's

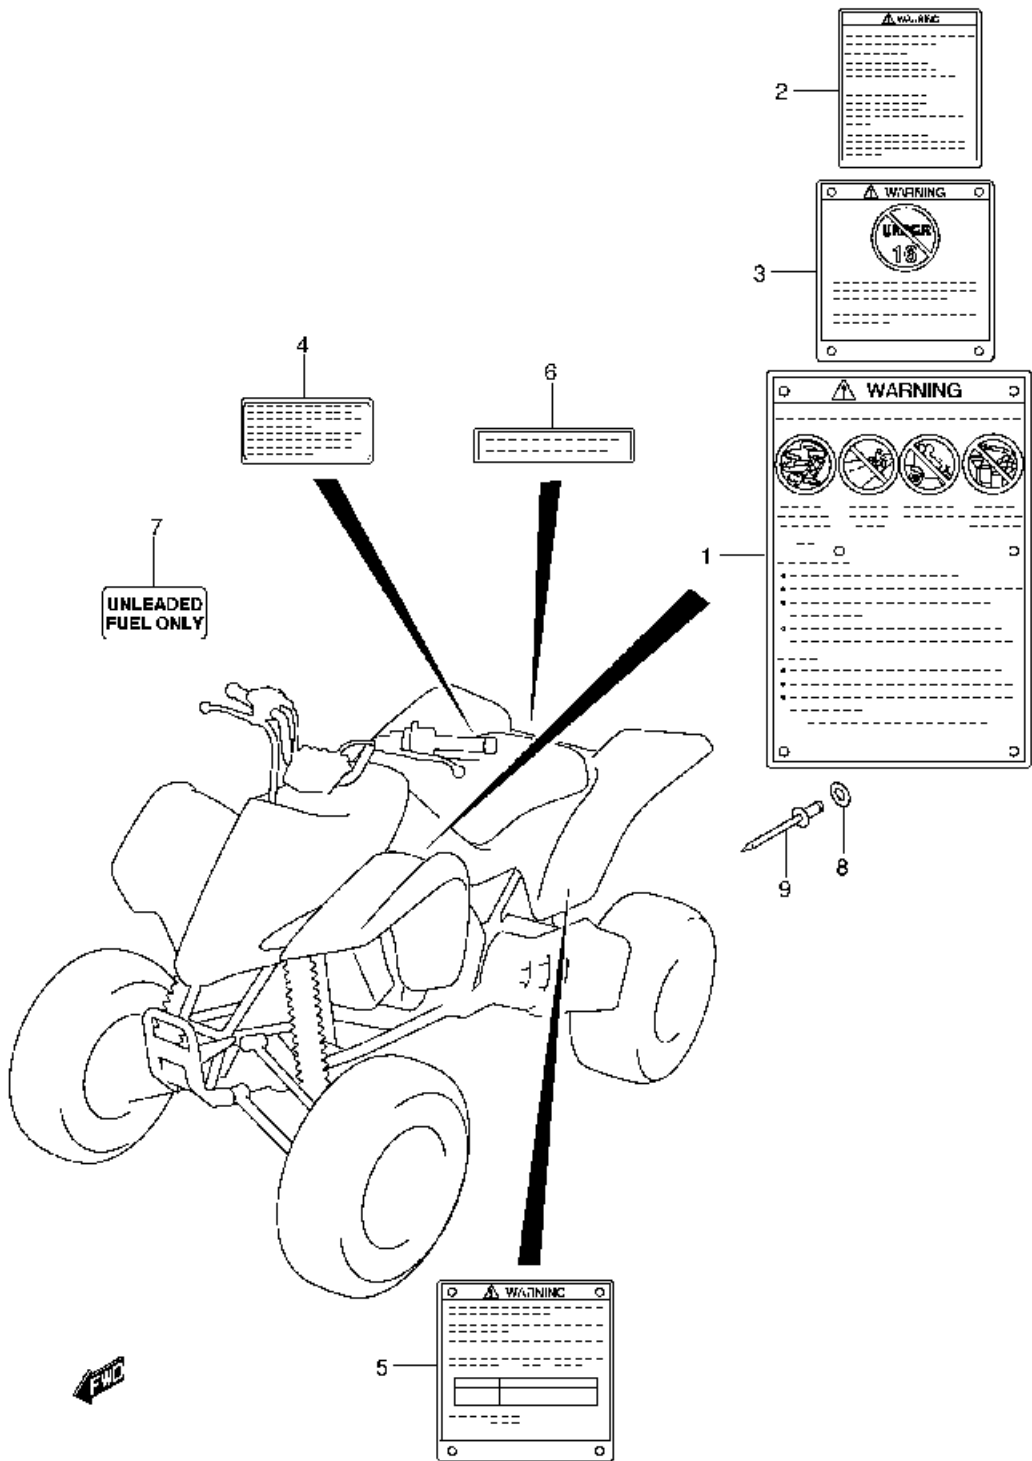 



Ref No	Part No	Description
1	68921-09F00	Label, Warning
1	68366-20B60	Label, Warning
2	68366-07G00	Label, Gear Shifting
2	68366-07G10	Label, Gear Shifting
3	68931-09F00	Label, Age 16
3	68367-04640	Label, Age 16
4	68353-26E02	Label, Manual Notice
5	68332-07G00	Label, Tire Air
5	68332-07G10	Label, Tire Air
6	68382-07G00	Label, Chain Adjuster
6	68382-07G10	Label, Chain Adjuster
7	68623-01B00	Label, Fuel
8	68928-09F00	Washer
9	68929-09F00	Rivet
10	99011-07G51-03A	Manual, Owner's
10	99011-07G51-28B	Manual, Owner's

Ref No	Part No	Description
1	45100-07G01-P21	Seat Assy
2	45149-09B00	• . Cushion
3	45149-07G00	• . Cushion
4	45141-07G00	Cushion, Seat Mount Front
5	09320-09017	Cushion, Seat Mount Rear

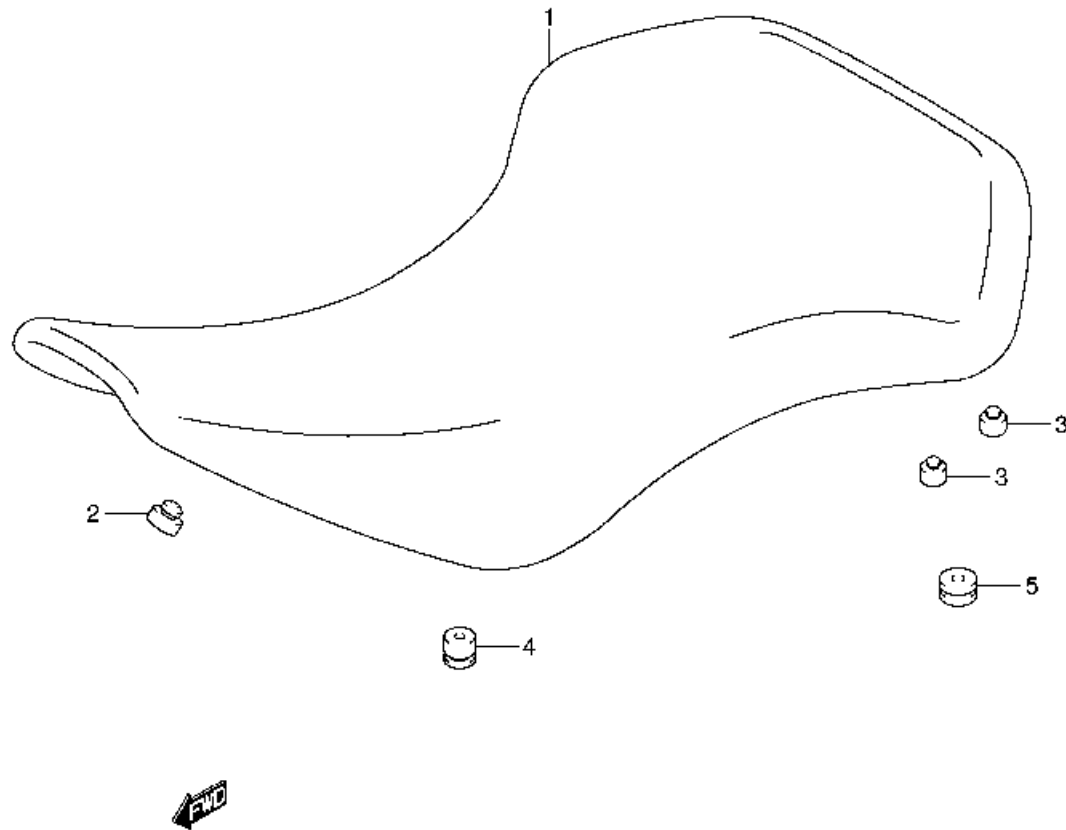 


Ref No	Part No	Description
1	51281-07G00	Tie Rod, Steering
2	51230-07G10	Knuckle, Steering Rh
3	51240-07G10	Knuckle, Steering Lh
4	51210-05G00	End, Knuckle Steering Upper
5	51260-21G00	Rod, End Rh
6	51270-21G00	Rod, End Lh
7	09140-10043	Nut, Tie Rod Rh
8	08314-40103	Nut, Rod End
9	09140-10027	Nut, Tie Rod Lh
10	04111-20208	Cotter Pin, Rod End
11	08322-01123	Washer, Knuckle End
12	08314-40123	Nut, Knuckle End
13	04111-30208	Cotter Pin, Knuckle End
14	08331-31306	Circlip
15	09162-10008	Washer, Rod End Lock

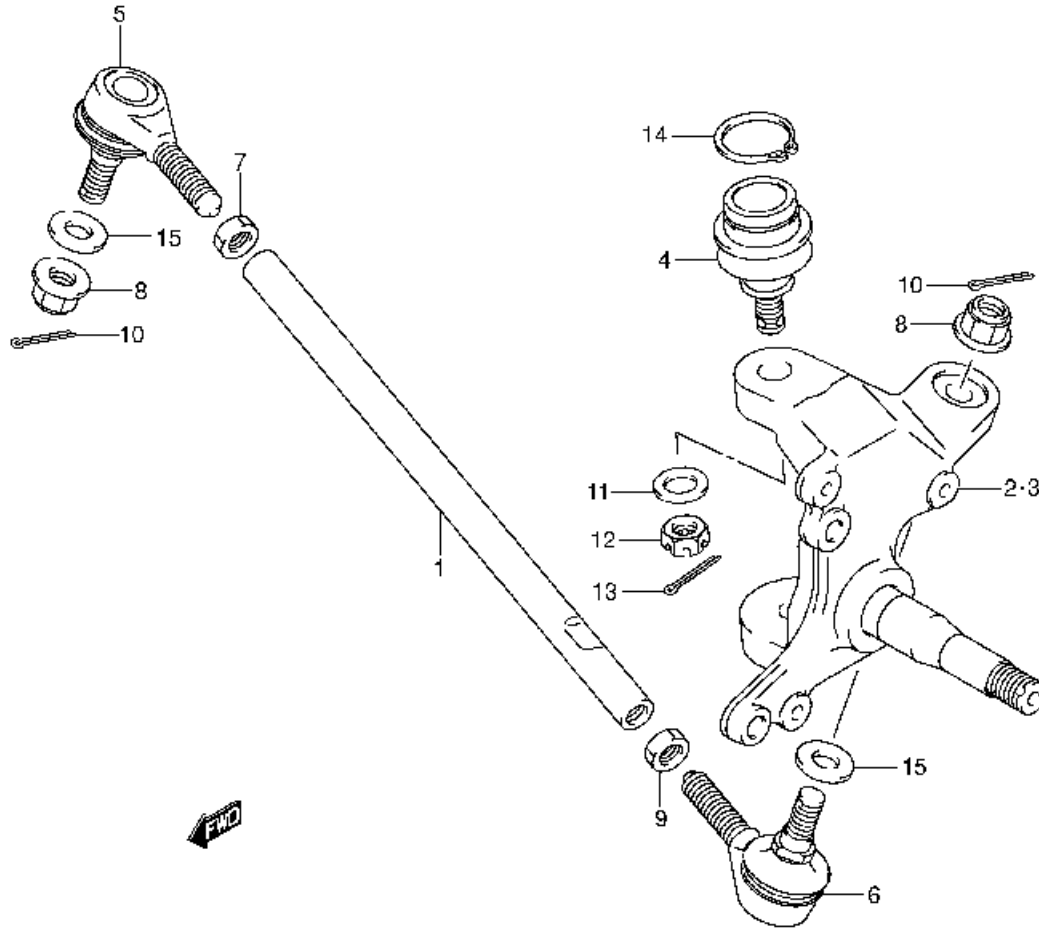 


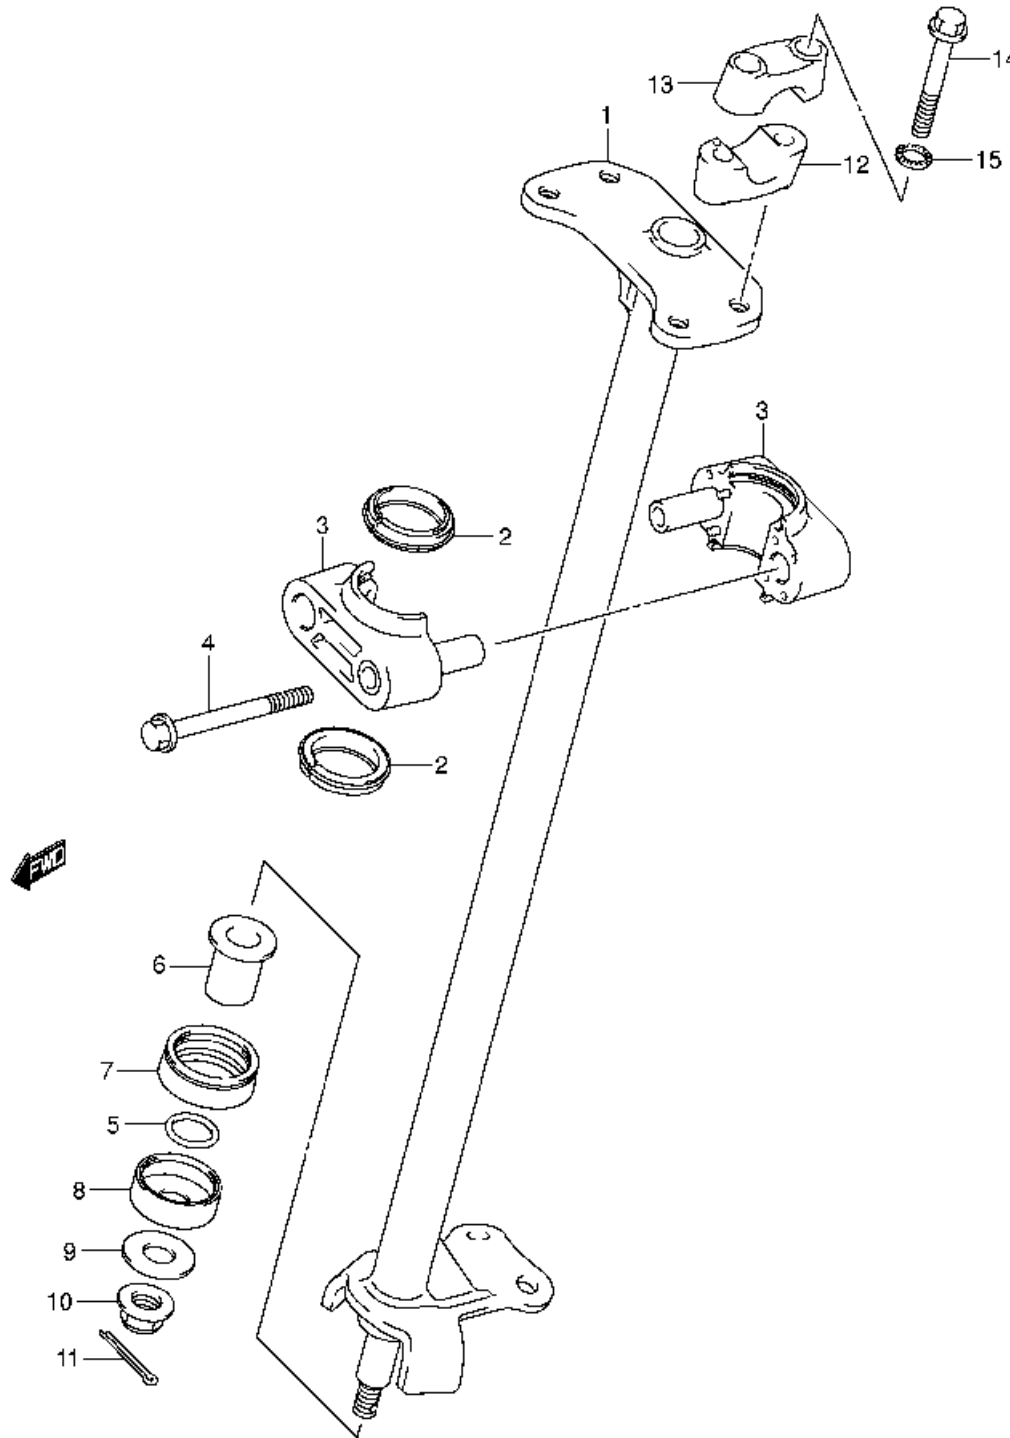 


Ref No	Part No	Description
1	51650-07G10	Shaft, Steering
2	51678-24500	Dust Seal, Steering Holder (27x38x8.5)
3	51670-24500	Holder, Steering Shaft
4	01550-08753	Bolt
5	09280-17003	O Ring (d:3.1,id:16.8)
6	51661-19B10	Bush, Steering Shaft Lower (17x26x36.9)
7	51662-19A01	Dust Seal, Steering Shaft (30x40x14.4)
8	51663-24500	Dust Seal, Steering Lower (12.2x38x12)
9	09160-12073	Washer (12.5x32x2.3)
10	08319-31123	Nut
11	04111-20208	Cotter Pin
12	56211-21G00-291	Clamp, Handlebar Lower (black)
13	56211-27200-291	Holder, Handlebar
14	01550-08553	Bolt
15	09164-08015	Washer

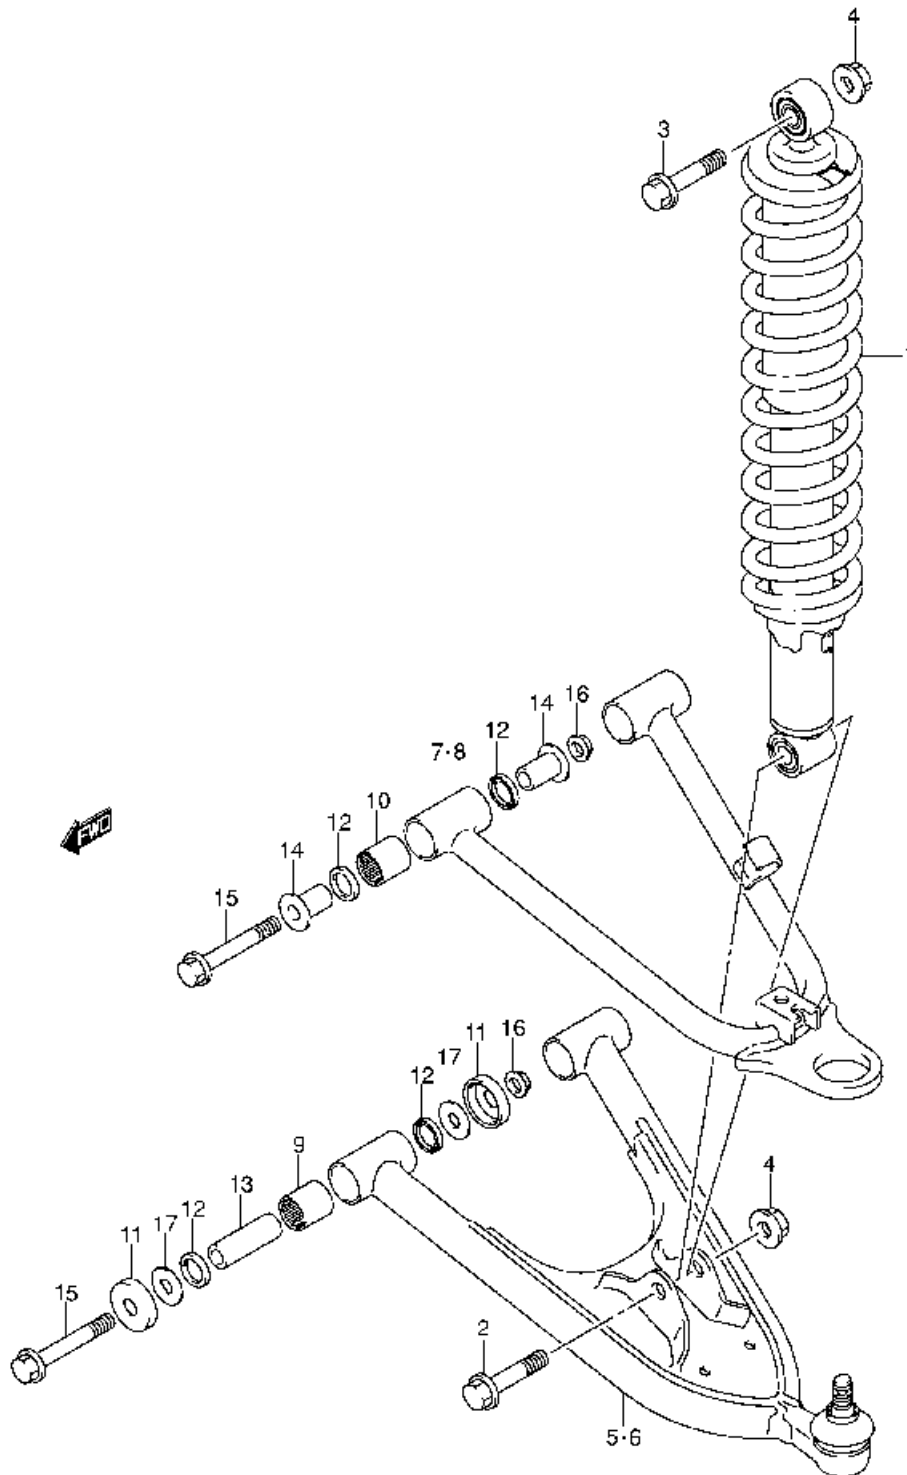 


Ref No	Part No	Description
1	52100-07G00-37W	Absorber Assy, Front Shock (red)
2	09103-10352	Bolt, Lower (10x48)
3	09103-10351	Bolt, Upper (10x38)
4	09159-10058	Nut
5	52410-07G00-YD8	Arm Assy, Suspension Lower Rh
6	52420-07G00-YD8	Arm Assy, Suspension Lower Lh
7	52430-07G00-YD8	Arm Assy, Suspension Upper Rh
8	52440-07G00-YD8	Arm Assy, Suspension Upper Lh
9	09263-17033	Bearing, Suspension Arm Pivot
10	09263-17034	Bearing, Upper
11	52454-43B00	Seal, Suspension Arm Pivot Dust
12	09285-17001	Seal, Pivot Inner Dust
13	52455-43B00	Spacer, Lower
14	52455-07G00	Spacer, Upper
15	09103-10033	Bolt
16	09159-10058	Nut
17	08211-10281	Washer

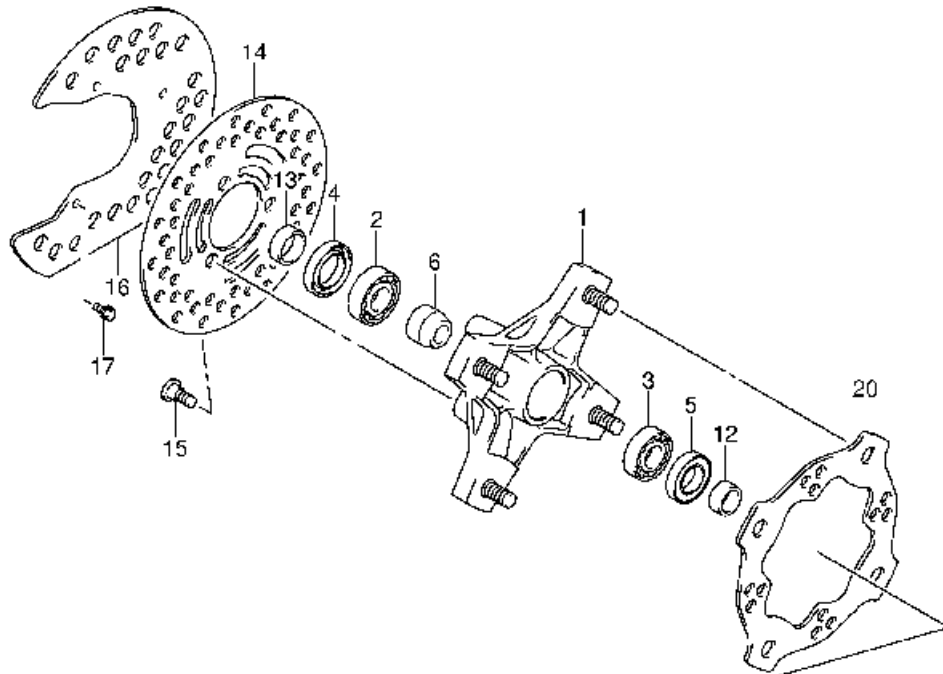 


Ref No	Part No	Description
1	54110-07G00-YU8	Hub, Front Wheel (gray)
2	08120-60047	Bearing, Front Hub Inner
3	09262-15024	Bearing, Front Hub Outer
4	09284-26002	Dust Seal Inner
5	09284-21001	Dust Seal Outer
6	54731-07G00	Spacer, Front Hub Bearing
7	55310-07G00	Rim, Front Wheel (10x5.5at)
8	09140-10021	Nut
9	08322-01143	Washer
10	08314-40143	Nut, Hub
11	04111-30308	Pin, Cotter
12	09180-15068	Spacer, Front Axle
13	09180-20119	Spacer, Fr Axle No.2
14	59211-07G00	Disc, Front Brake
15	09106-08160	Bolt, Brake Disc
16	59231-07G10	Cover, Front Disc
17	09103-06083	Bolt
18	55110-07G00	Tire, Front
19	43130-24A00	Valve Assy, Wheel Rim (tr412)
20	54138-07G00	Plate, Front Hub

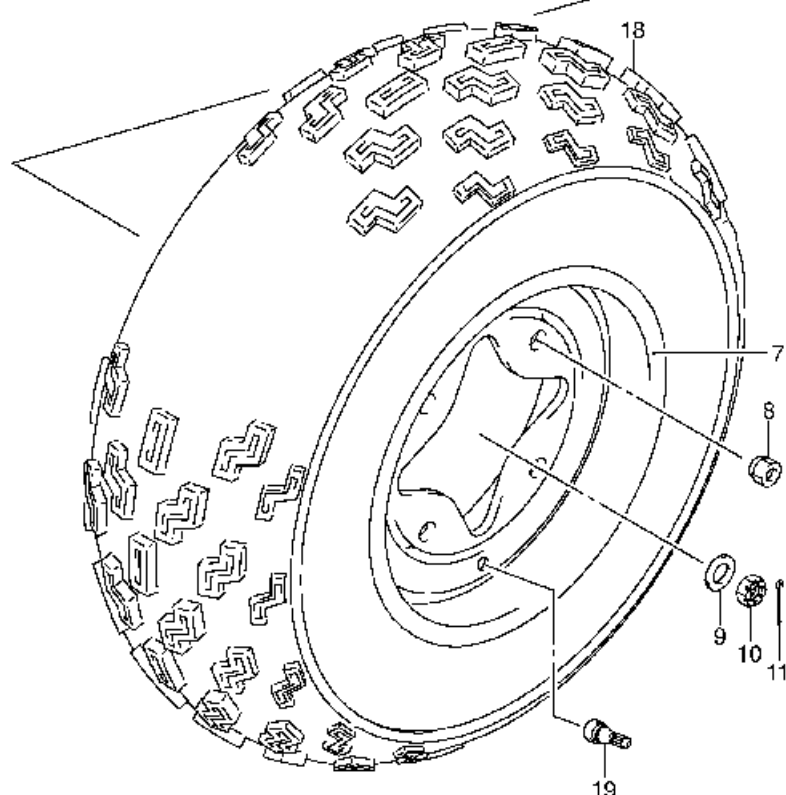 


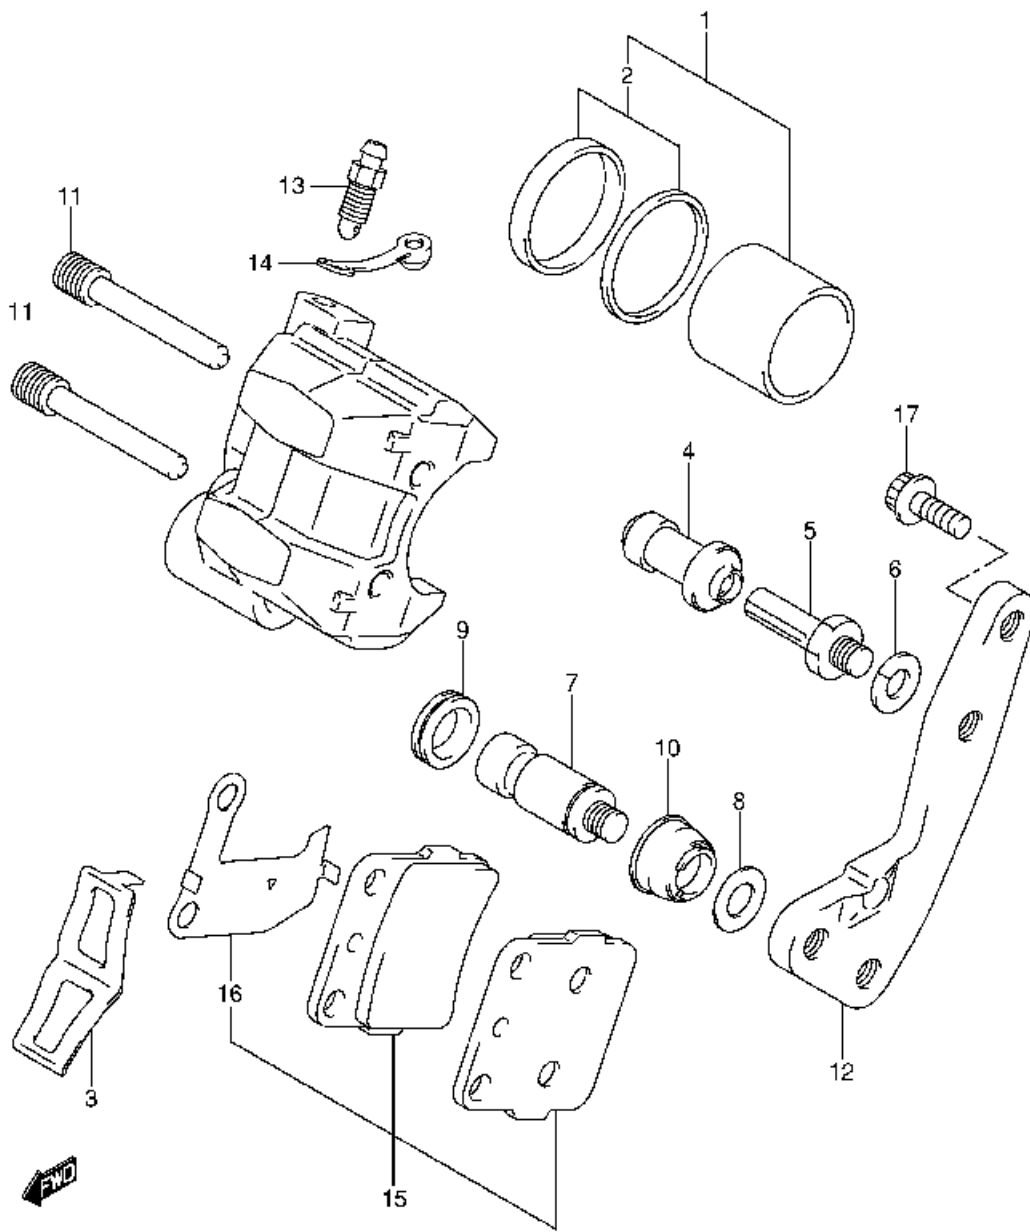 

Ref No	Part No	Description
	59100-38F30-999	Caliper Assy, Front Rh
	59300-38F30-999	Caliper Assy, Front Lh
1	59100-38850	• . Piston Set
2	59100-38860	•• .. Seal Set, Piston
3	59315-13A00	• . Spring, Pad
4	59386-13A00	• . Boot
5	59382-13A00	• . Pin
6	59314-13A00	• . Washer
7	59105-38F00	• . Pin, Slide
8	59306-13A00	• . Spring
9	59384-13A00	• . Plug, Dust
10	59303-13A00	• . Boot
11	59345-00B20	• . Pin
12	59151-38F00	• . Bracket, Rh
12	59351-38F00	• . Bracket, Lh
13	59121-01A00	• . Bleeder
14	59122-01A00	• . Cap
15	59300-42860	Pad & Shim Set, R
15	59300-42870	Pad & Shim Set, L
16	59371-13A00	• . Shim, Rh
16	69372-00B20	• . Shim, Lh
17	07120-08163	Bolt (8x16)

Ref No	Part No	Description
1	09360-10042	Bolt
2	09161-10009	Washer (10x15x1.5)
3	59480-07G00	Hose, Front Brake No.1
4	59240-07G00	Hose, Front Brake No.2
5	59261-07G00	Clamp, Hose No.2 Rh
6	59271-07G00	Clamp, Hose No.2 Lh
7	01550-06103	Bolt
8	59250-07G00	Pipe, Front Brake
9	01547-06123	Bolt
10	09403-07325	Clamp, Fr Brake Pipe
11	59281-07G00	Cover, Fr Brake Pipe

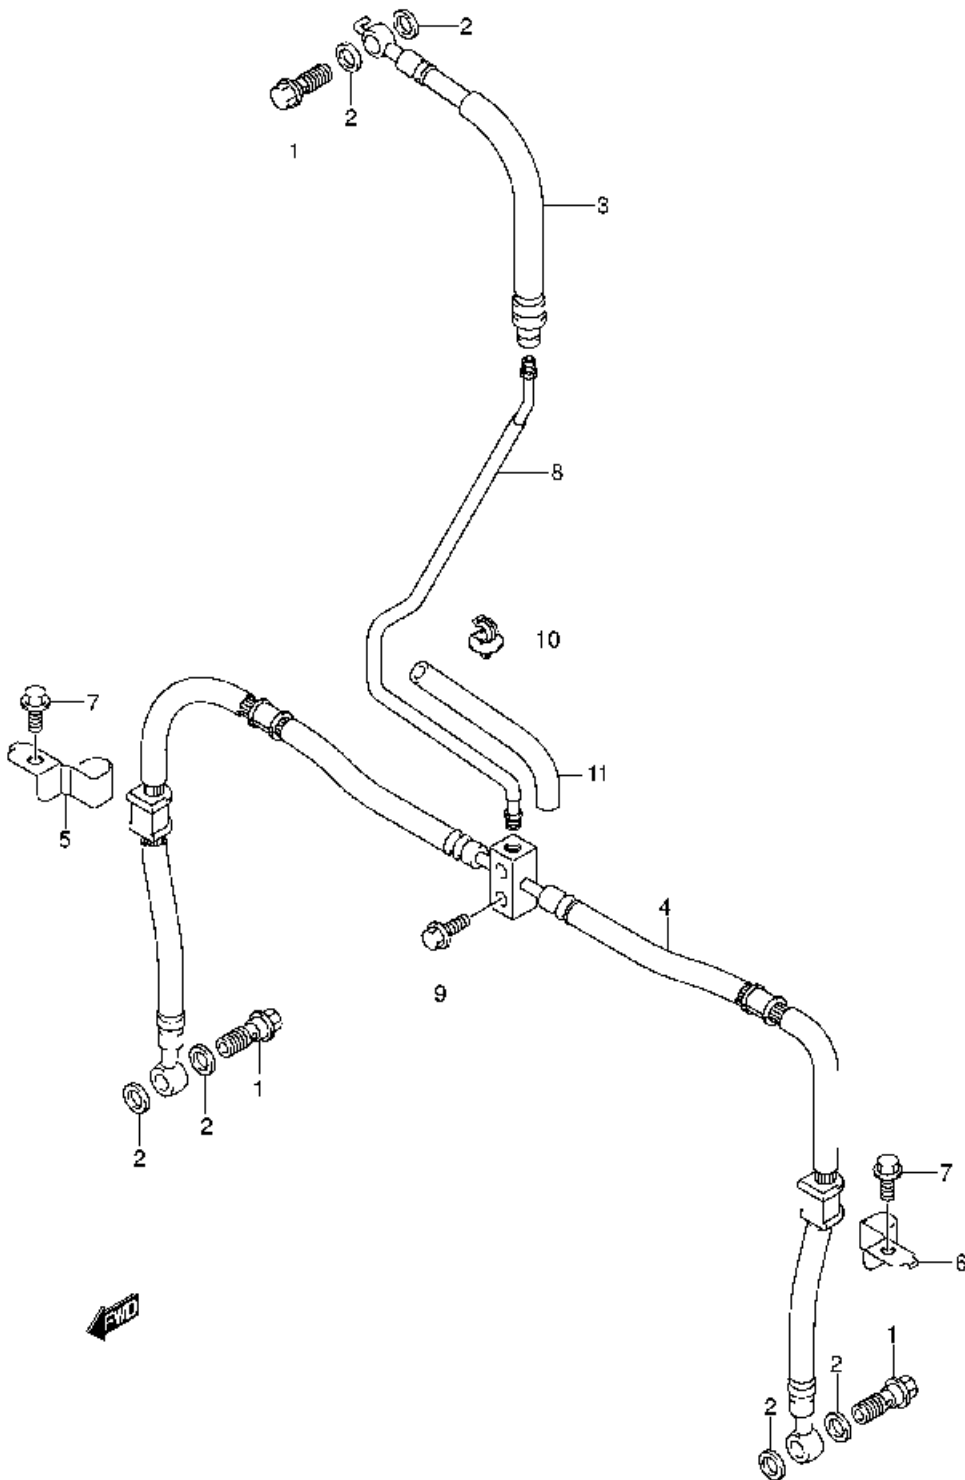 


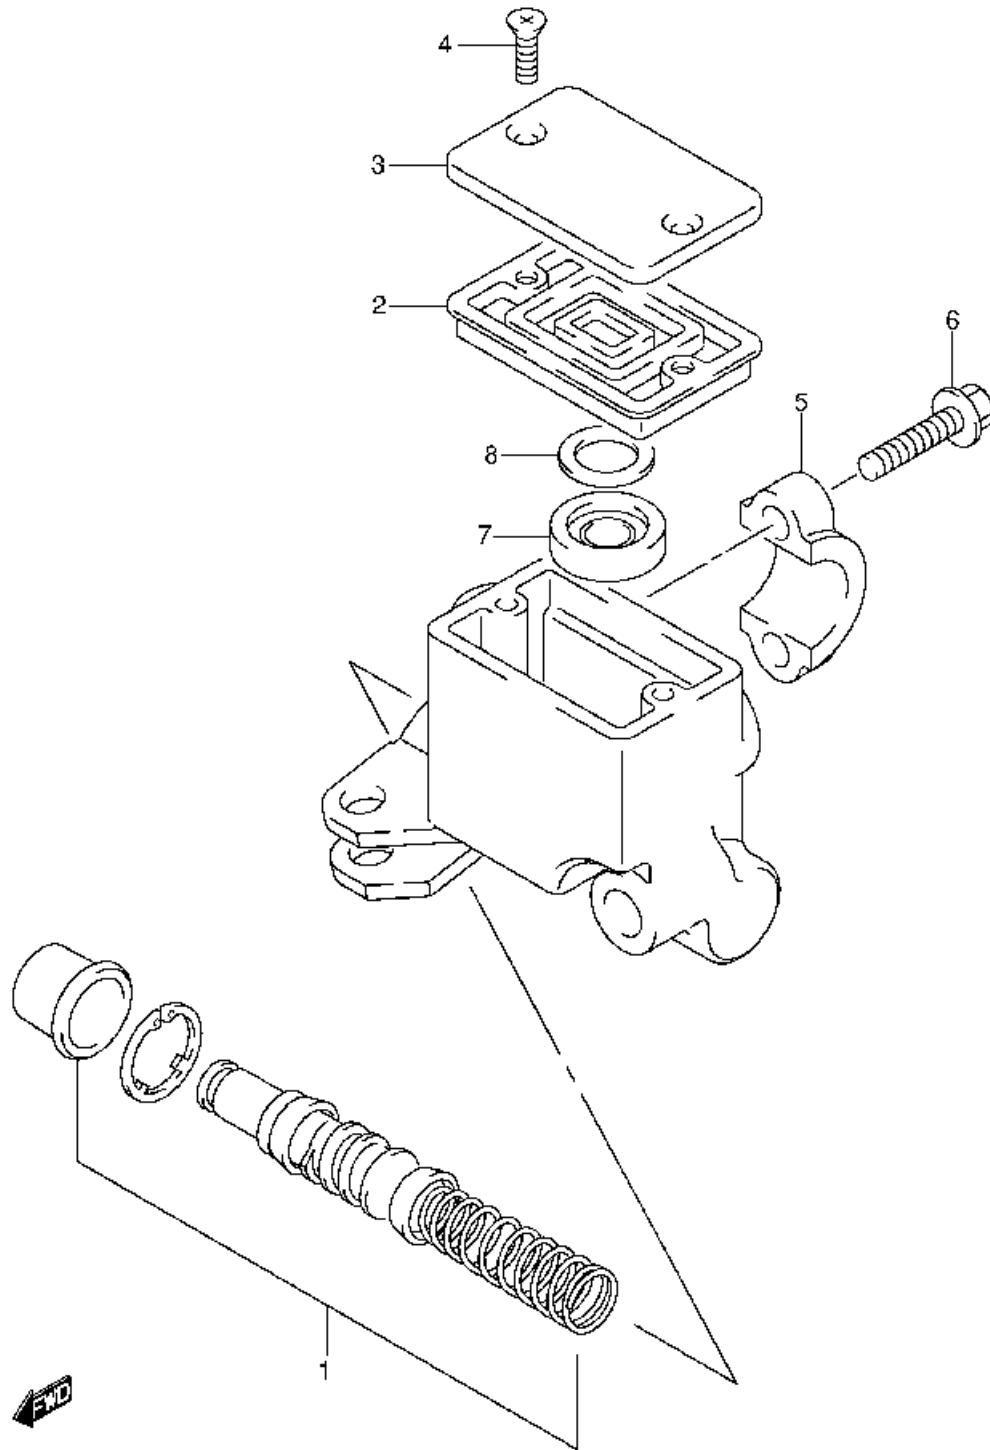 

Ref No	Part No	Description
1	59600-31D00	Cylinder Assy, Front Master
1	59600-04810	. . Piston/cup Set
2	59667-44B00	. . Diaphragm
3	69669-24A01	. . Cap
4	69689-49300	. . Screw, Cap
5	59671-36500	. . Holder
6	59675-19C00	. . Bolt
7	59748-15400	. . Separator
8	59749-15400	. . Plate




 
REAR SWINGING ARM (MODEL K3~F.NO.32113657)

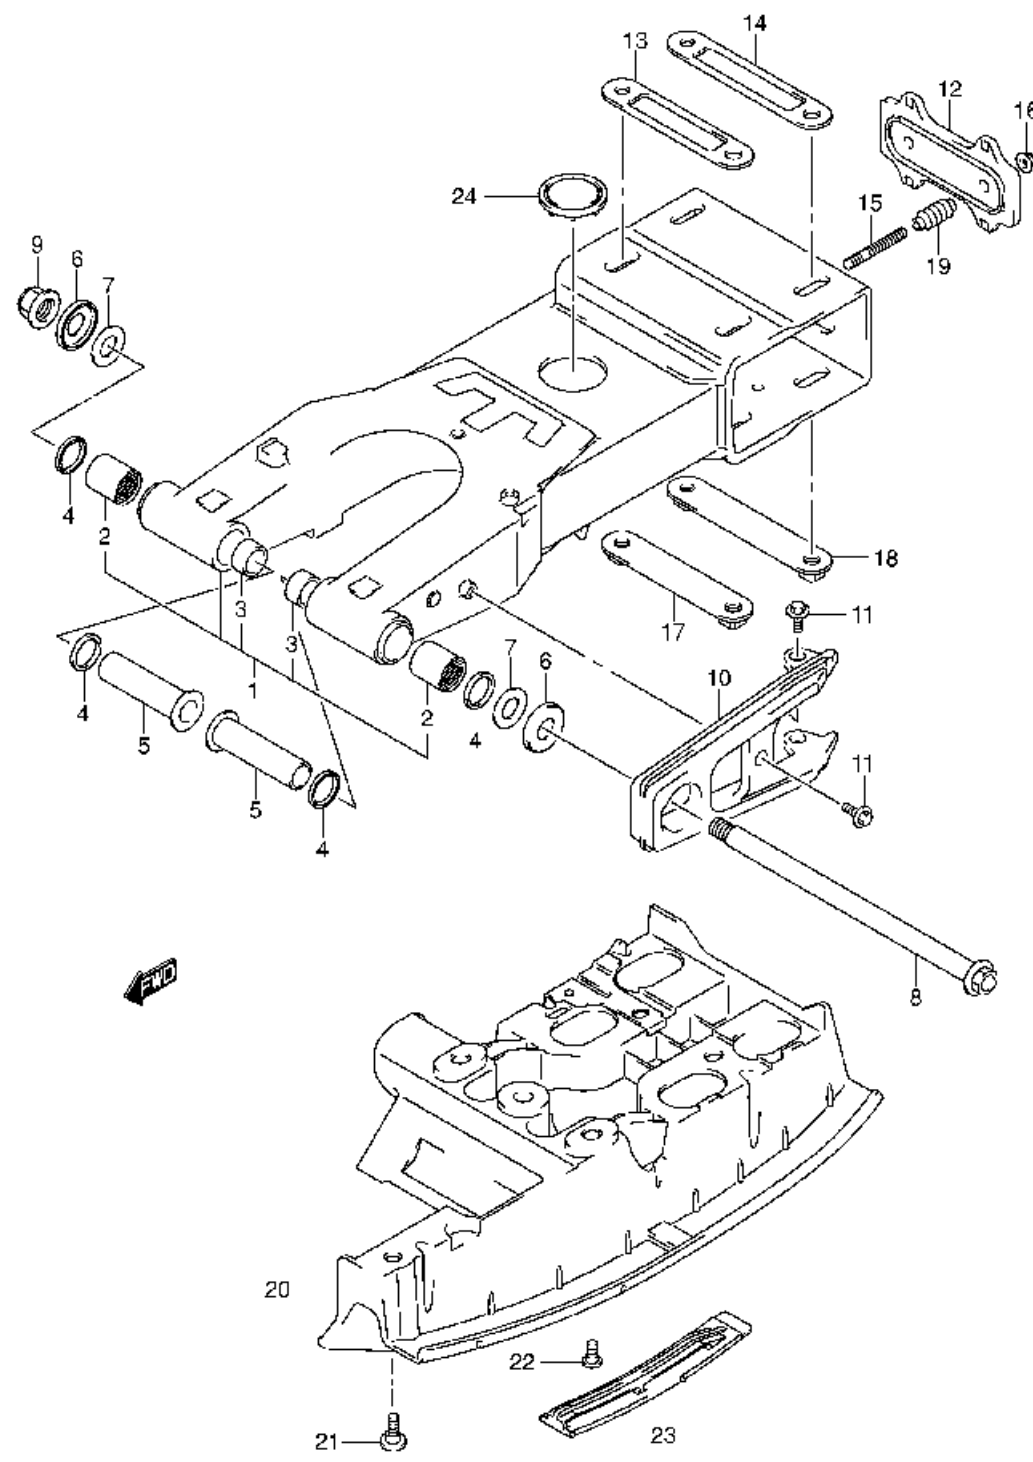


Ref No	Part No	Description
1	61100-07890	Swinging Arm Set, Rear
2	09263-22017	. . Bearing, Pivot
3	61261-07G00	. . Bush, Rr Swinging Arm Pivot
4	09285-22001	Seal, Pivot Bearing
5	61252-07G00	Spacer
6	61262-28C10	Cover, Pivot Dust
7	08211-17341	Washer, Thrust
8	61211-07G00	Shaft, Pivot
9	08319-31168	Nut
10	61273-07G00	Buffer, Chain Touch Defense
11	09116-06152	Bolt
12	61421-01C01	Plate, Chain Adjuster
13	64718-07G00	Washer, Axle Housing Set Fr
14	64719-07G00	Washer, Axle Housing Set Rr
15	09108-08209	Bolt, Chain Adjuster
16	08319-31087	Nut, Chain Adjuster
17	61470-07G00	Washer, Axle Housing Set Fr
18	61480-07G00	Washer, Axle Housing Set Rr
19	61425-43B00	Boot, Chain Adjuster Bolt
20	61390-07G10	Guard, Swinging Arm Under
21	61393-09F00	Bolt, Guard
22	09106-08154	Bolt, Guard Center
23	61396-07G00	Buffer, Swgarm Guard No.1
24	61222-05A01	Cap, Rr Swinging Arm

Ref No	Part No	Description
1	61100-07890	Swinging Arm Set, Rear
2	09263-22017	• . Bearing, Pivot
3	61261-07G00	• . Bush, Rear Swinging Arm Pivot
4	09285-22001	Seal, Pivot Bearing
5	61252-07G00	Spacer
6	61262-28C10	Cover, Pivot Dust
7	08211-17341	Washer, Thrust
8	61211-07G00	Shaft, Pivot
9	08319-31168	Nut
10	61273-07G00	Buffer, Chain Touch Defense
11	09116-06192	Bolt
12	61421-01C01	Plate, Chain Adjuster
13	64718-07G00	Washer, Axle Housing Set Front
14	64719-07G00	Washer, Axle Housing Set Rear
15	09108-08209	Bolt, Chain Adjuster
16	08319-31087	Nut, Chain Adjuster
17	61470-07G00	Washer, Axle Housing Set Front
18	61480-07G00	Washer, Axle Housing Set Rear
19	61425-43B00	Boot, Chain Adjuster Bolt
20	61305-07G01	Guard Set, Swinging Arm Under
21	61390-07G11	• . Guard, Swinging Arm Under
22	61396-07G10	• . Buffer, Swgarm Guard
23	09160-04027	• . Washer, Buffer
24	09229-04048	• . Rivet, Buffer
25	61393-09F00	Bolt, Guard
26	09106-08154	Bolt, Guard Center
27	61222-05A01	Cap, Rear Swinging Arm

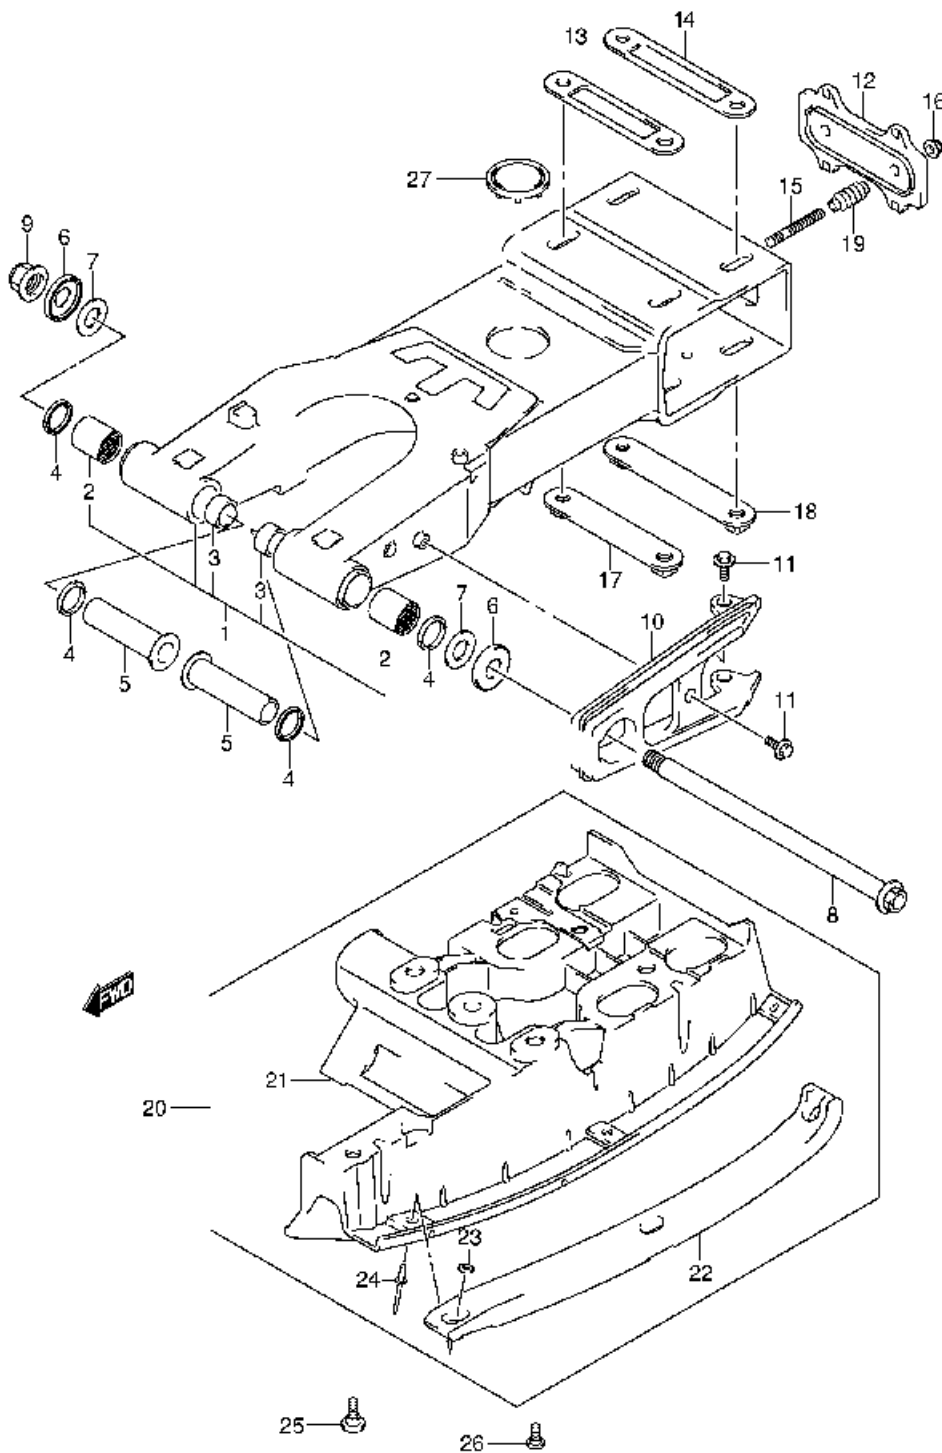 


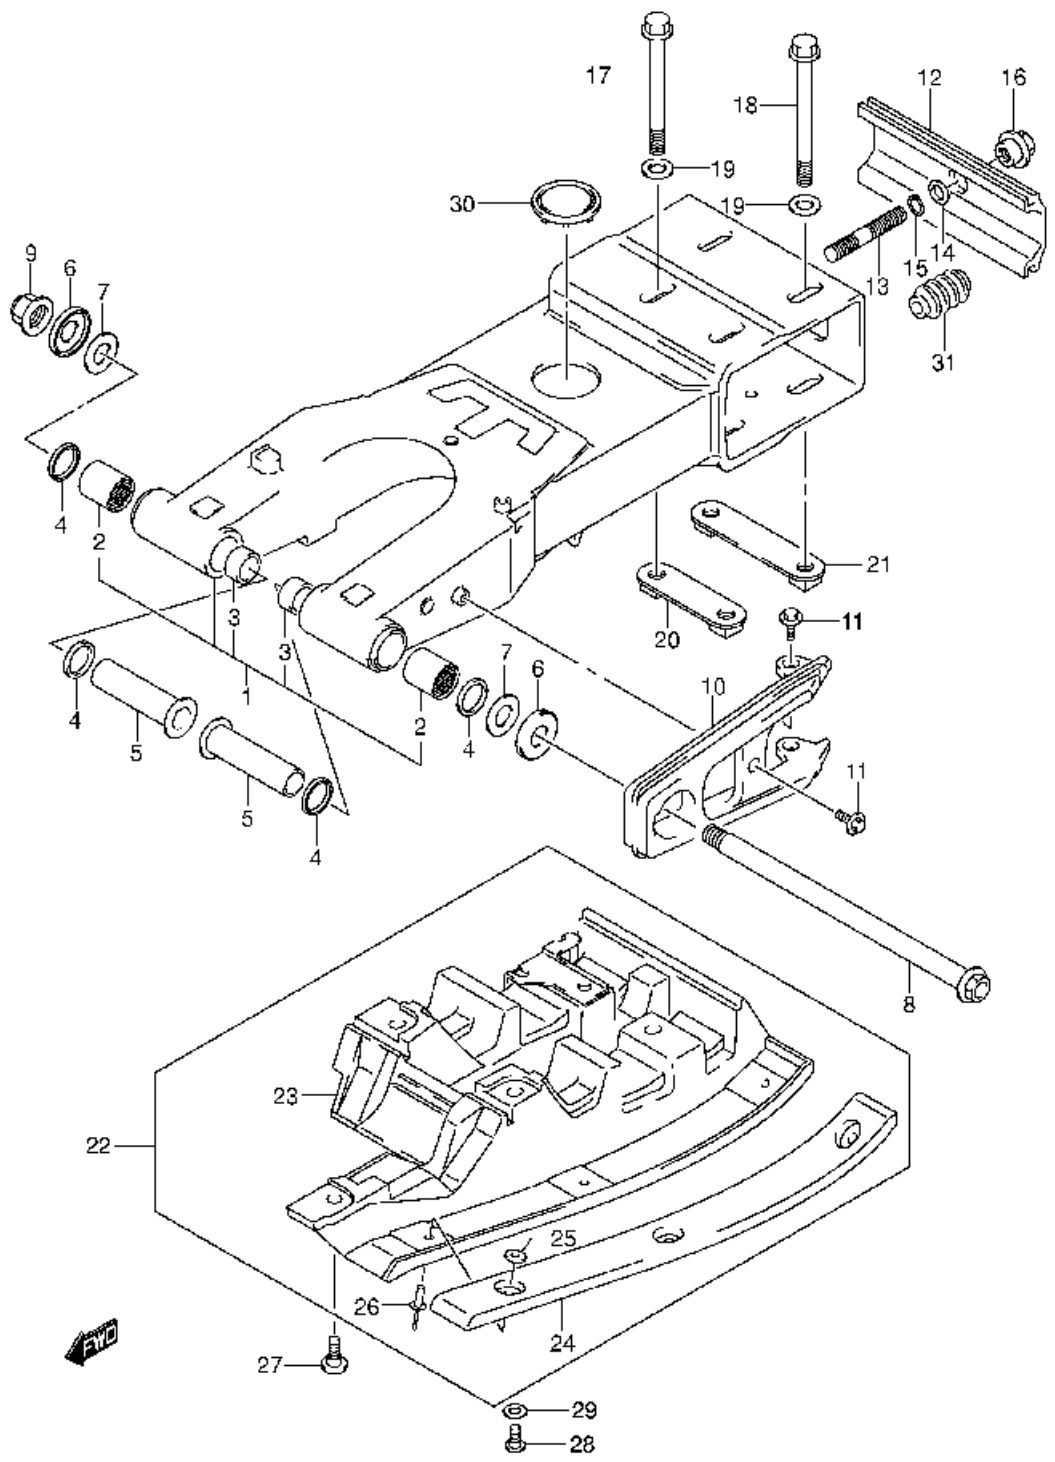 


Ref No	Part No	Description
1	61101-07820	Swinging Arm Set, Rear
2	09263-22017	. Bearing, Pivot
3	61261-07G00	. Bush, Rr Swinging Arm Pivot
4	09285-22001	Seal, Pivot Bearing
5	61252-07G00	Spacer
6	61262-28C10	Cover, Pivot Dust
7	08211-17341	Washer, Thrust
8	61211-07G10	Shaft, Pivot
9	08319-31168	Nut
10	61273-07G00	Buffer, Chain Touch Defense
11	09116-06192	Bolt
12	61421-07G00	Plate, Chain Adjuster
13	09108-12014	Bolt, Chain Adjuster
14	09160-20081	Washer, Chain Adjuster Nut
15	08331-31206	Circlip
16	61422-07G00	Nut, Chain Adjuster
17	09103-12074	Bolt, Fr
18	09103-12075	Bolt, Rr
19	09160-12103	Washer
20	61470-07G10	Washer, Axle Housing Set Fr
21	61480-07G10	Washer, Axle Housing Set Rr
22	61305-07G10	Guard Set, Swinging Arm Under
23	61391-07G10	. Guard, Swinging Arm Under
24	61396-07G20	. Buffer, Swgarm Guard
25	09160-04027	. Washer, Buffer
26	09229-04048	. Rivet, Buffer
27	61393-09F10	Bolt, Guard
28	09106-08076	Bolt, Guard Center
29	08322-01103	Washer, Guard Center
30	61222-05A01	Cap, Rr Swinging Arm
31	61425-07G00	Boot, Chain Adjuster Bolt

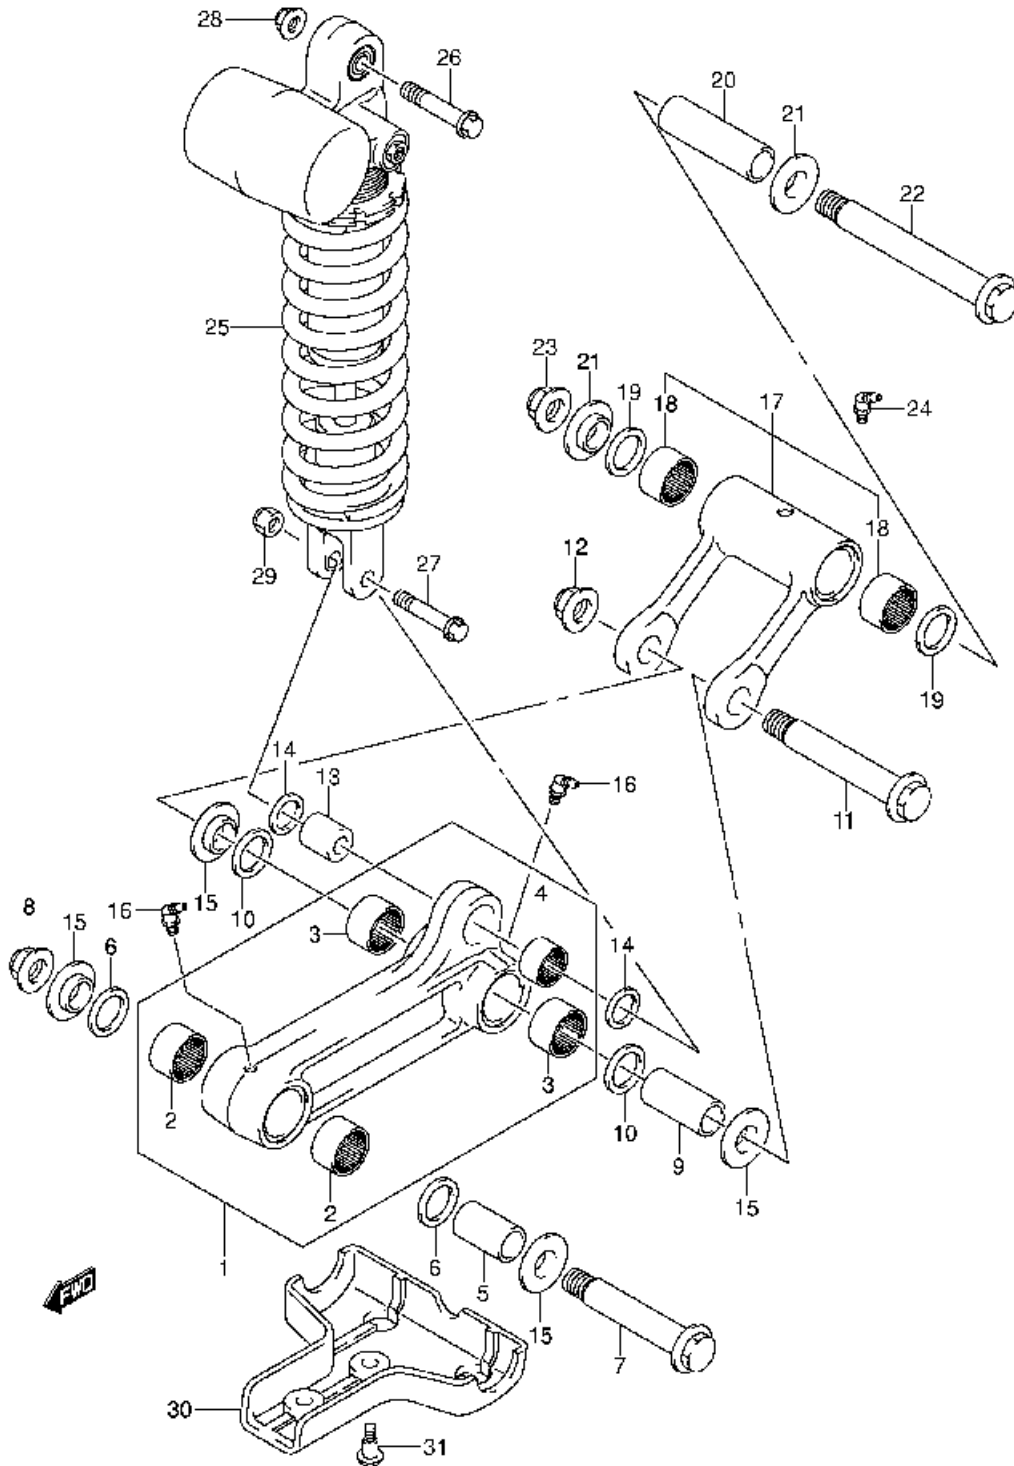 

Ref No	Part No	Description
1	62600-07810	Lever Set, Cushion
2	09263-20086	• . Bearing, Front (20x27x15)
3	09263-20086	• . Bearing, Center (20x27x15)
4	09263-20083	• . Bearing, Rear (20x26x12)
5	62317-37F00	Spacer, Front
6	62624-14500	Seal, Front Dust
7	62658-07G00	Bolt, Front
8	09159-12056	Nut
9	62646-37F00	Spacer, Center
10	62624-14500	Seal, Center Dust
11	62621-37F00	Bolt, Center
12	09159-12056	Nut
13	62684-36E00	Spacer, Rear
14	09284-20001	Seal, Rear
15	62647-37F00	Spacer, Cushion Lever Side
16	08351-31008	Nipple, Grease
17	62600-07820	Rod Set, Rear Cushion
18	09263-20086	• . Bearing, Rod (20x27x15)
19	62624-14500	Seal, Dust
20	62646-07G00	Spacer, Rod
21	62647-37F00	Spacer, Rod Side
22	62621-07G00	Bolt, Rod
23	09159-12056	Nut
24	08351-31008	Nipple, Grease
25	62100-07G01-37W	Absorber Assy, Rear Shock (red)
25	62100-07G11-37W	Absorber Assy, Rear Shock (red)
26	62311-14501	Bolt, Upper
27	09103-10325	Bolt, Lower
28	09159-10058	Nut, Upper
29	09159-10067	Nut, Lower
30	62681-07G00	Guard, Rear Cushion Lever
31	09139-06120	Screw

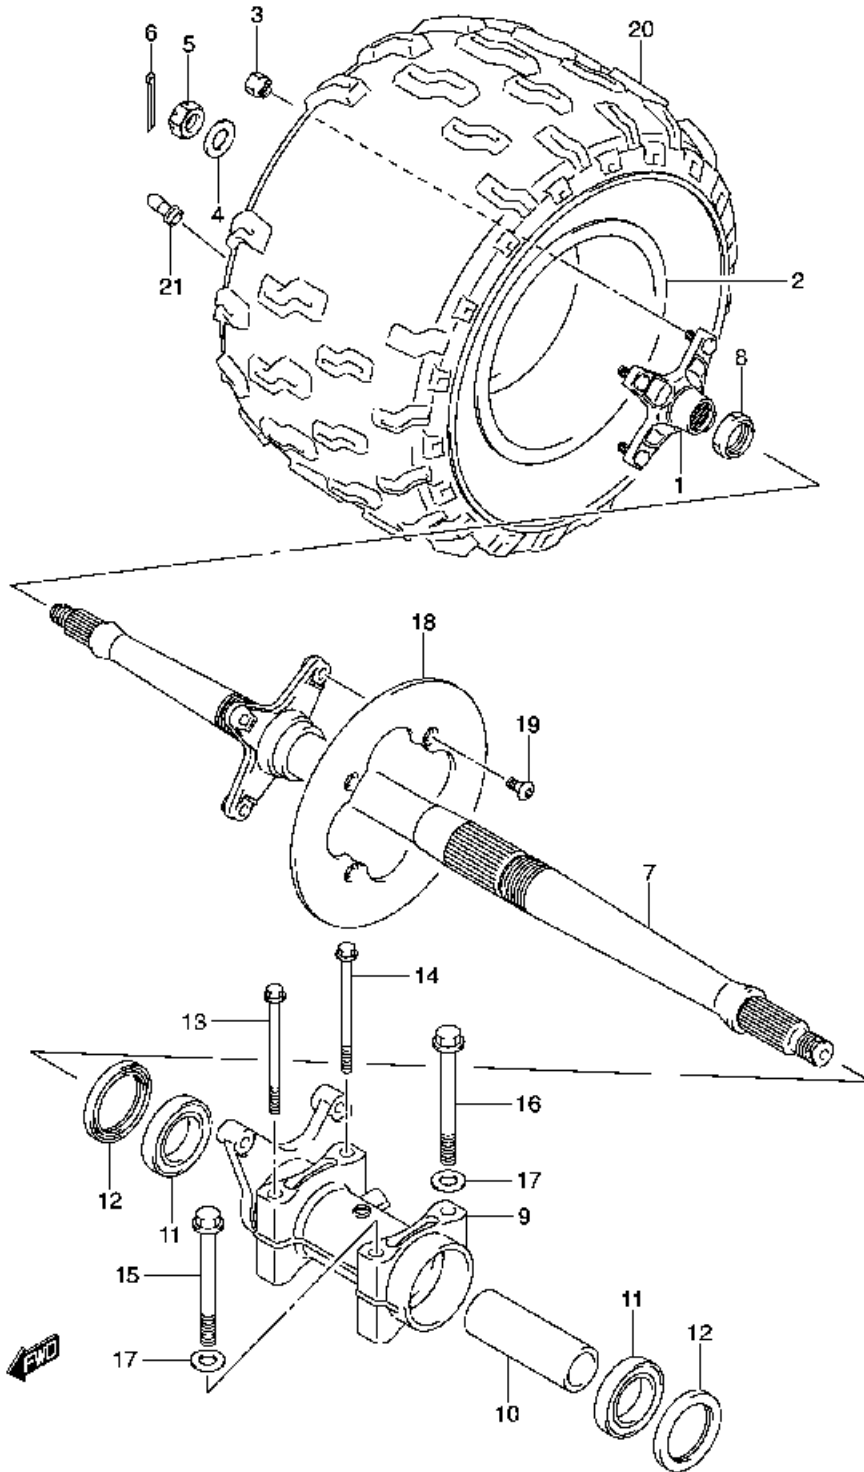 


Ref No	Part No	Description
1	64110-07G00-YU8	Hub, Rear Wheel (gray)
2	65310-07G00	Rim, Rear Wheel (9x8.0at)
3	09140-10021	Nut
4	09164-20002	Washer
5	09141-20002	Nut, Hub
6	04111-40408	Cotter Pin
7	64710-07G00	Axle, Rear
8	64871-07G00	Nut, Rear Axle Rh
9	64715-07G00	Housing, Rr Axle Bearing
10	64731-07G00	Spacer, Rr Axle Bearing
11	08123-60087	Bearing, Rear Axle
12	09283-50006	Seal, Rr Axle Bearing Dust
13	09103-10076	Bolt, Housing Front Rh
14	09103-10350	Bolt, Housing Rear Rh
15	09103-12026	Bolt, Housing Front Lh
16	09103-12027	Bolt, Housing Rear Lh
17	09160-12102	Washer, Axle Housing Set Lh
18	69211-07G00	Disc, Rear Brake
19	09106-08160	Bolt, Disc
20	65110-07G00	Tire, Rear
21	43130-24A00	Valve Assy, Wheel Rim (tr412)

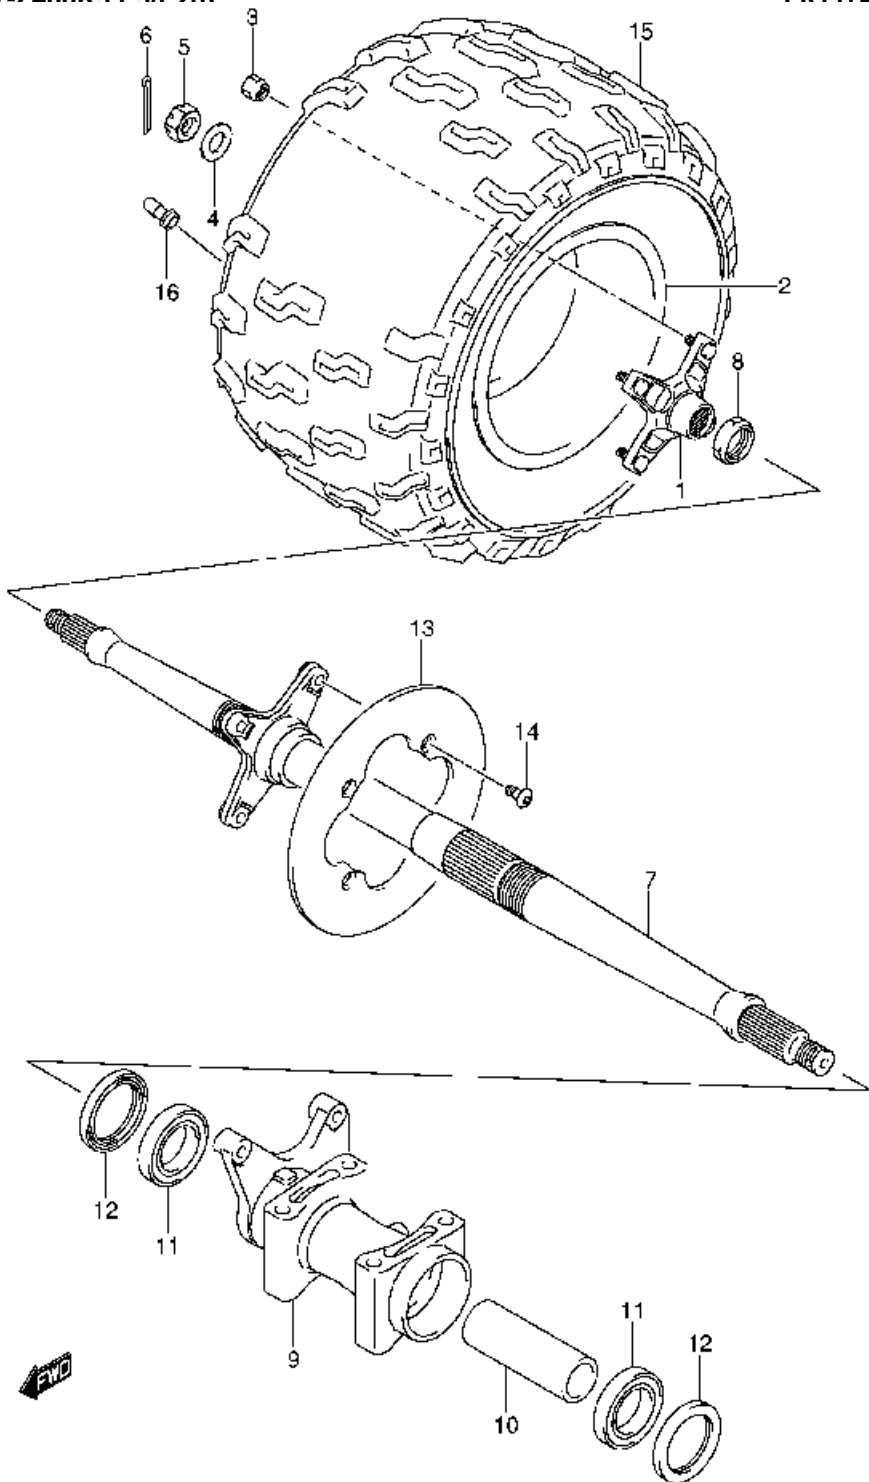 



Ref No	Part No	Description
1	64110-07G00-YU8	Hub, Rear Wheel (gray)
2	65310-07G00	Rim, Rear Wheel (9x8.0at)
3	09140-10021	Nut
4	09164-20002	Washer
5	09141-20002	Nut, Hub
6	04111-40408	Cotter Pin
7	64710-07G10	Axle, Rear
8	64871-07G00	Nut, Rear Axle Rh
9	64715-07G10	Housing, Rr Axle Bearing
10	64731-07G00	Spacer, Rr Axle Bearing
11	08123-60087	Bearing, Rear Axle
12	09283-50006	Seal, Rr Axle Bearing Dust
13	69211-07G00	Disc, Rear Brake
14	09106-08160	Bolt, Disc
15	65110-07G00	Tire, Rear
16	43130-24A00	Valve Assy, Wheel Rim (tr412)

Ref No	Part No	Description
1	64110-07G00-YU8	Hub, Rear Wheel (gray)
2	65310-07G00	Rim, Rear Wheel (9x8.0at)
3	09140-10021	Nut
4	09164-20002	Washer
5	09141-20002	Nut, Hub
6	04111-40408	Cotter Pin
7	64870-19A00	Nut, Rear Axle
8	09164-38001	Washer, Rear Axle
9	64611-07G00	Flange, Rear Sprocket Mounting
10	64511-07G00	Sprocket, Rear (nt:40)
11	09103-10354	Bolt
12	09164-10011	Washer
13	65110-07G00	Tire, Rear
14	43130-24A00	Valve Assy, Wheel Rim (tr412)

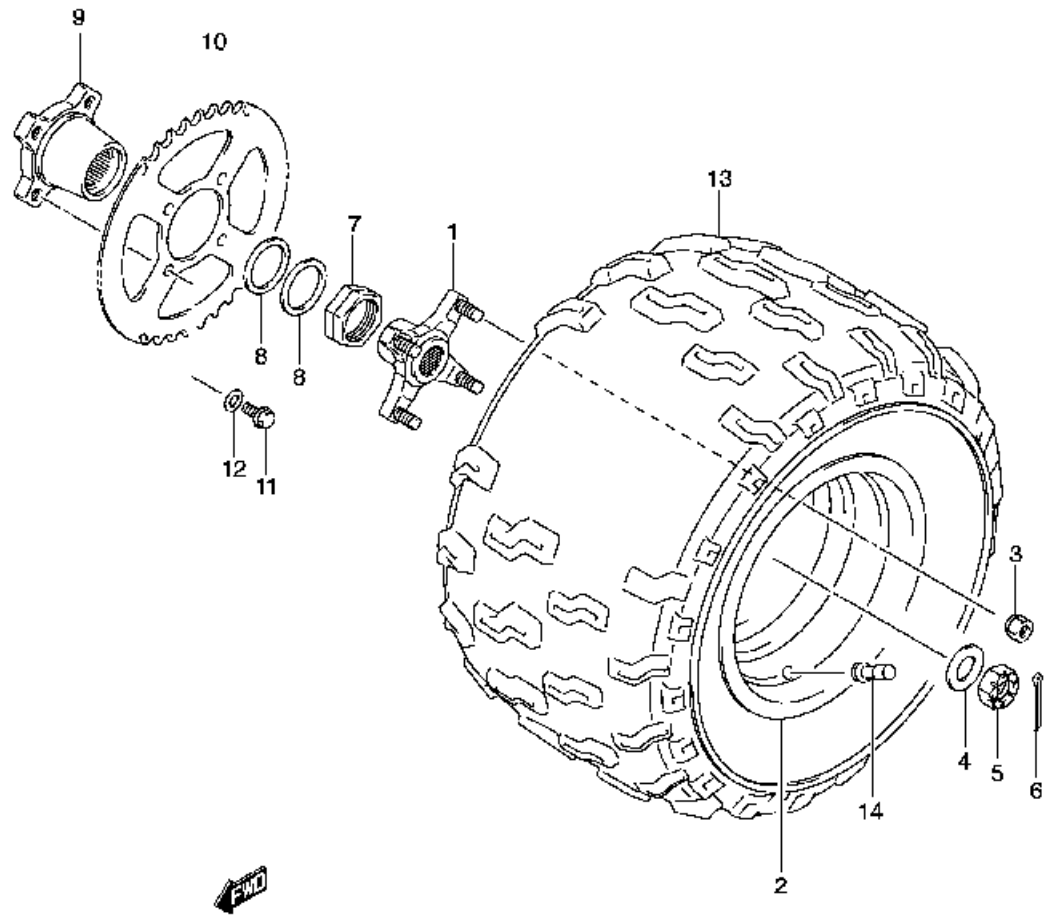 


Ref No	Part No	Description
	69100-07G00-999	Caliper Assy, Rear
1	69100-19850	. Piston Set
2	69100-13820	.. Seal Set, Piston
3	59315-13A00	. Spring, Pad
4	59386-13A00	. Boot
5	59382-13A00	. Bolt
6	59314-13A00	. Washer
7	69305-19A00	. Pin
8	59303-13A00	. Boot
9	59306-13A00	. Spring
10	69151-07G00	. Bracket
11	59345-13A00	. Pin
12	59346-13A00	. Washer
13	59121-01A00	. Bleeder
14	59122-01A00	. Cap, Bleeder
15	69320-07G00	. Parking
16	69326-19A01	. Packing
17	69321-19A00	. Bolt
18	69322-19A00	. O Ring
19	69329-19A00	. Boot
20	69325-19A00	. Arm
21	69327-19A00	. Bolt, Adjust
22	69323-19A00	. Nut
23	69328-19A00	. Spring
24	69100-07810	Pad Set
25	09103-08156	Bolt

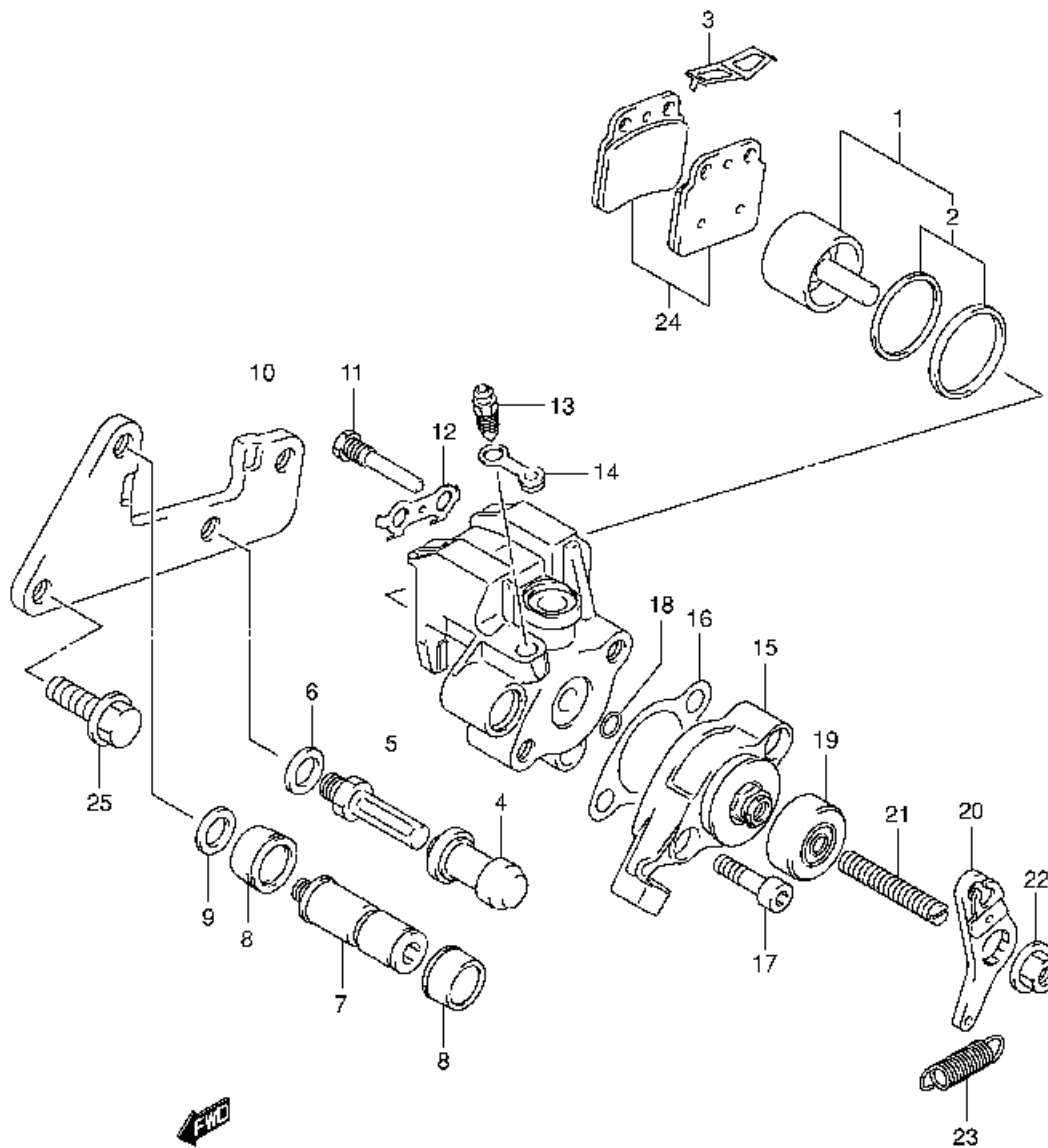 


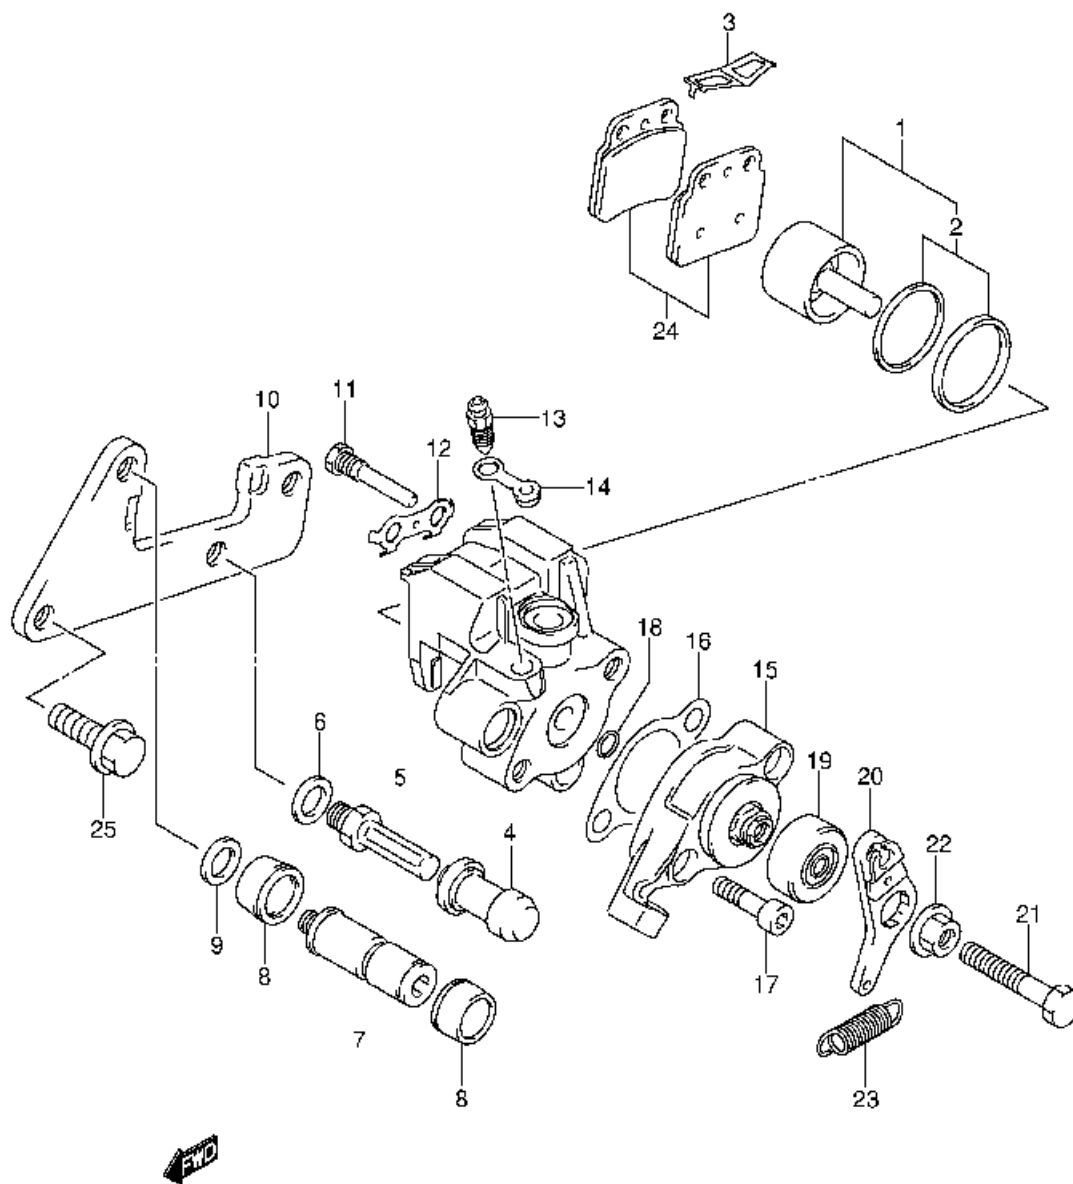 

Ref No	Part No	Description
	69100-07G10-999	Caliper Assy, Rear
1	69100-19850	. Piston Set
2	69100-13820	.. Seal Set, Piston
3	59315-13A00	. Spring, Pad
4	59386-13A00	. Boot
5	59382-13A00	. Bolt
6	59314-13A00	. Washer
7	69305-19A00	. Pin
8	59303-13A00	. Boot
9	59306-13A00	. Spring
10	69151-07G00	. Bracket
11	59345-13A00	. Pin
12	59346-13A00	. Washer
13	59121-01A00	. Bleeder
14	59122-01A00	. Cap, Bleeder
15	69320-07G00	. Parking
16	69326-19A01	. Packing
17	69321-19A00	. Bolt
18	69322-19A00	. O Ring
19	69329-19A00	. Boot
20	69325-19A00	. Arm
21	69127-07G00	. Bolt, Adjust
22	69323-19A00	. Nut
23	69328-19A00	. Spring
24	69100-07810	Pad Set
25	09103-08156	Bolt

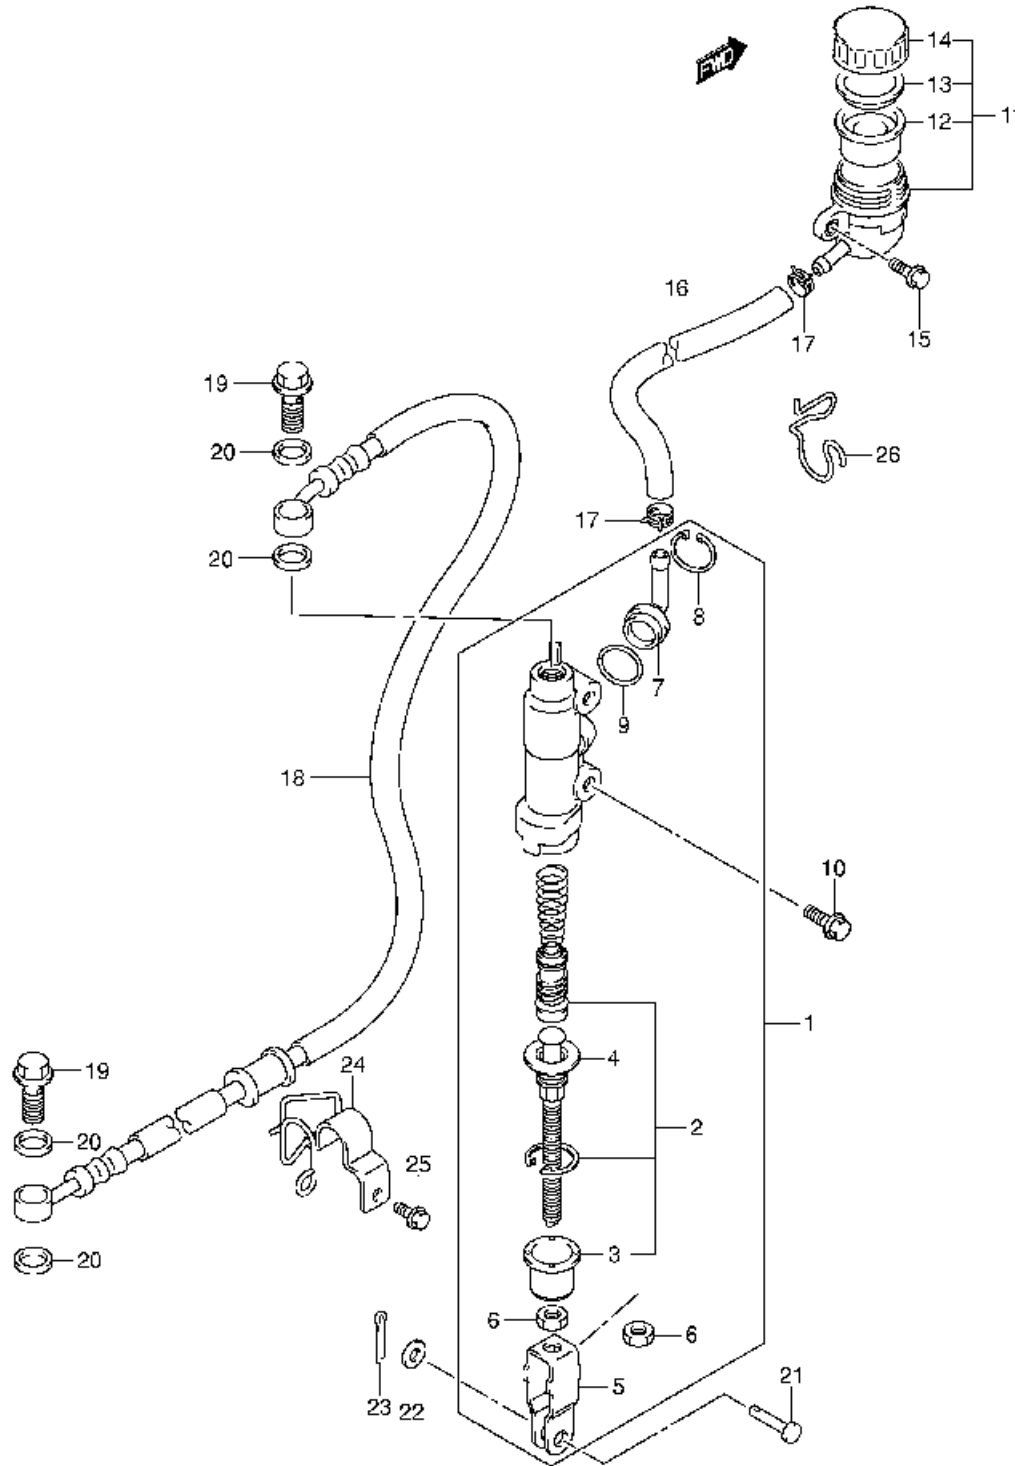 

Ref No	Part No	Description
1	69600-07G00	Cylinder Assy, Rear Master
2	69600-34820	• Piston/cup Set
3	69691-00A00	• • Boot
4	69670-07G00	• Rod, Push
5	69692-07G00	• Yoke
6	69693-05A00	• Nut
7	69672-00B20	• Connector
8	69674-00B20	• Circlip
9	69686-34200	• O Ring
10	09103-06202	Bolt
11	69740-03D00	Tank Assy, Rear Reservoir
12	69667-00B20	• Diaphragm
13	69668-00B20	• Plate
14	69669-03D00	• Cap
15	01547-06123	Bolt
16	69730-07G00	Hose, Rear Reservoir Tank
17	09401-12404	Clip
18	69480-07G00	Hose, Rear Brake
19	09360-10042	Bolt, Union, 10x1.25x22
20	09161-10009	Washer, 10x15x1.5
21	09200-08048	Pin
22	09160-08119	Washer
23	04111-20158	Pin, Cotter
24	69260-07G00	Clamp, Rr Brake Hose
25	01547-06103	Bolt
26	69738-07G00	Guide, Rr Rsvr Tank Hose

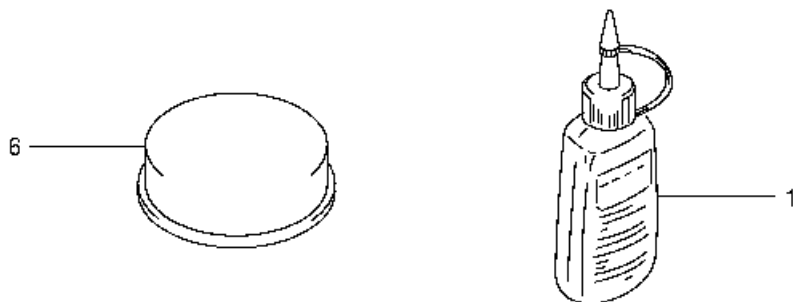 

Ref No	Part No	Description
1	99104-32030	Thread Lock, Super (1363a)
1	99000-32050	Thread Lock, Super (1342)
1	99000-32100	Thread Lock, Super (1305)
1	99104-32020	Thread Lock, Super (1361a)
1	99000-32130	Thread Lock, Super (1360)
2	99000-32040	Thread Lock Cement
3	99000-31140	Suzuki Bond (1207b)(black)
3	99000-31110	Suzuki Bond (1215)
4	99000-25030	Suzuki Super Grease
5	99000-25140	Suzuki Moly Paste
6	99000-25110	Suzuki Pbc Grease

